



9207 LAT PULLDOWN- DUAL PULLEY


CABLE INSTALLATION GUIDE

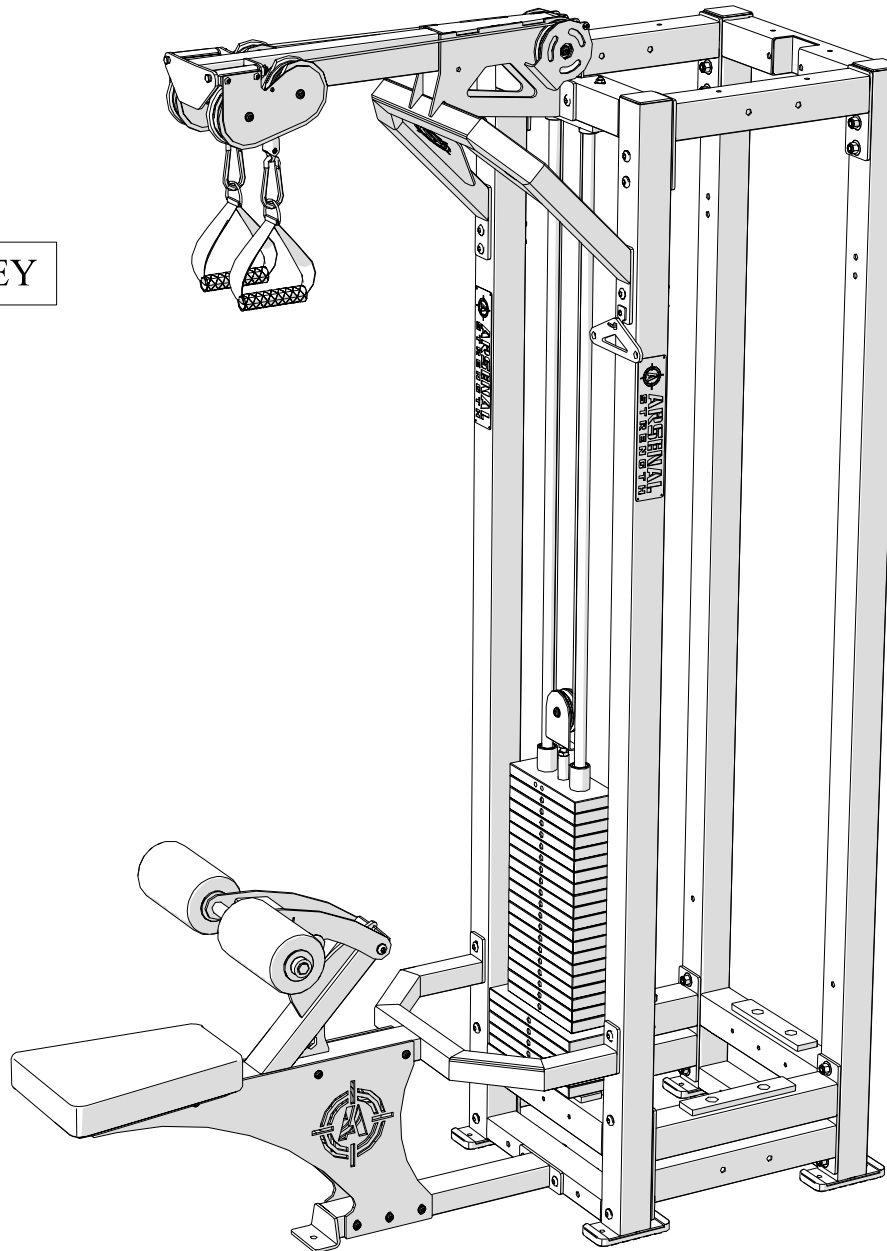


BEGIN BY ROUTING CABLE BETWEEN TWO UPPER PULLIES ON ONE SIDE OF UPPER SWIVEL PULLEY BRACKET

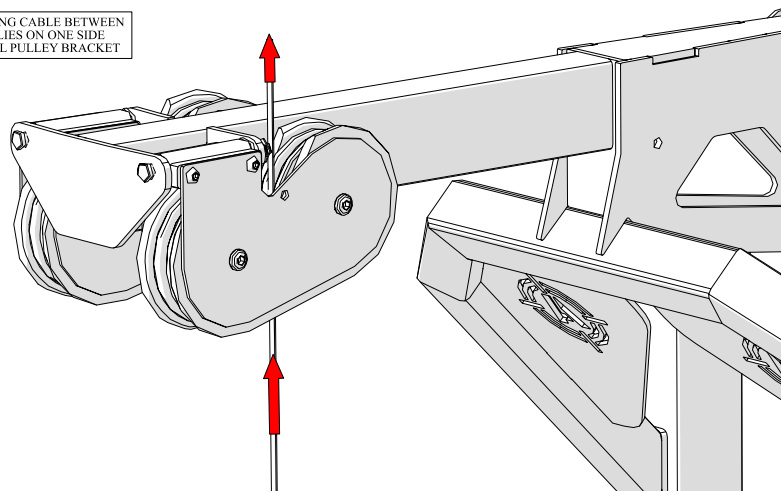


ROUTE CABLE OVER REAR PULLEY AND DOWN TOWARDS WEIGHT STACK

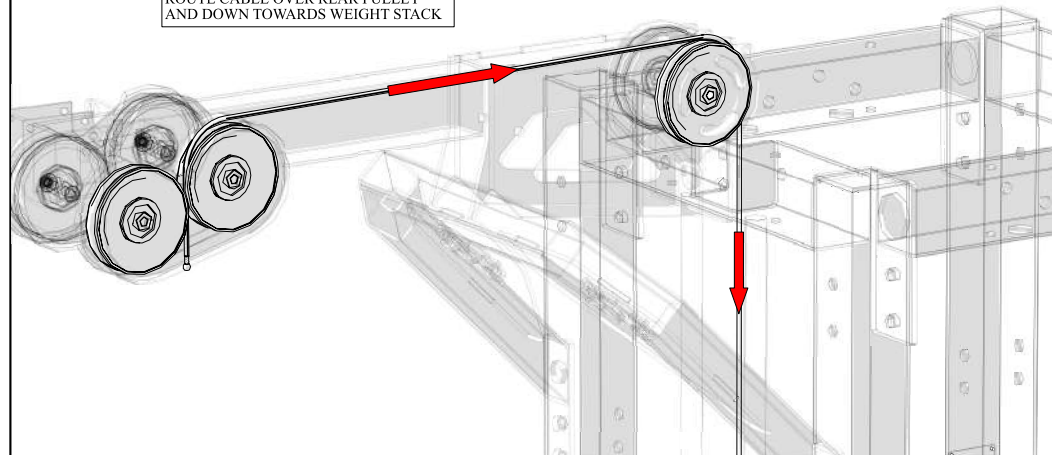


ROUTE CABLE UNDER WEIGHT STACK PULLEY AND BACK UP TOWARDS TOP OF MACHINE

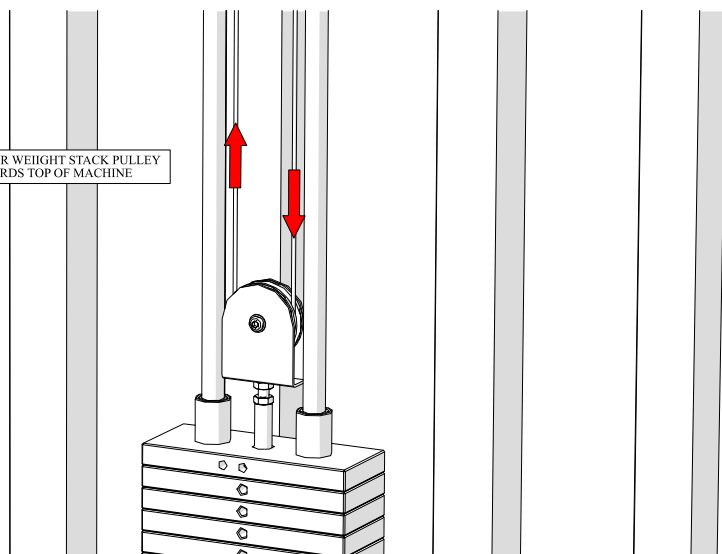


ROUTE CABLE OVER REAR PULLEY, FORWARD AND DOWN BETWEEN SWIVEL PULLEYS

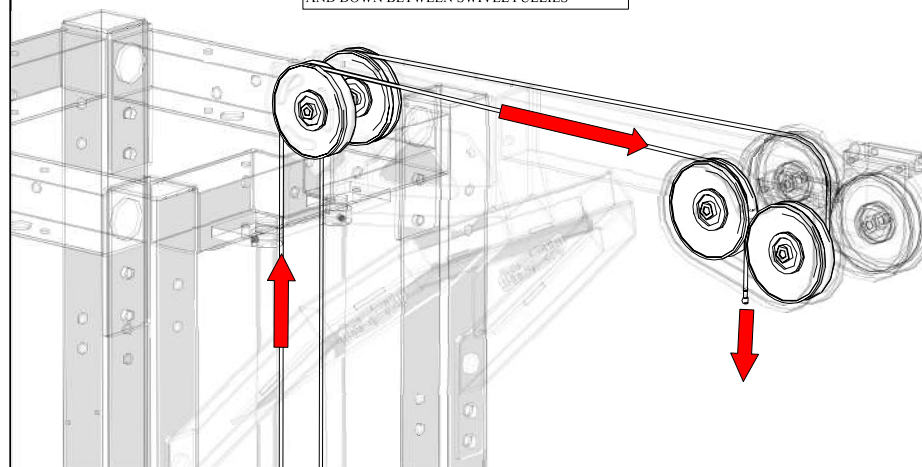

LOCATE CABLE STOPPER COMPONENTS

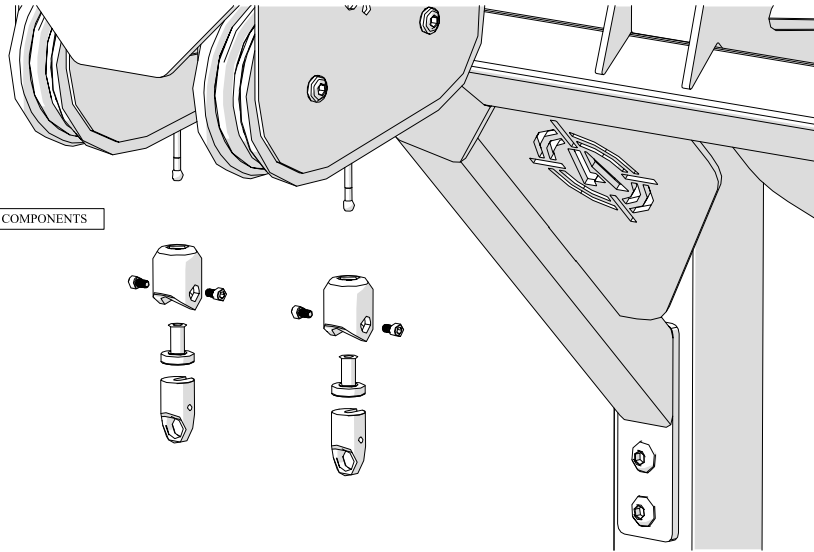


CABLE STOPPER INSTALLATION

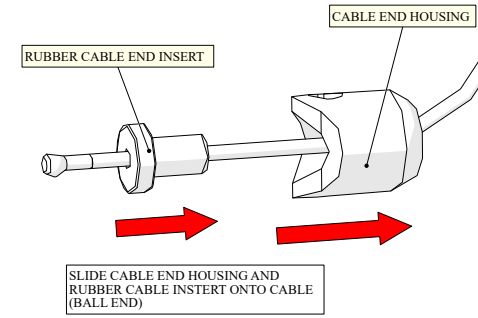


CABLE STOPPER INSTALLATION

PUSH CABLE END LINK ONTO CABLE BALL END

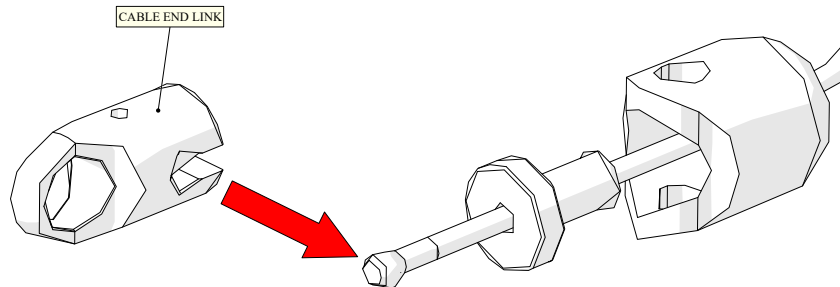



CABLE STOPPER INSTALLATION

SLIDE CABLE END HOUSING OVER RUBBER CABLE INSERT AND CABLE END LINK

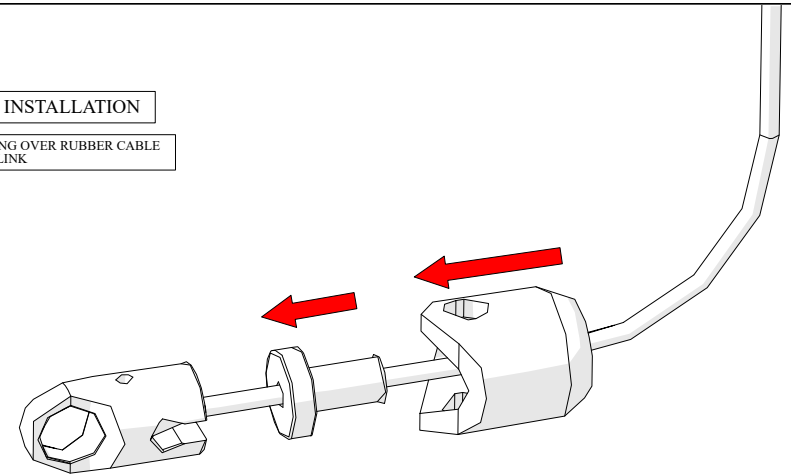


CABLE STOPPER INSTALLATION

SECURE CABLE END LINK AND HOUSING WITH
(QTY 2) 5MM X 8MM L SOCKET HEAD
CAP SCREWS

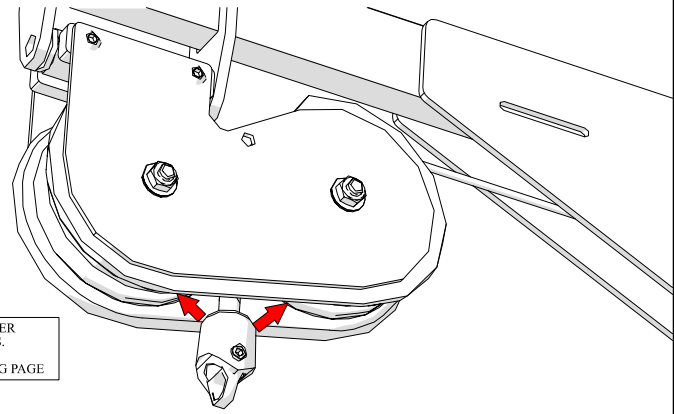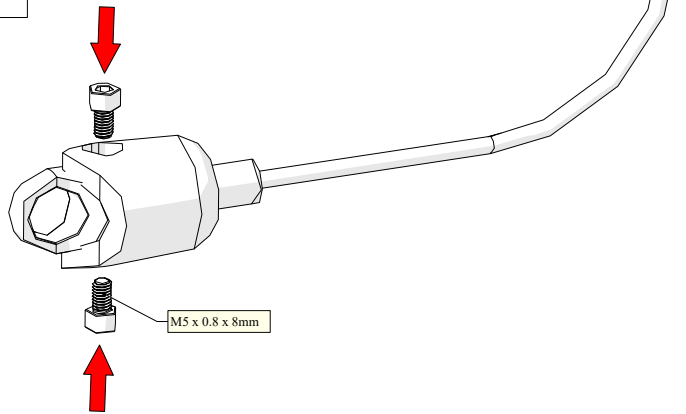


WHEN ADJUSTED CORRECTLY, CABLE STOPPER
SHOULD NOT MAKE CONTACT WITH PULLIES.
ADJUSTMENT INSTRUCTIONS ON FOLLOWING PAGE


IF NEEDED, CABLE TENSION ADJUSTMENTS
CAN BE MADE BY ADJUSTING THE THREAD
ENGAGEMENT OF THE WEIGHT STACK PULLEY.
BEGIN BY REMOVING PULLEY FROM BRACKET

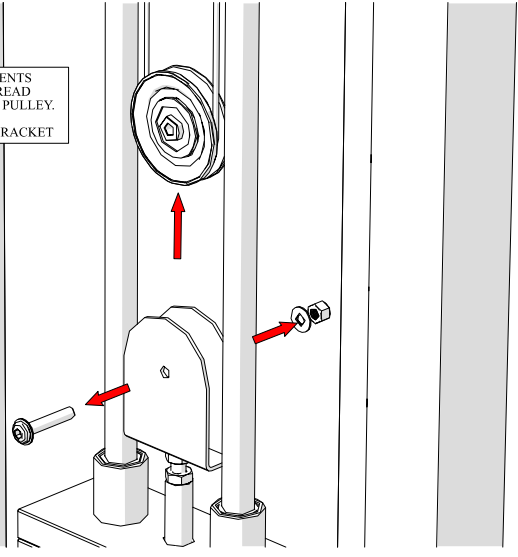

LOOSEN LOCK NUT AND TURN PULLEY BRACKET
SCREW UP / DOWN TO ADJUST CABLE TENSION

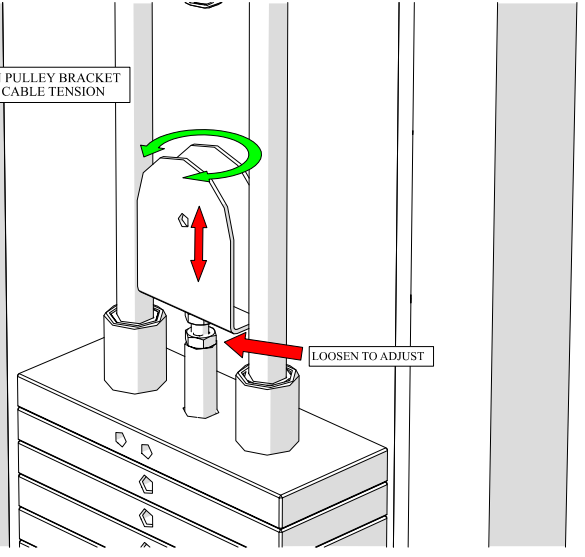

REPLACE PULLEY AND HARDWARE WHEN
CORRECT TENSION IS ACHIEVED

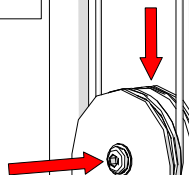

MAKE SURE ALL HARDWARE IS TIGHT
AND TEST ALL FUNCTIONS BEFORE
OPERATING EQUIPMENT

