



8003 HORIZONTAL LEG PRESS

FINAL ASSEMBLY INSTRUCTIONS

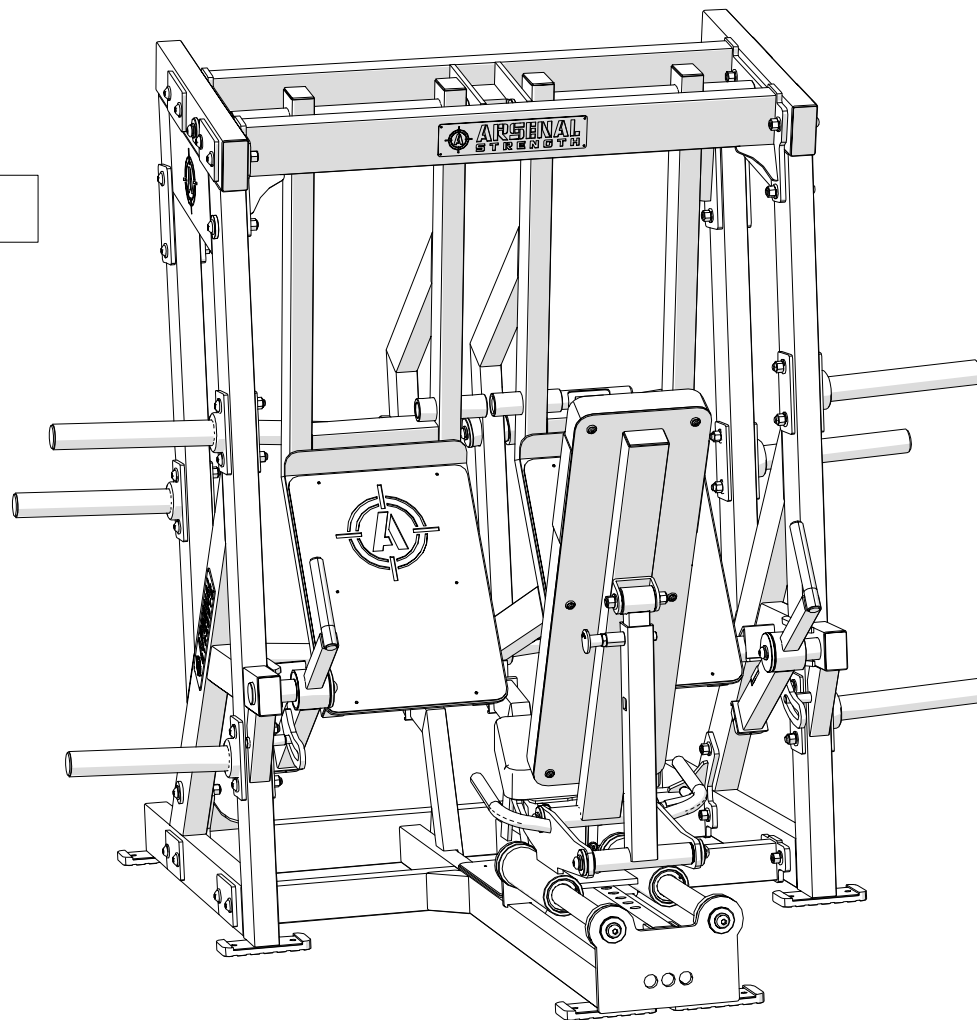


INSTALL RUBBER FEET ON
FRAME PADS (OPTIONAL)

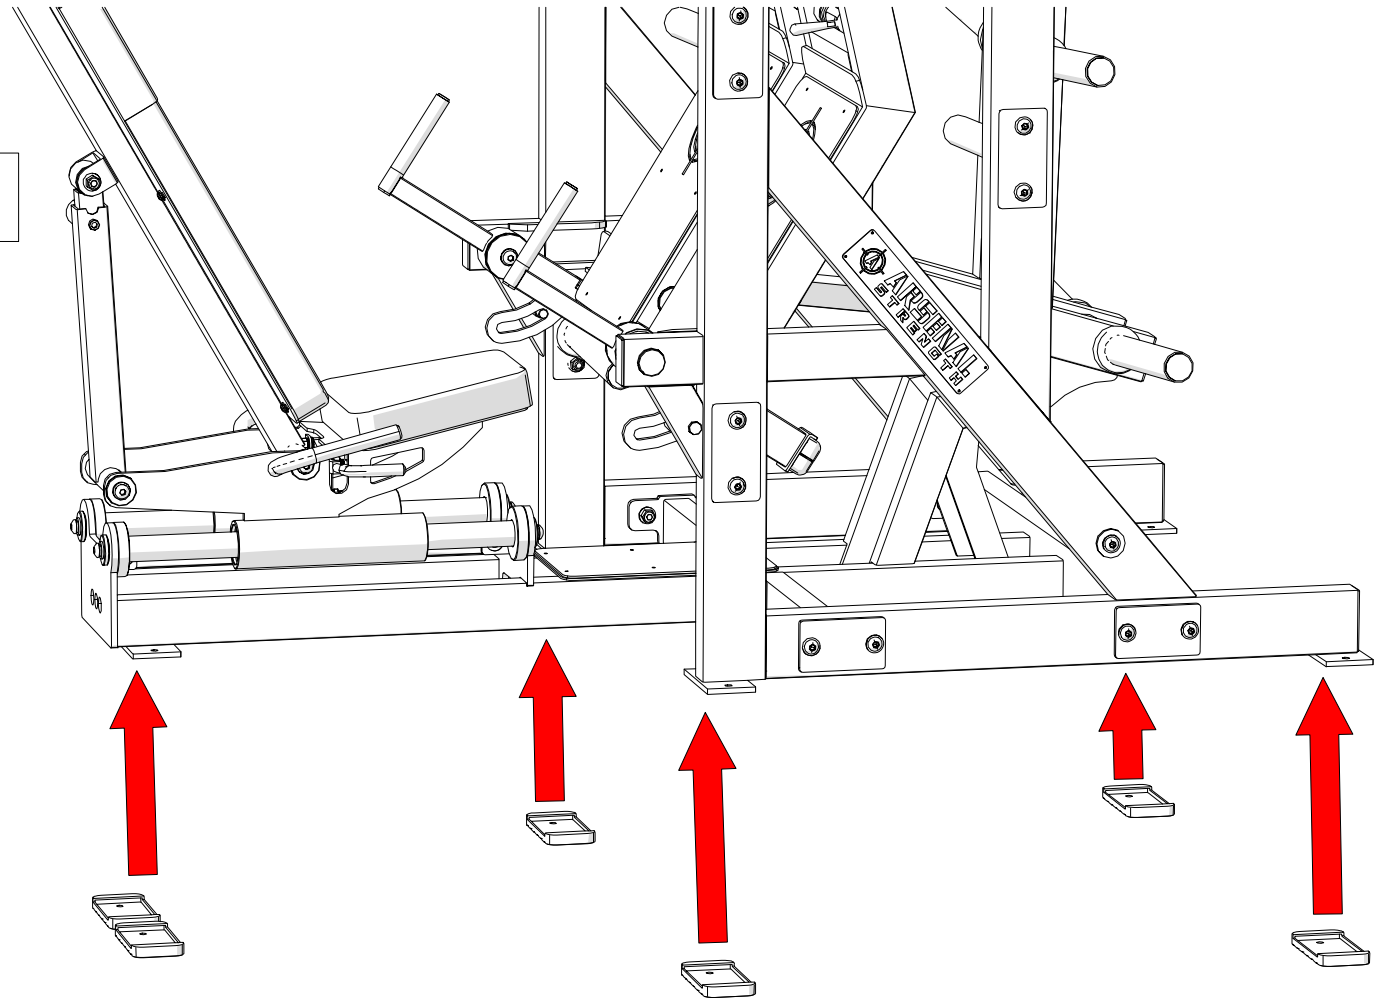

WEIGHT STORAGE HORNS HAVE BEEN MOUNTED
BACKWARDS FOR SHIPPING.



REMOVE (QTY 2) 1/2"-13 X 3.5" BUTTON HEAD SCREWS,
WASHERS, NYLOCK NUTS, AND BACKING PLATES.

DO THIS FOR ALL 6 WEIGHT STORAGE HORNS

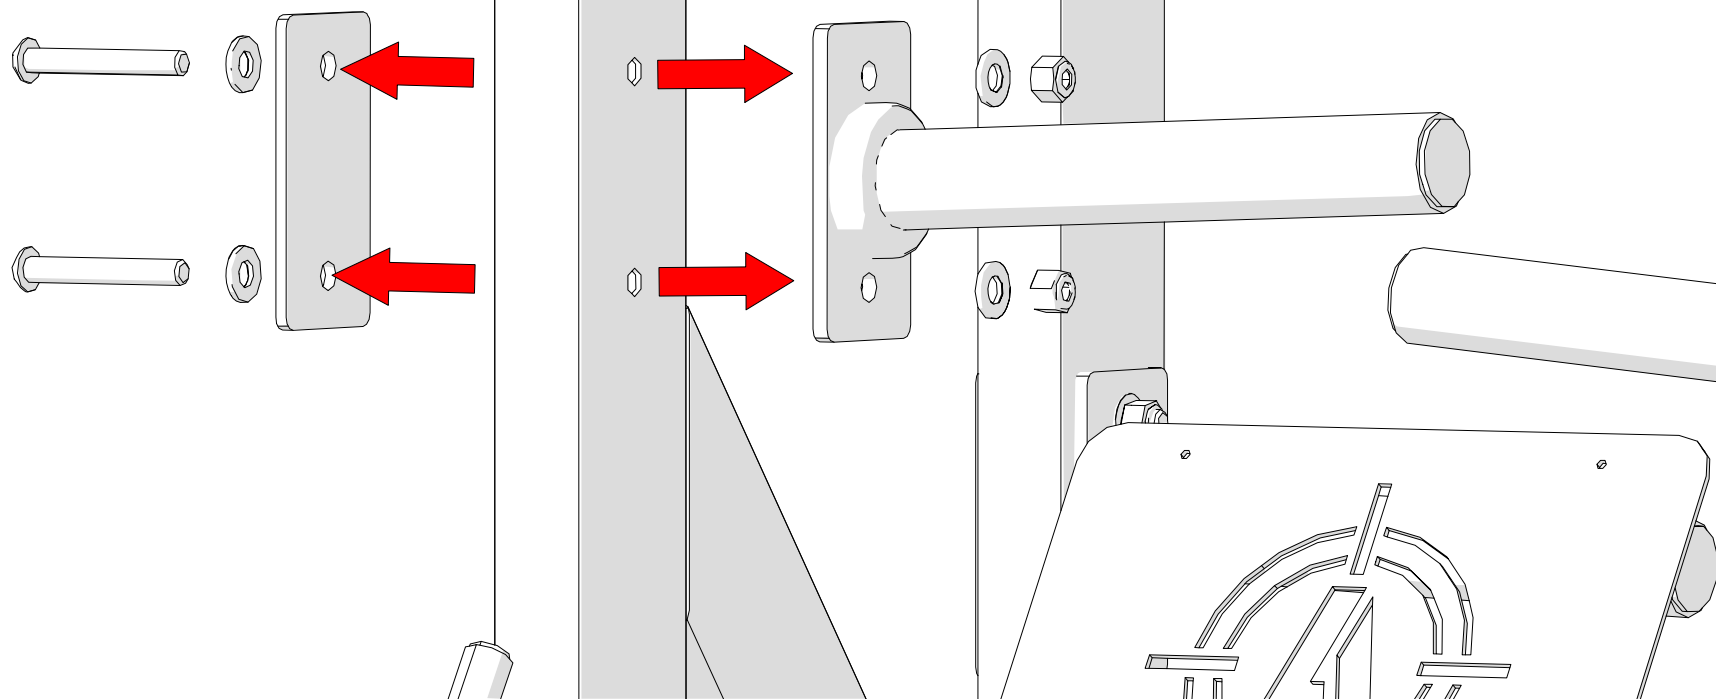


SWAP WEIGHT HORN AND BACKING PLATE
TO OPPOSITE SIDES OF FRAME TUBE AND
SECURE WITH HARDWARE REMOVED PREVIOUSLY.

NOTE:
WEIGHT HORN WILL HAVE AN UPWARD TILT WHEN
INSTALLED CORRECTLY. BE CAREFUL NOT TO
INSTALL UPSIDE-DOWN

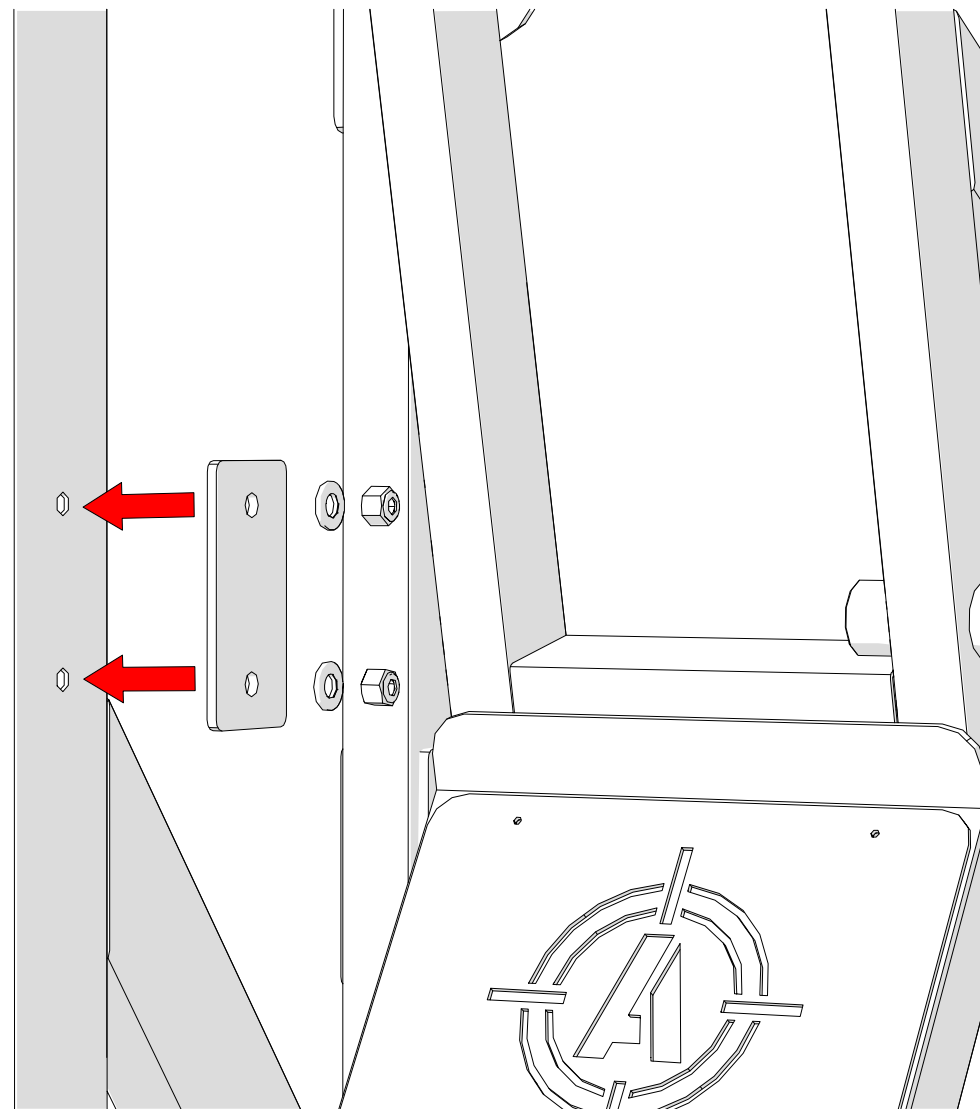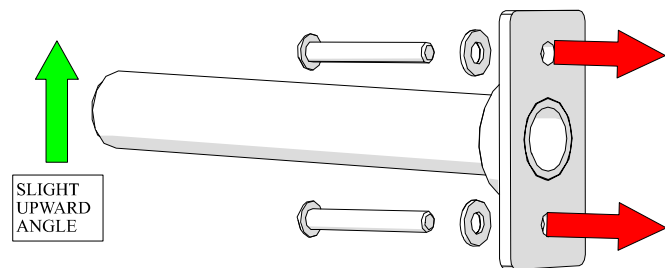

REPEAT PROCESS FOR FIVE REMAINING
WEIGHT STORAGE HORNS

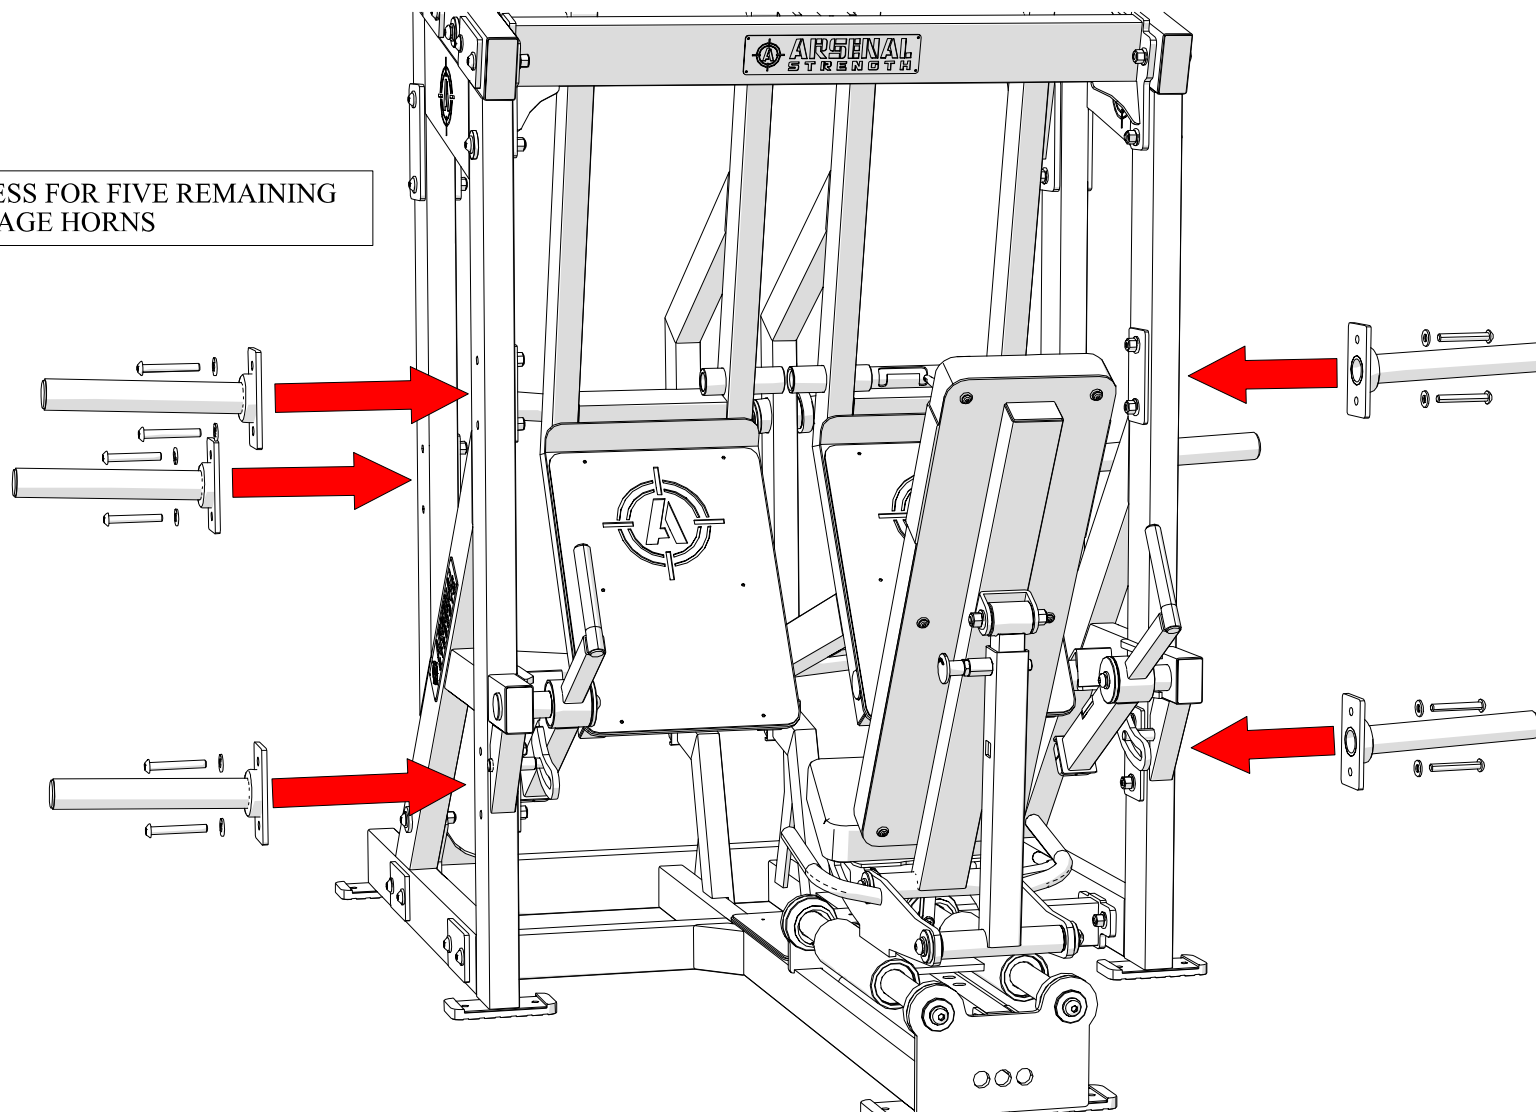

MAKE SURE ALL HARDWARE IS TIGHT AND
TEST ALL MACHINE FUNCTIONS BEFORE
OPERATING EQUIPMENT

