



9032 RELOADED ISO LAT PULLDOWN


FINAL ASSEMBLY GUIDE

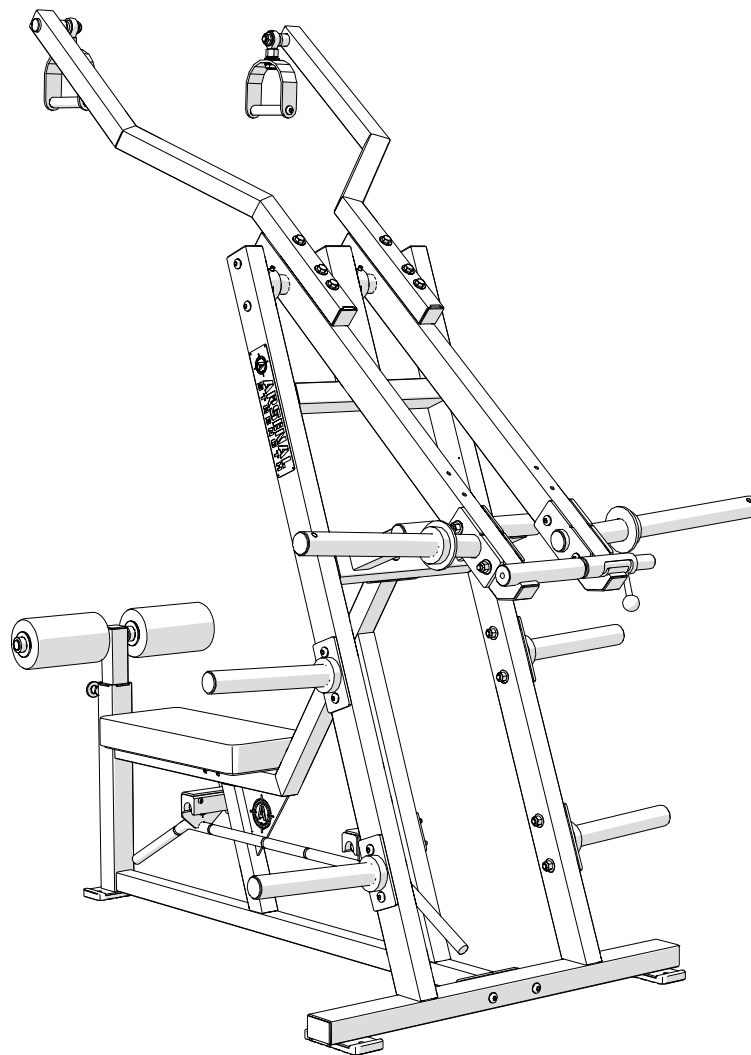


UNWRAP AND SET ASIDE ALL
PARTS NOT ATTACHED TO
MACHINE

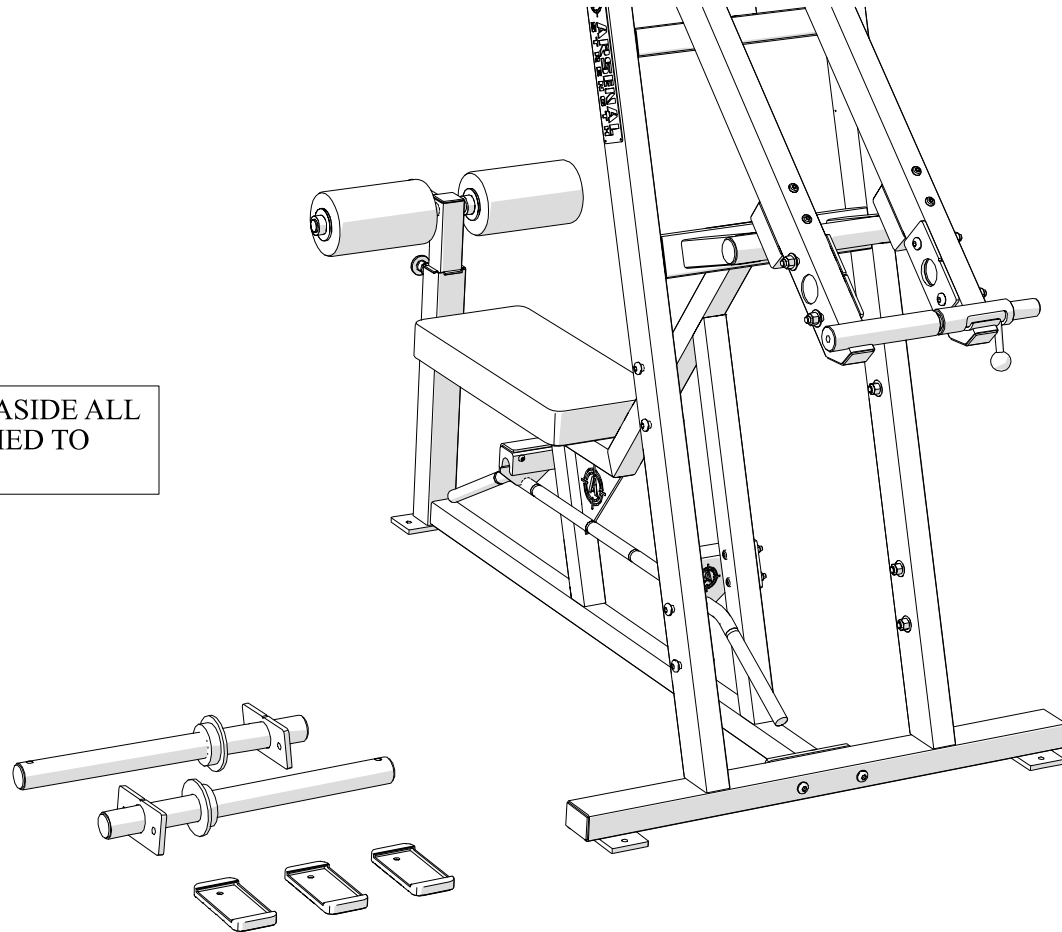

INSTALL RUBBER FEET ON METAL
FRAME PADS (IF DESIRED)

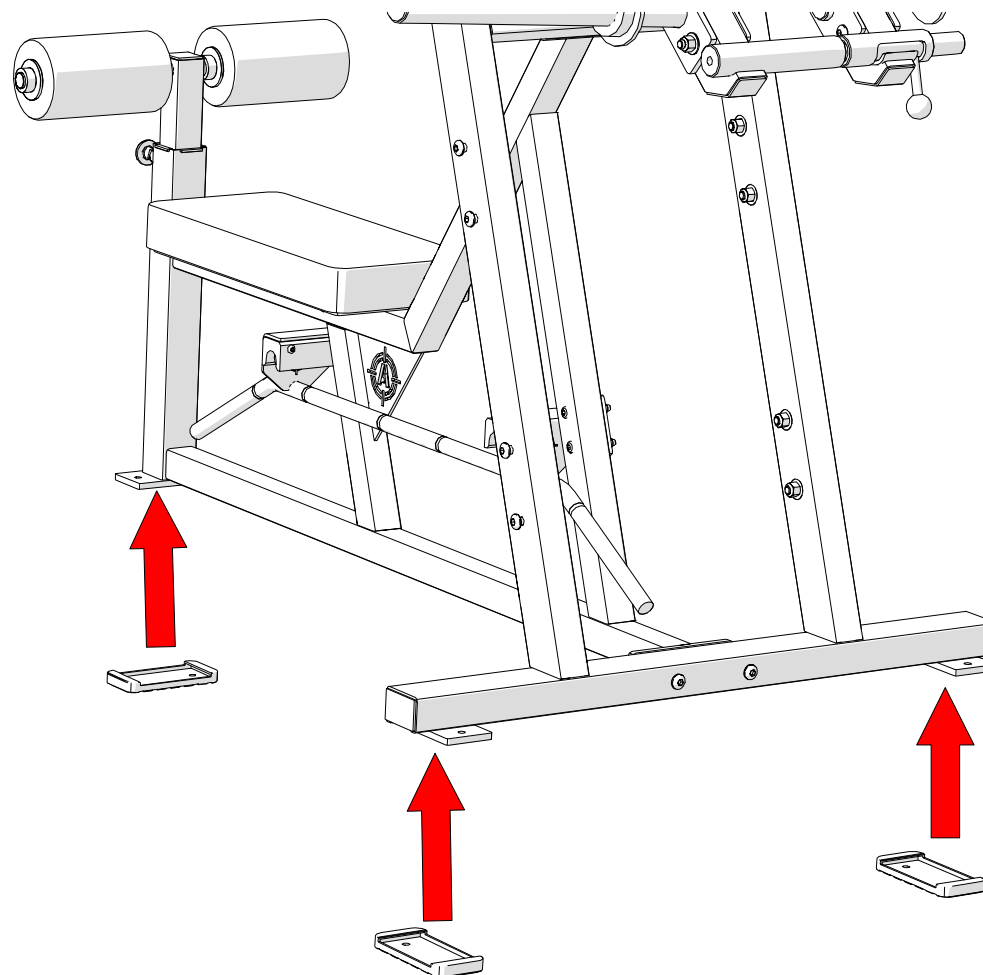


REMOVE (QTY 2) 1/2"-13
NYLOCK NUTS AND WASHERS
SECURING BACKING PLATE
FROM WORK ARM

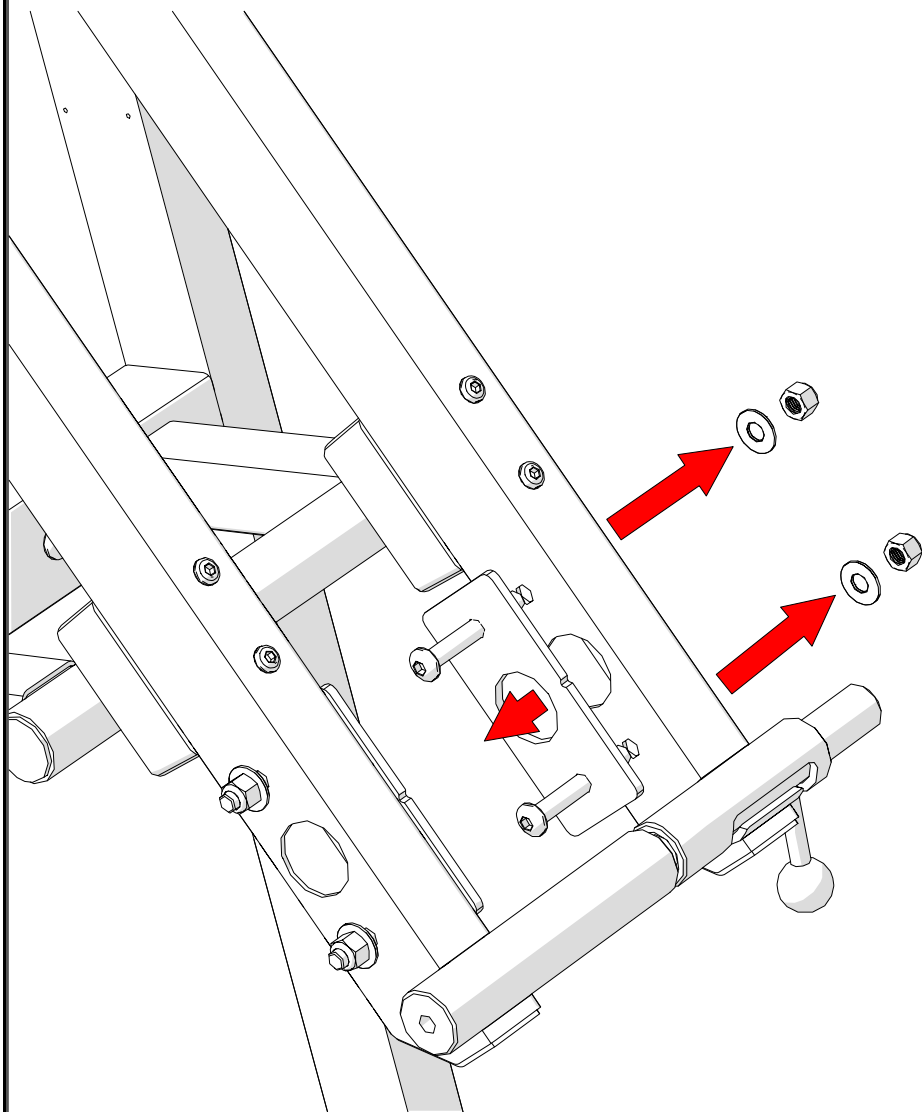


POSITION WEIGHT HORN AS SHOWN
AND SECURE USING NYLOCK NUTS
AND WASHERS PREVIOUSLY
REMOVED.

NOTE- THERE ARE NOTCHES IN WEIGHT
HORN AND BACKING PLATE FLANGES.
THESE NOTCHES MUST BE ALIGNED
FACING UP.

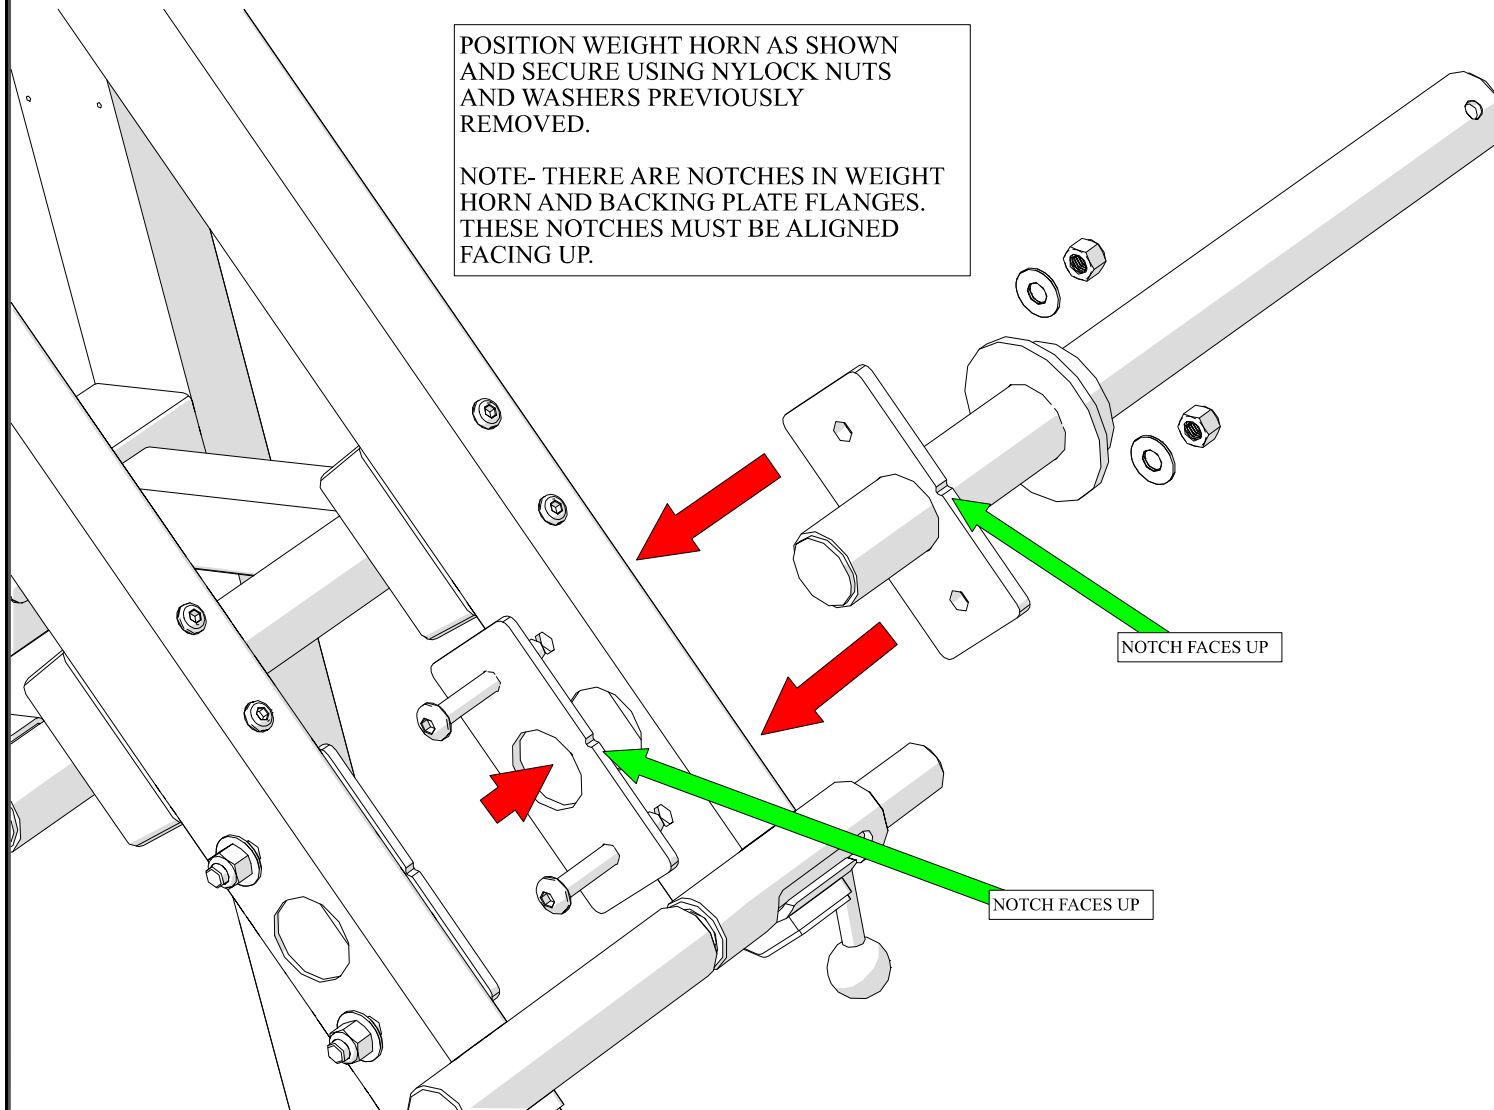

REPEAT WEIGHT HORN INSTALLATION
ON OPPOSITE SIDE

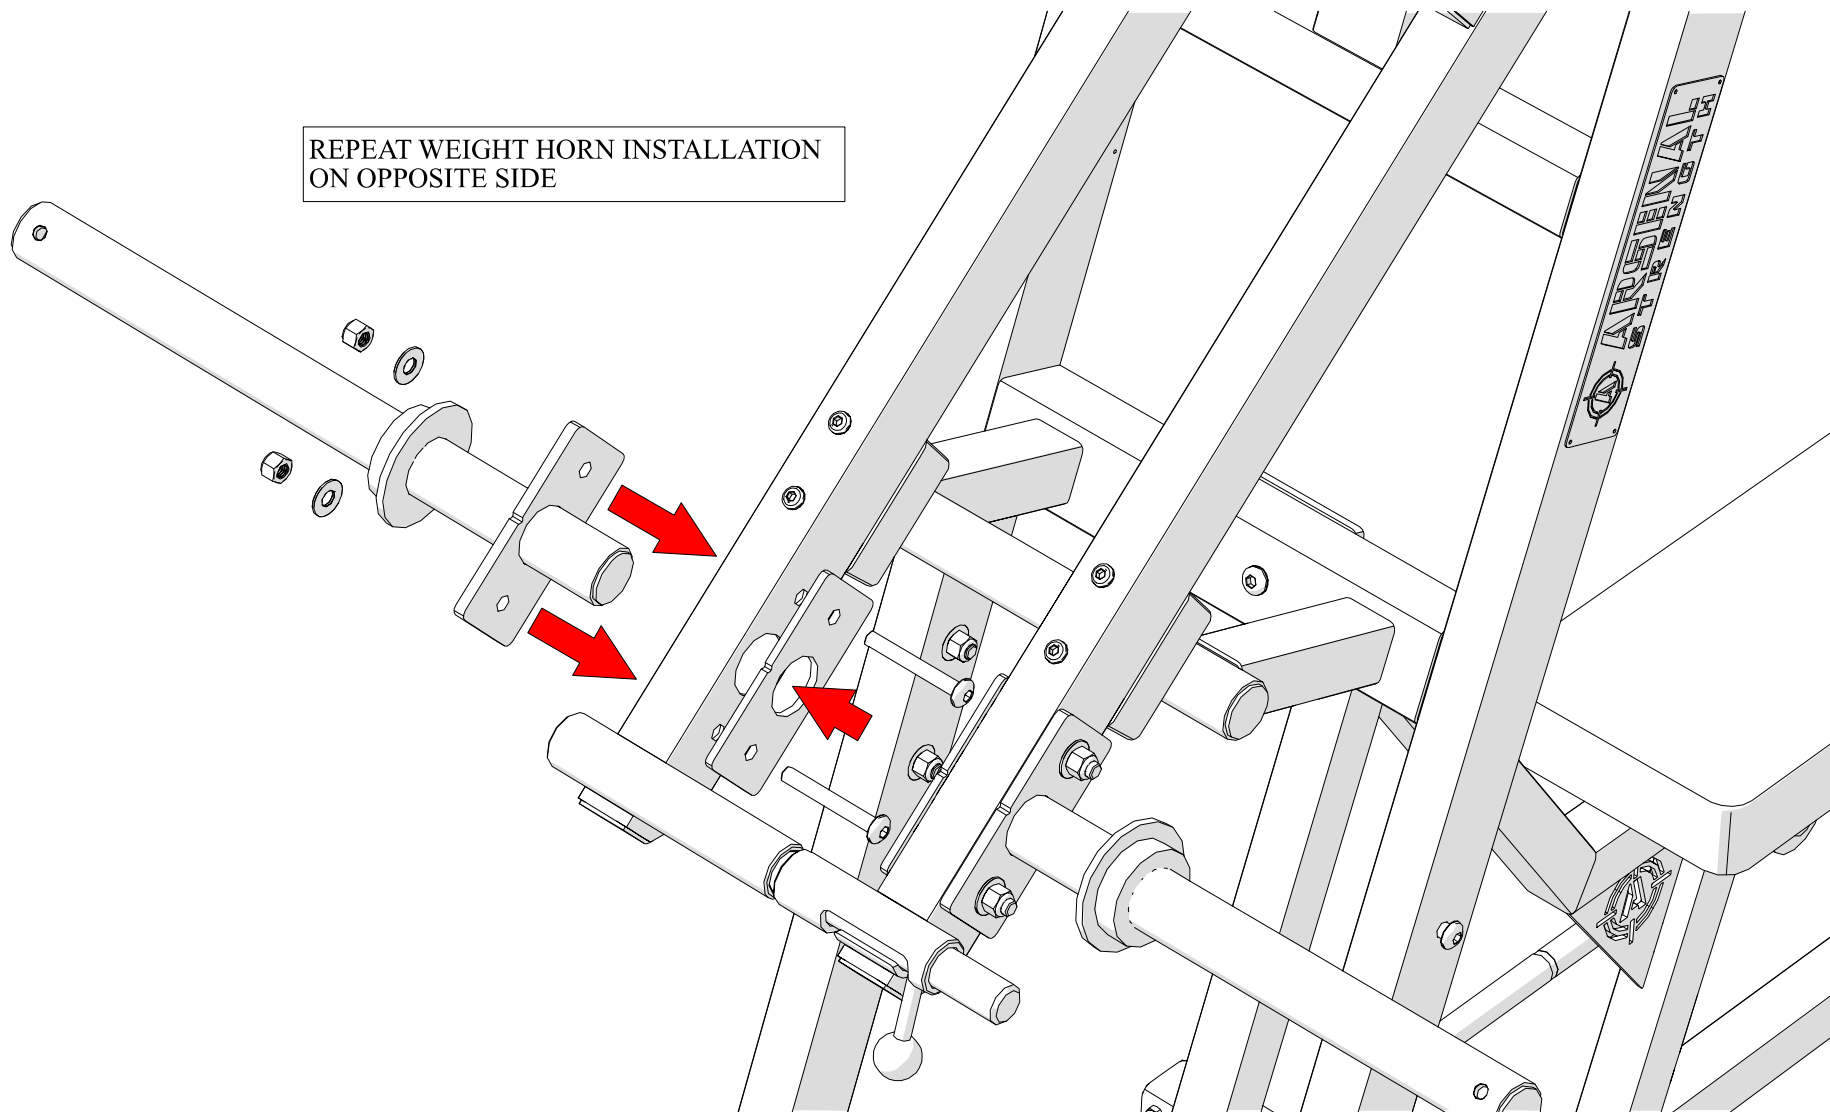

MAKE SURE ALL HARDWARE IS TIGHT AND
TEST ALL FUNCTIONS BEFORE OPERATING
EQUIPMENT

