

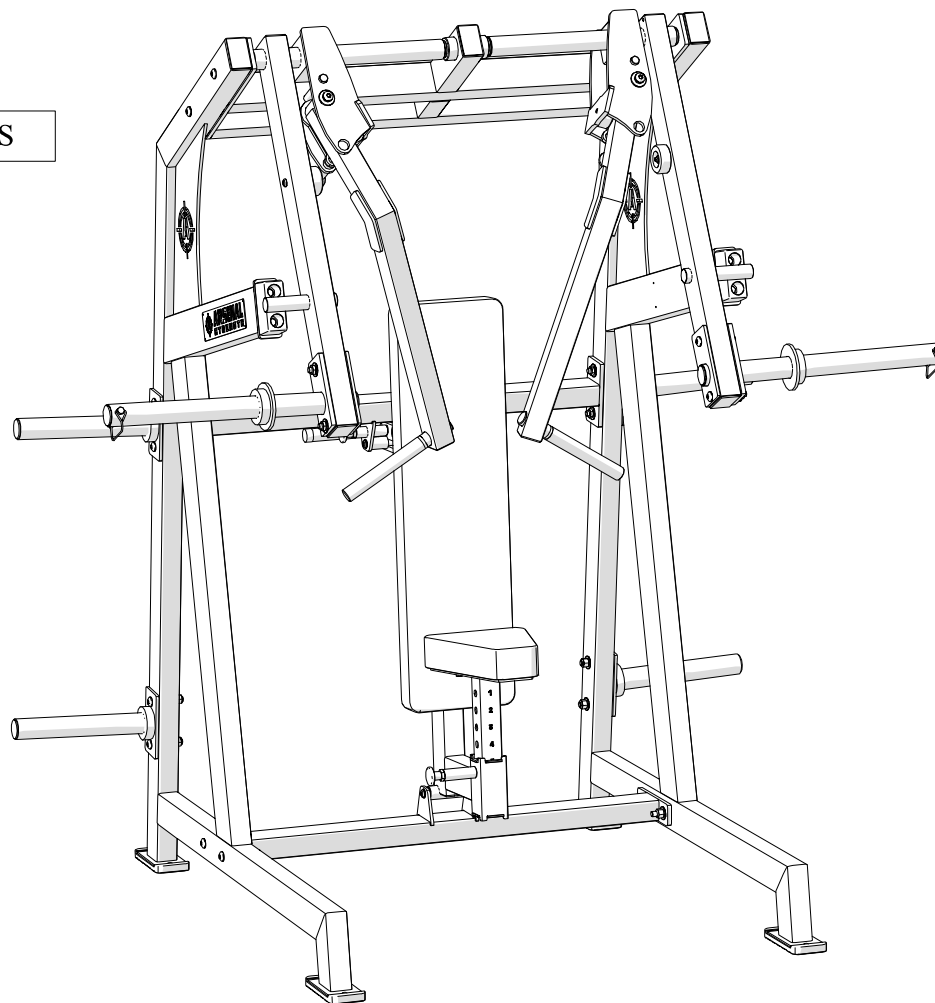


9010 RELOADED VERTICAL CHEST PRESS


FINAL ASSEMBLY GUIDE

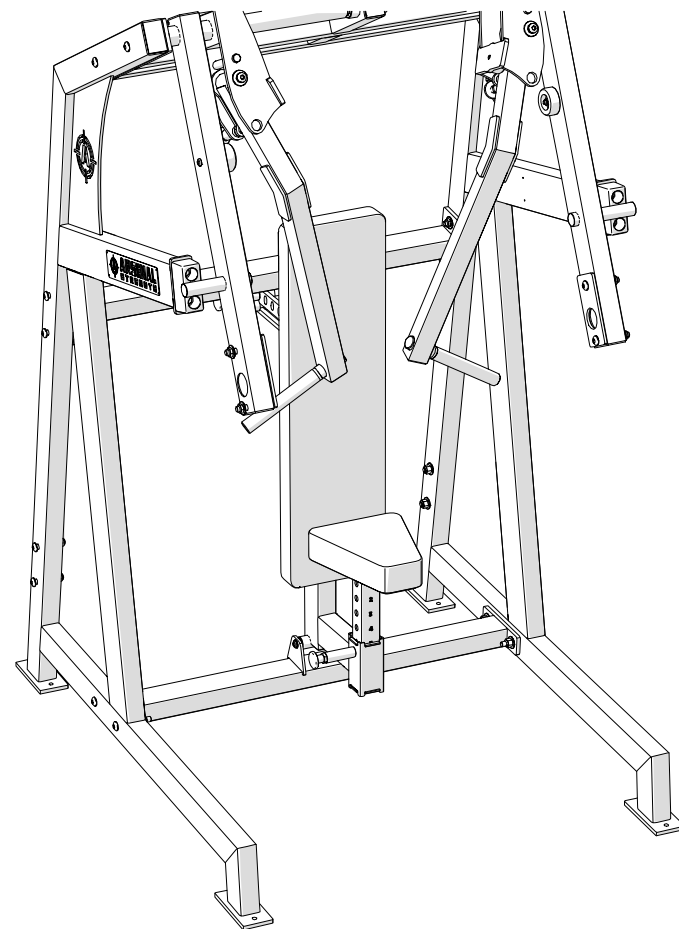


UNWRAP AND SET ASIDE ALL PARTS
NOT ATTACHED TO MACHINE

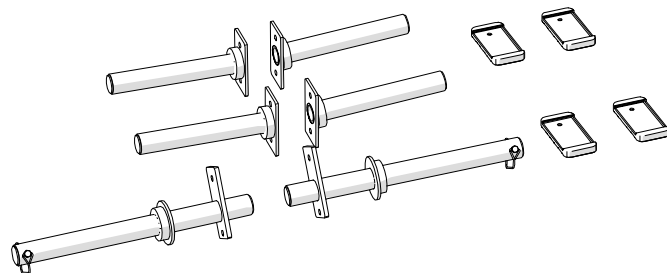


INSTALL RUBBER FEET ON
FRAME PADS (IF DESIRED)

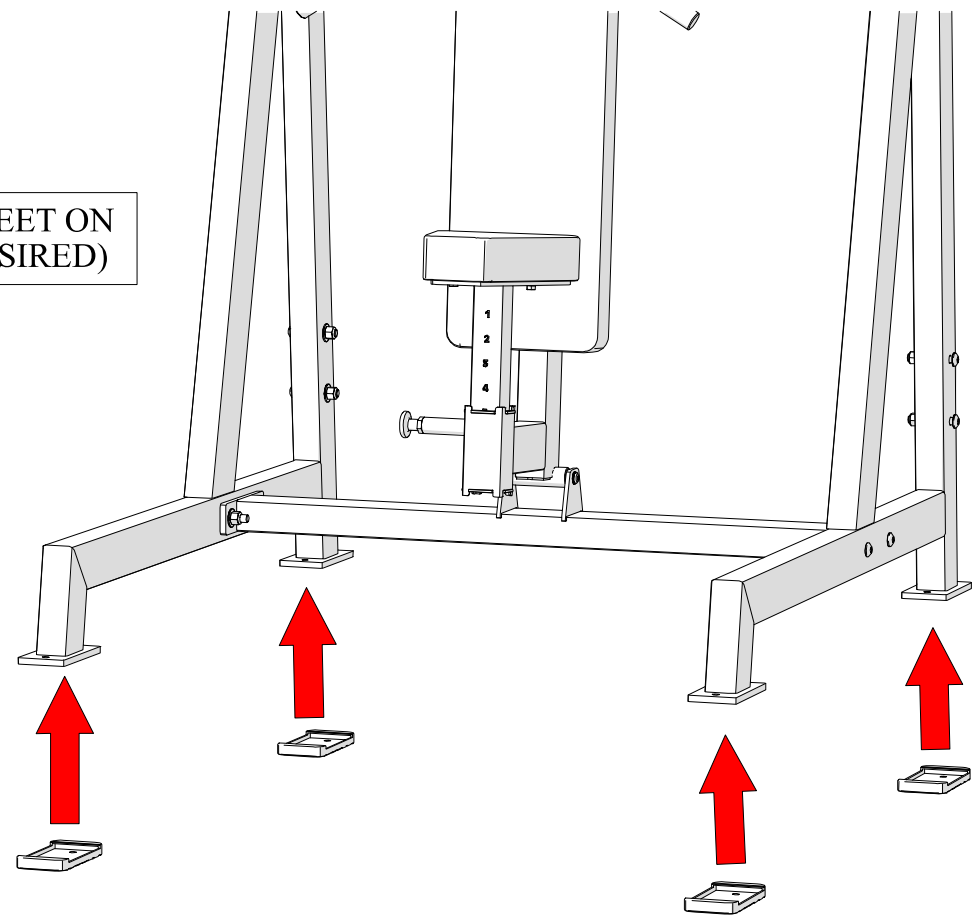


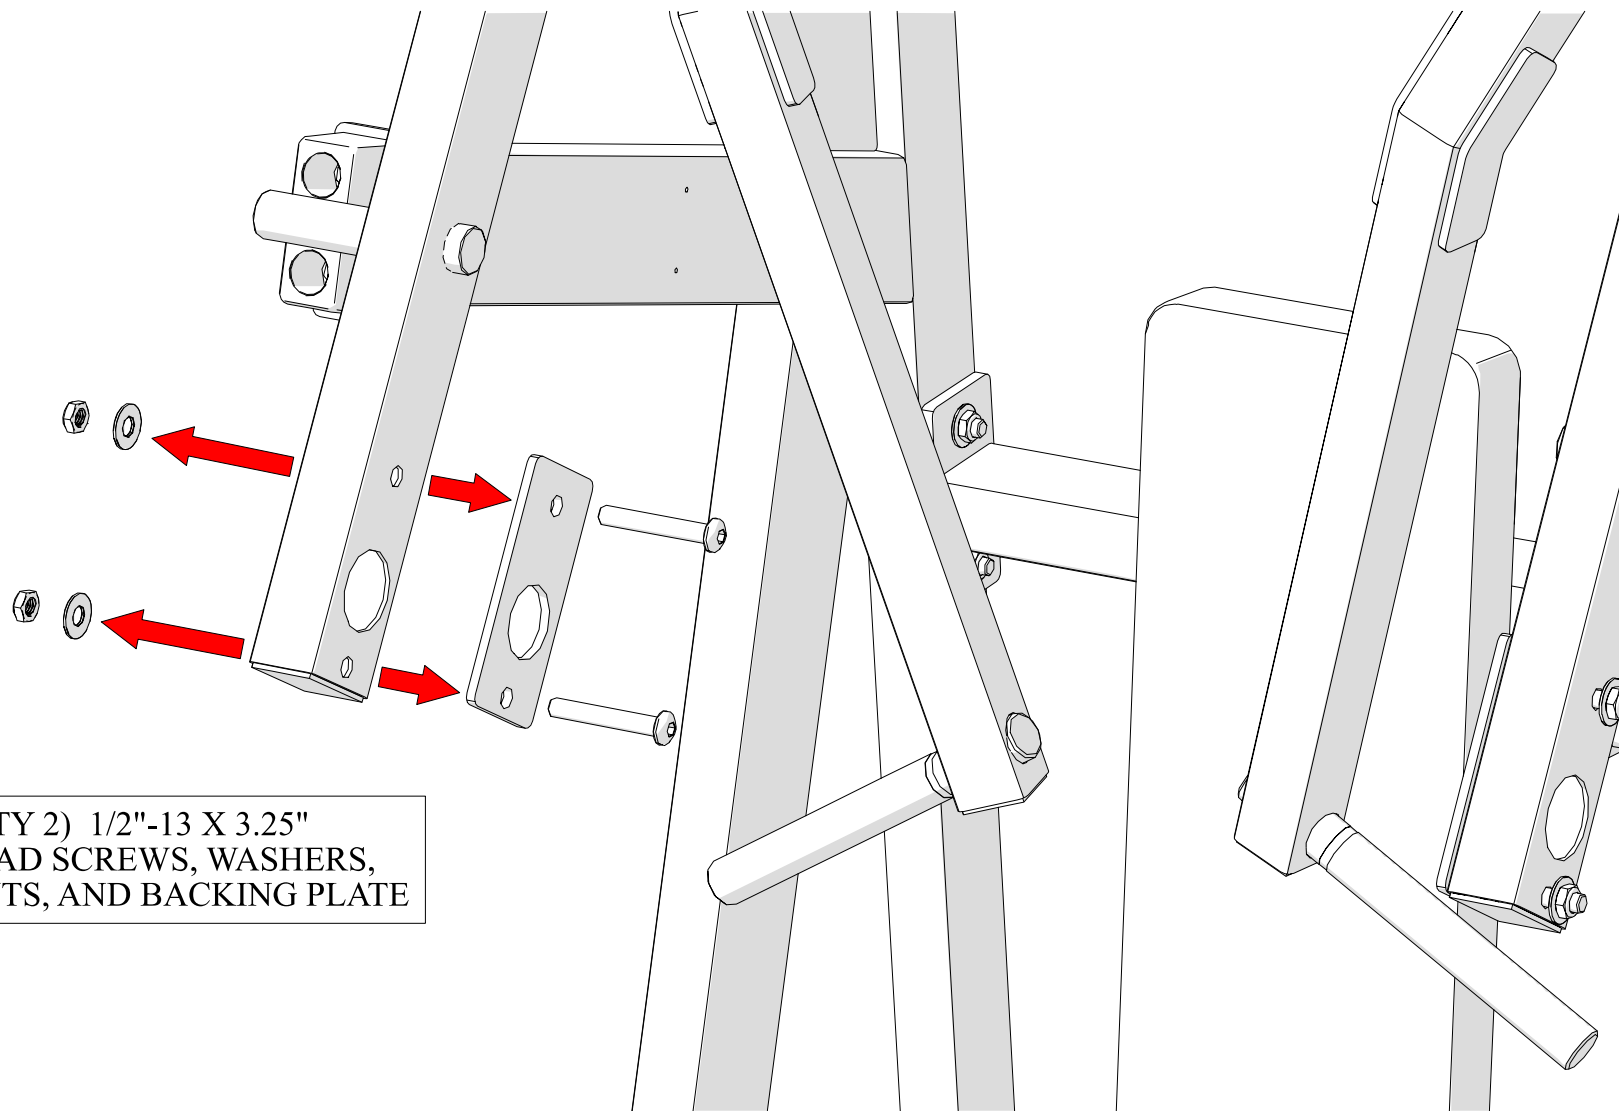

REMOVE (QTY 2) 1/2"-13 X 3.25"
BUTTON HEAD SCREWS, WASHERS,
NYLOCK NUTS, AND BACKING PLATE

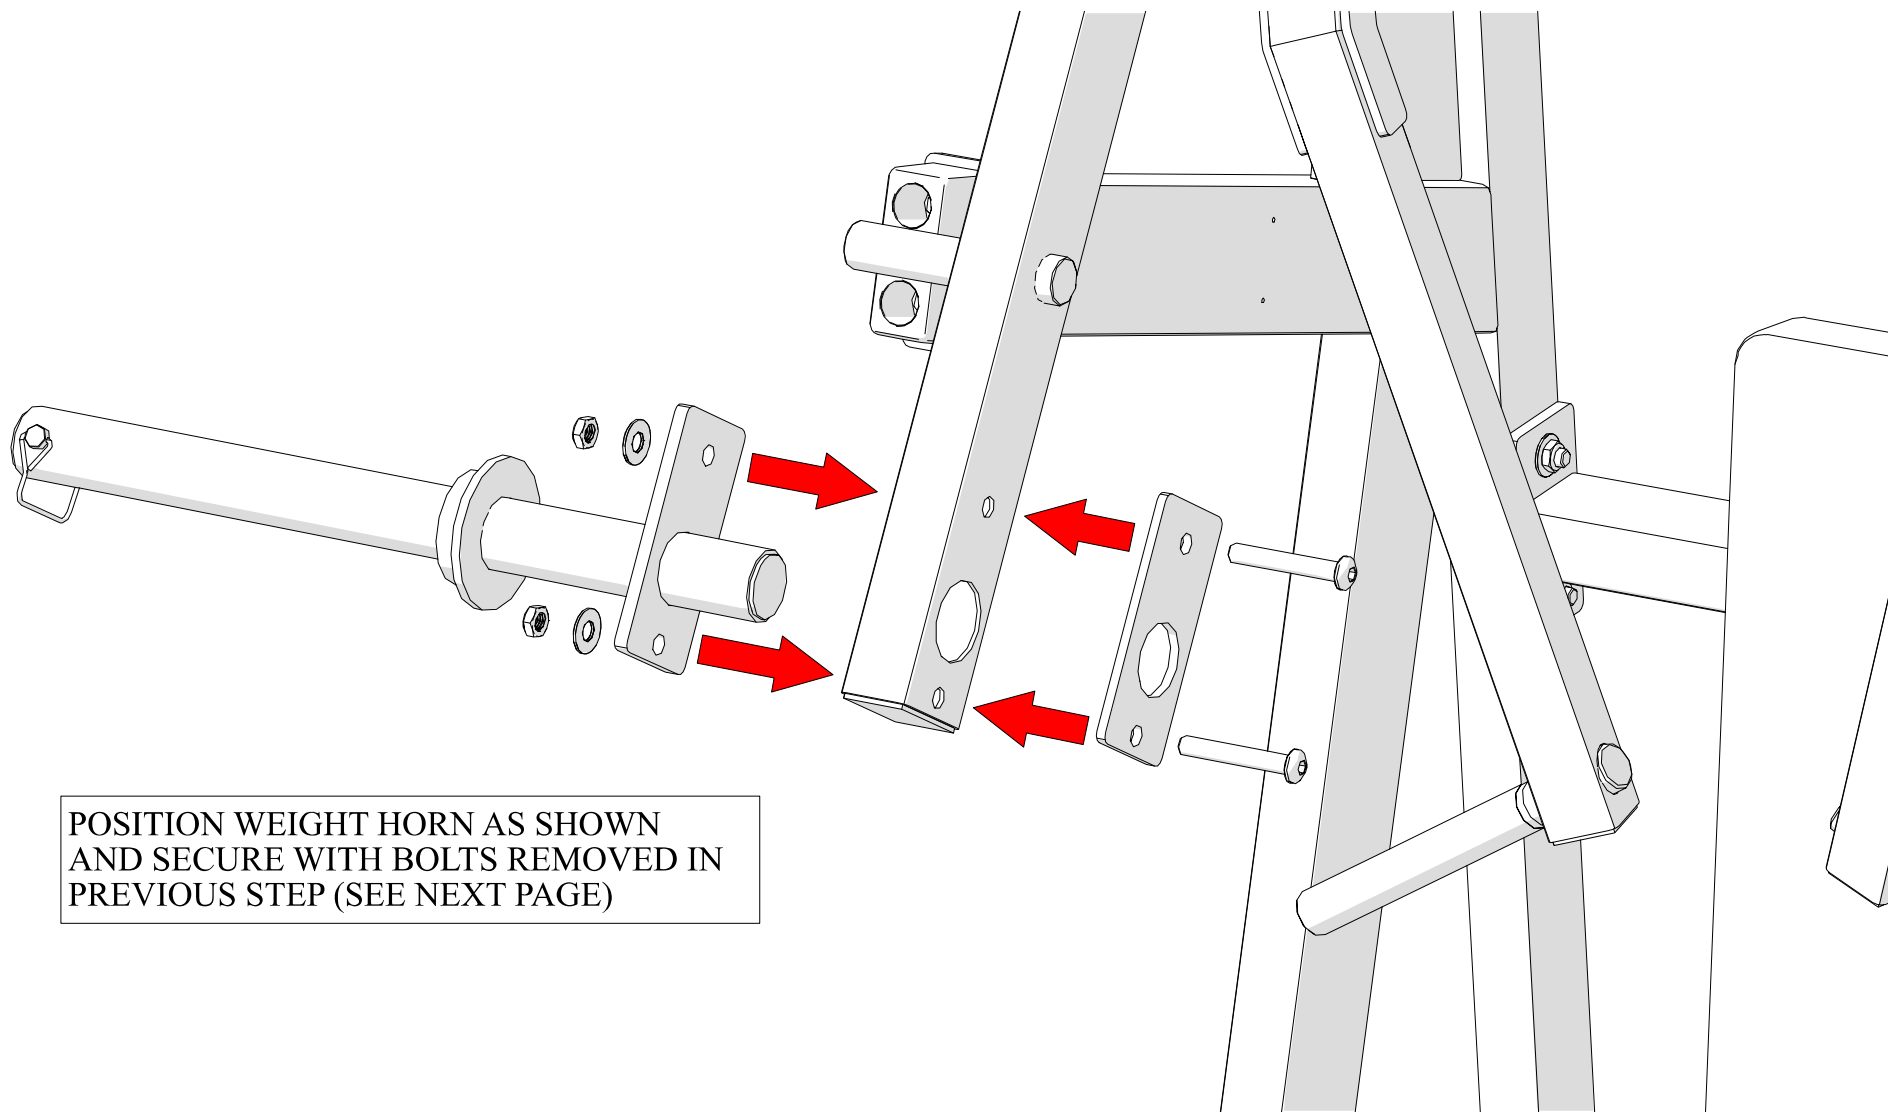


POSITION WEIGHT HORN AS SHOWN
AND SECURE WITH BOLTS REMOVED IN
PREVIOUS STEP (SEE NEXT PAGE)

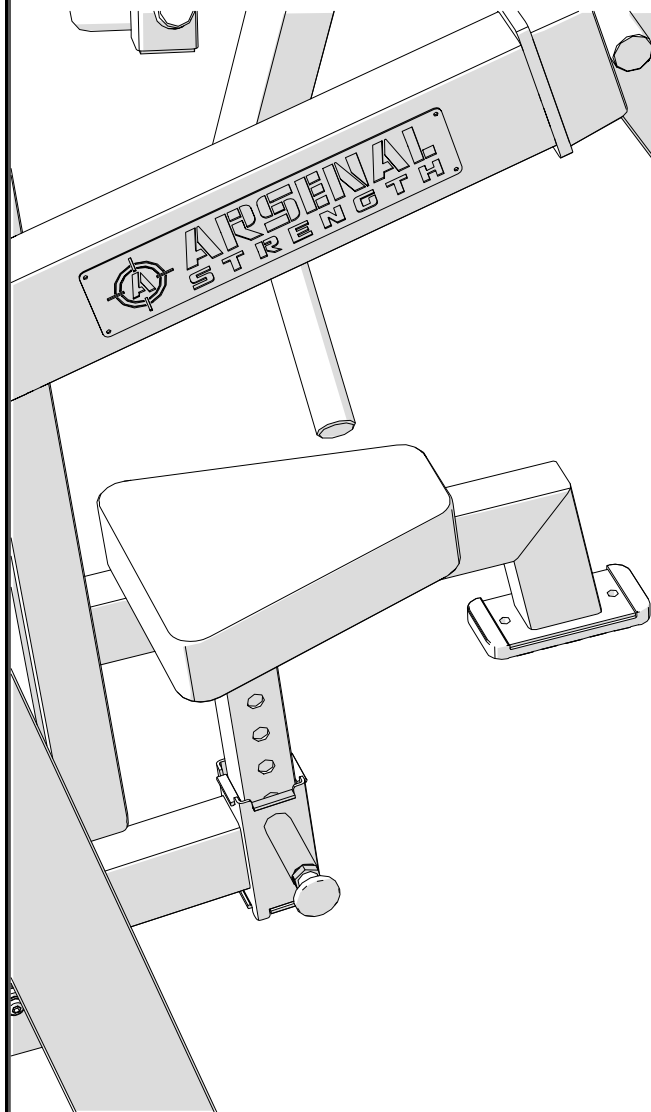



NOTE: WEIGHT HORN WILL HAVE A SLIGHT FORWARD CANT WHEN INSTALLED CORRECTLY- TAKE CAUTION NOT TO INSTALL WEIGHT HORN MEANT FOR OPPOSITE SIDE

SLIGHT FORWARD ANGLE



REPEAT PROCESS ON
OPPOSITE SIDE

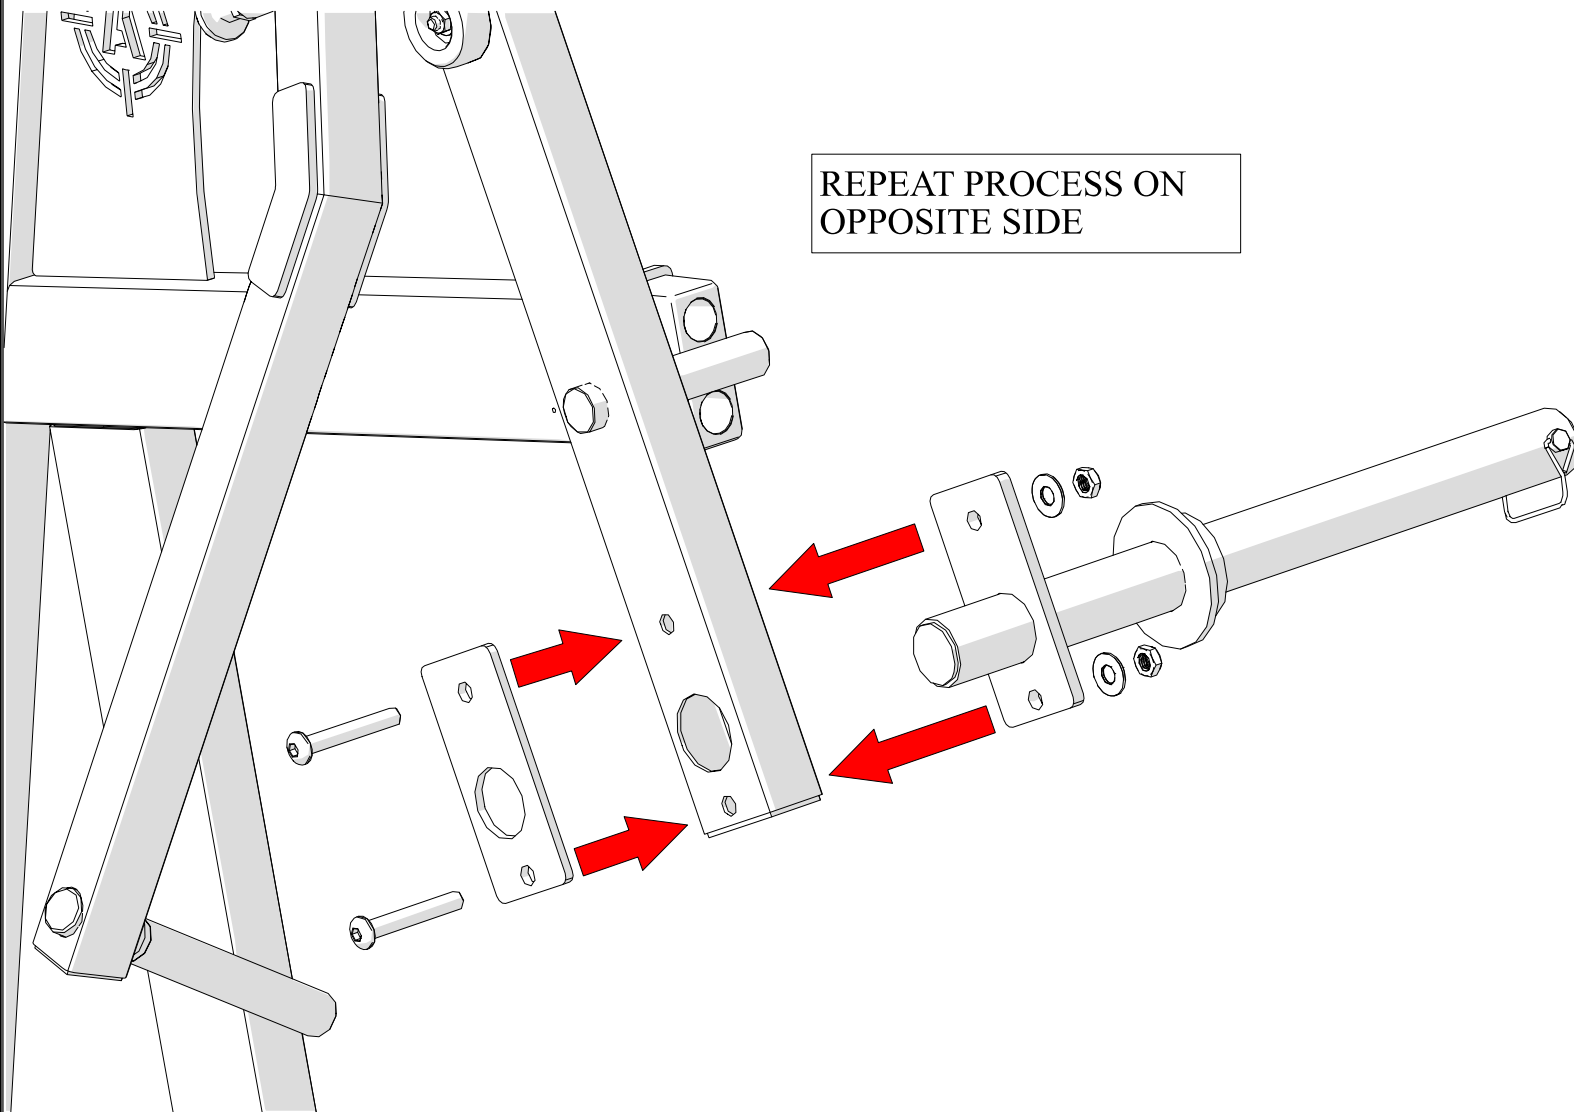

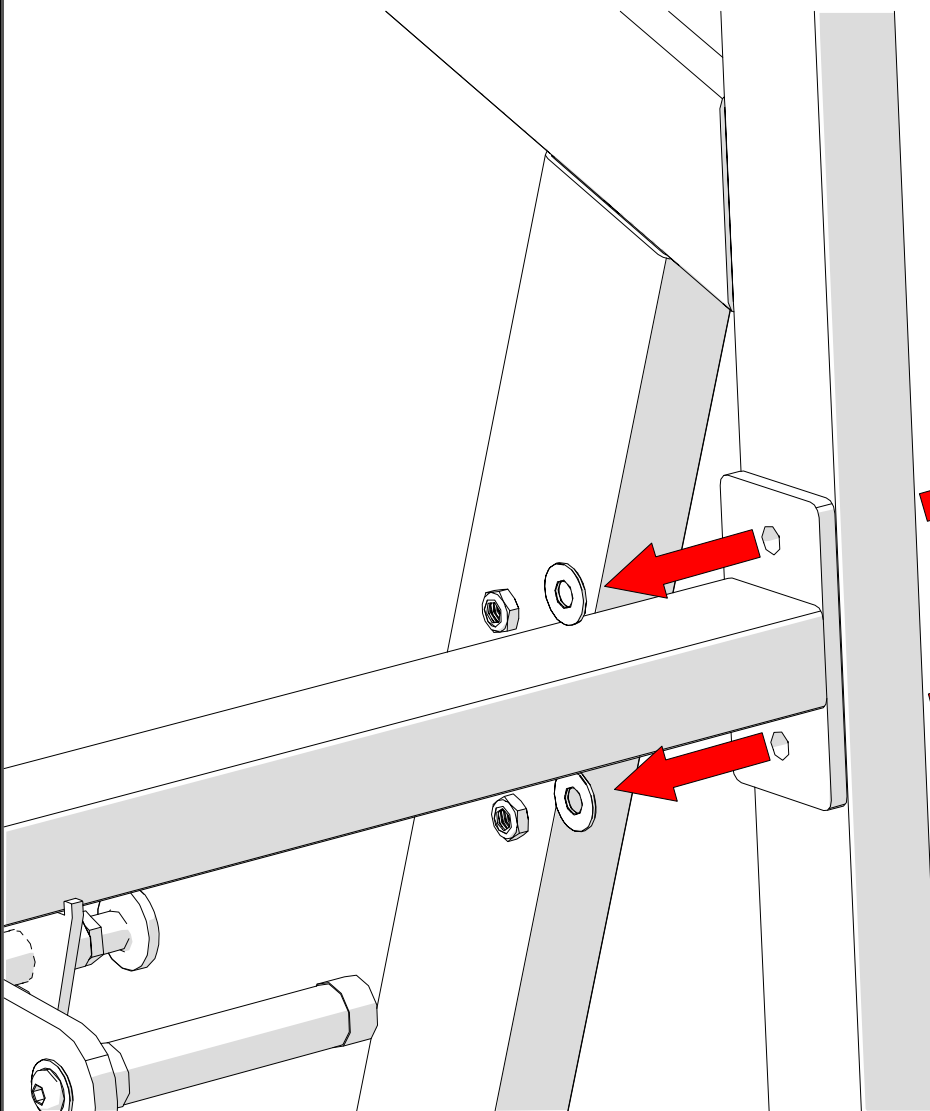


AT REAR OF MACHINE, REMOVE (QTY 2)
1/2"-13 X 3.25" BUTTON HEAD SCREWS,
WASHERS, AND NYLOCK NUTS.



The diagram shows a side view of a machine's rear frame. A horizontal metal beam is attached to a vertical support. Two sets of fasteners (a nut, washer, and screw) are shown being removed from the beam. Red arrows point from the fasteners to the right, where the individual components are shown. The fasteners are 1/2"-13 X 3.25" button head screws, washers, and nylock nuts.

NOTE: ONLY REMOVE BOLTS FROM ONE
SIDE OF MACHINE AT A TIME



POSITION WEIGHT STORAGE HORN
AS SHOWN AND SECURE WITH BOLTS,
WASHERS, AND NYLOCK NUTS.
NOTE: WEIGHT HORN WILL HAVE A
SLIGHT UPWARD CANT WHEN INSTALLED
CORRECTLY

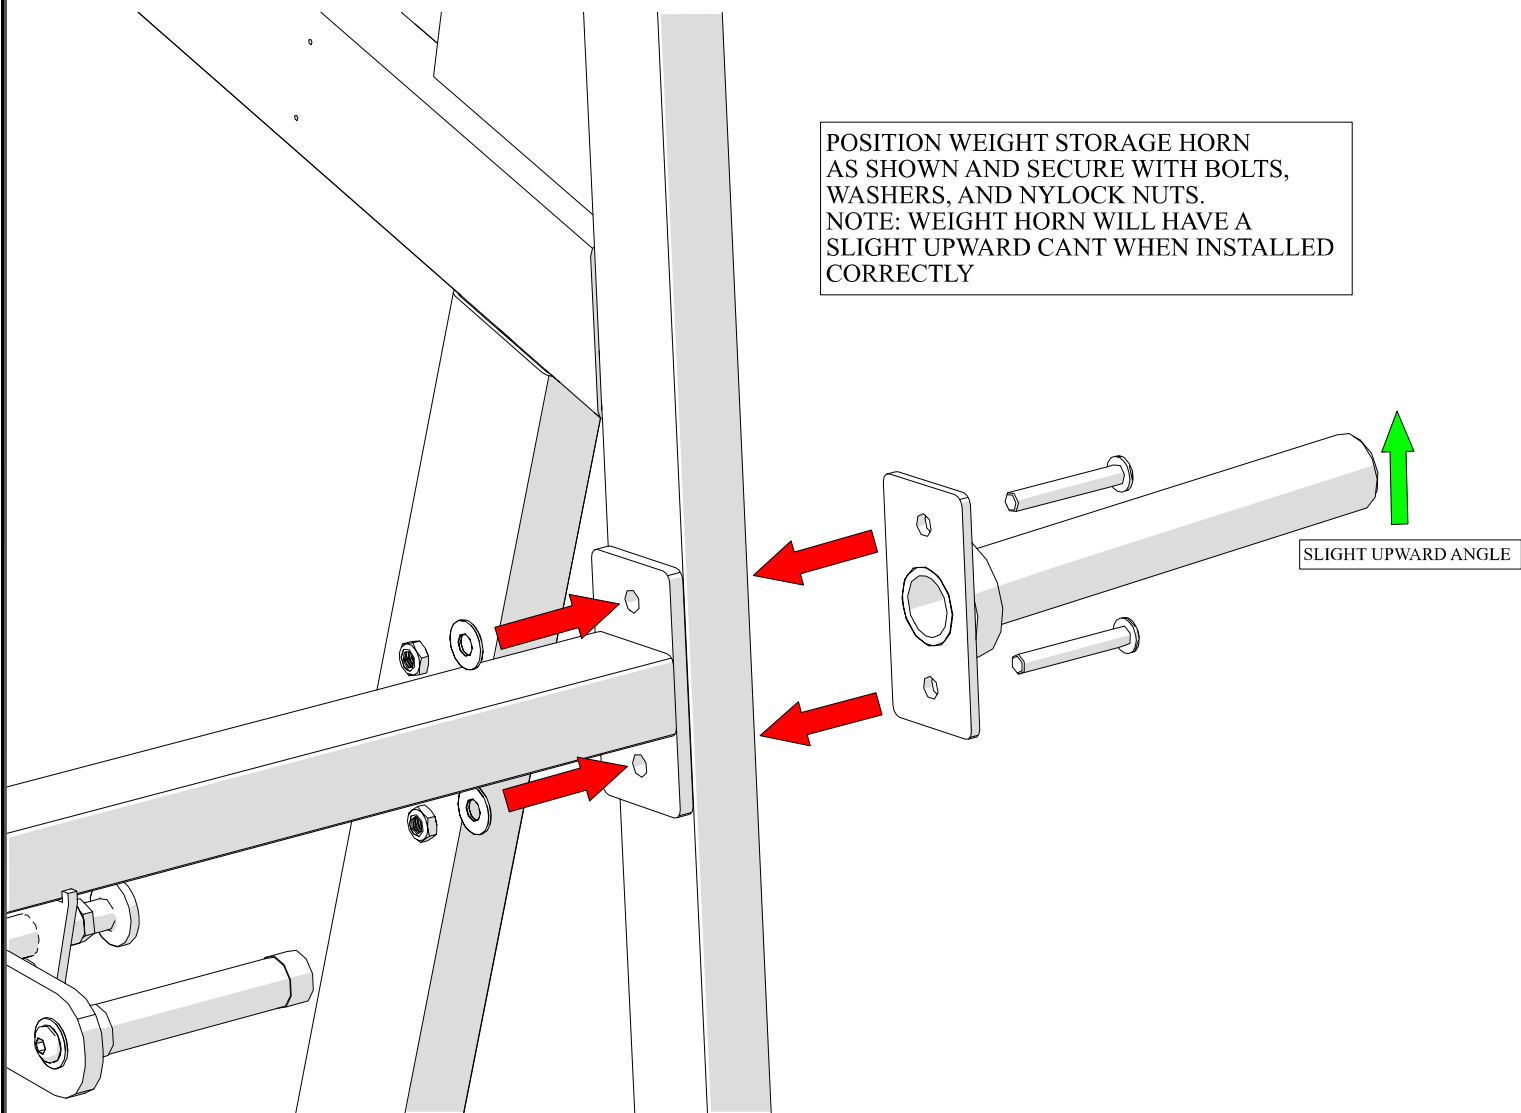



REPEAT ON OPPOSITE SIDE

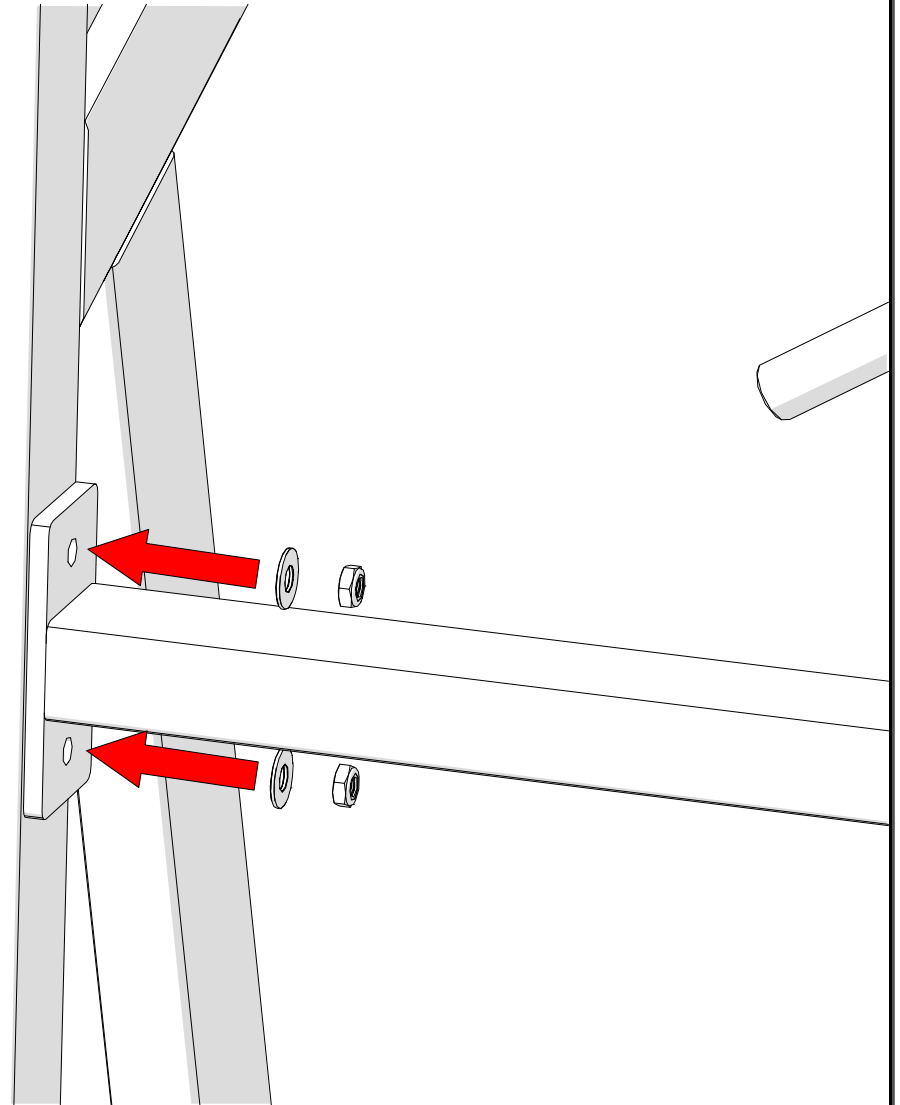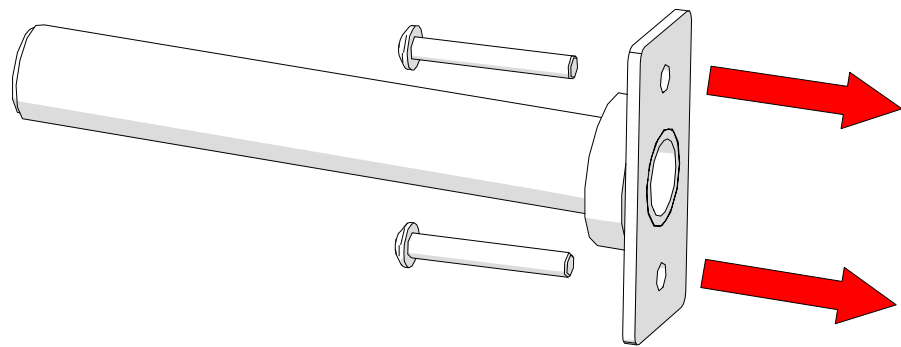

MOVE DOWN AND REMOVE (QTY 2)
1/2"-13 X 3" BUTTON HEAD SCREWS,
WASHERS, AND NYLOCK NUTS

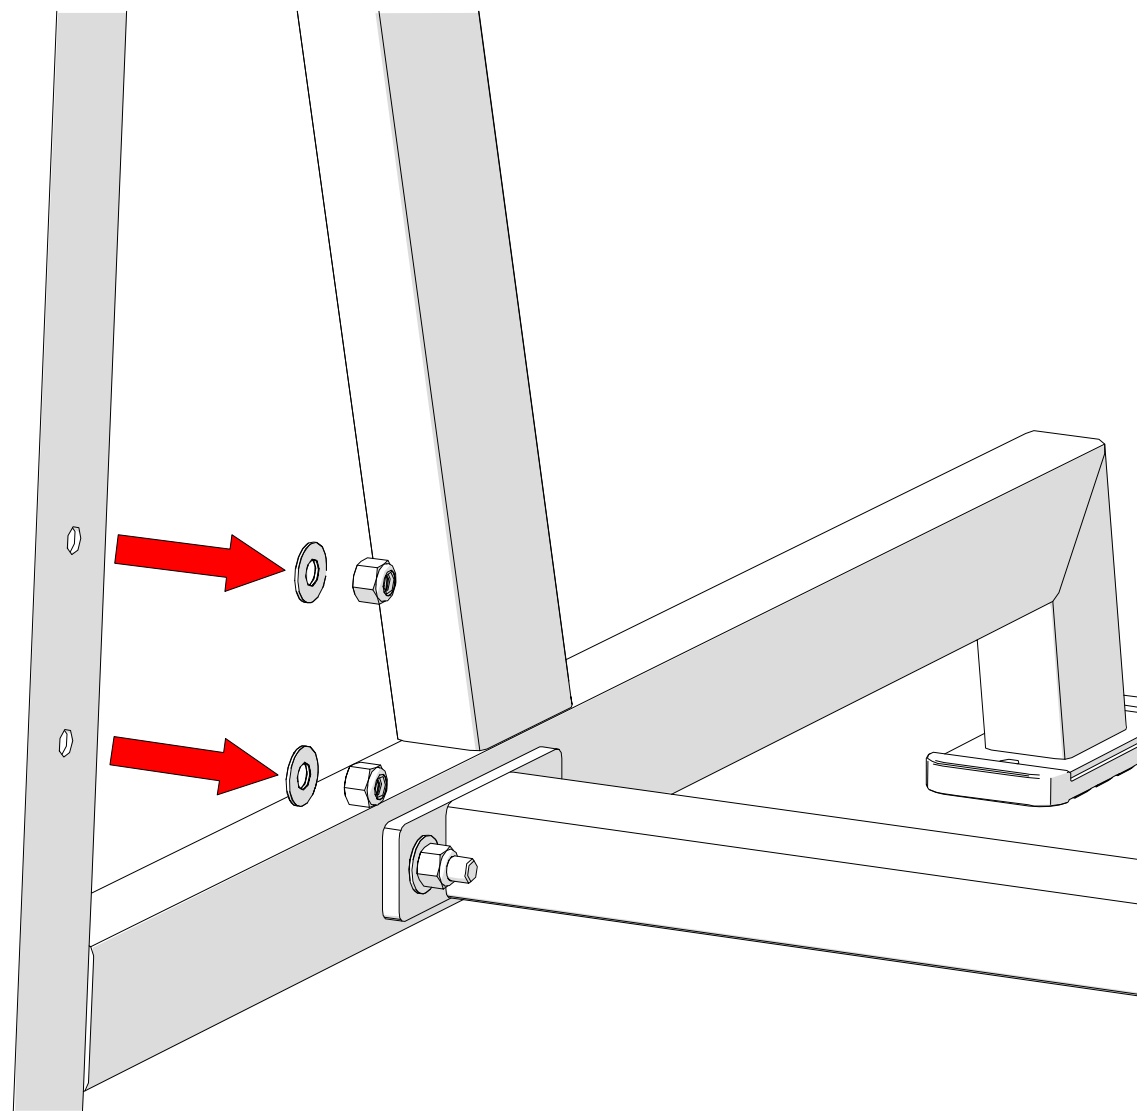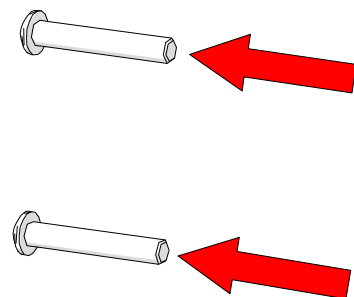

POSITION WEIGHT HORN AS SHOWN
AND SECURE USING BOLTS REMOVED
IN PREVIOUS STEP

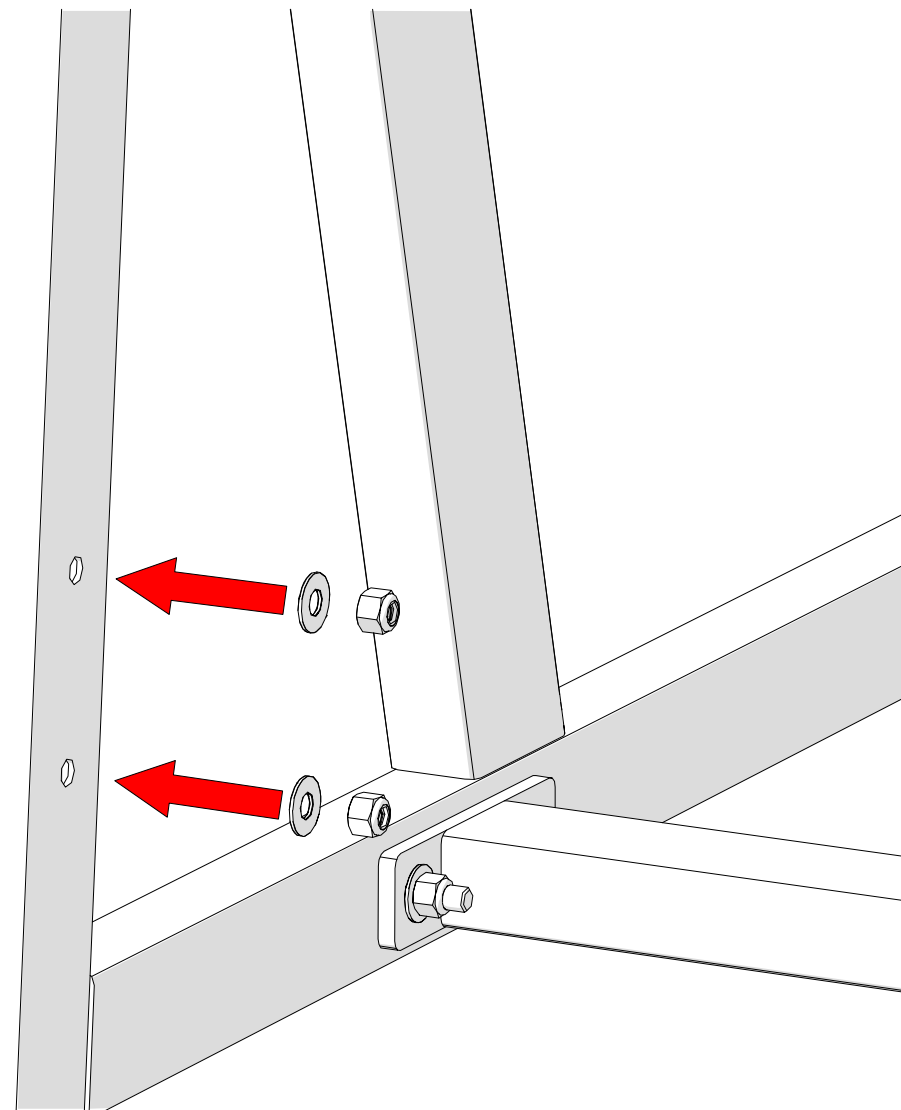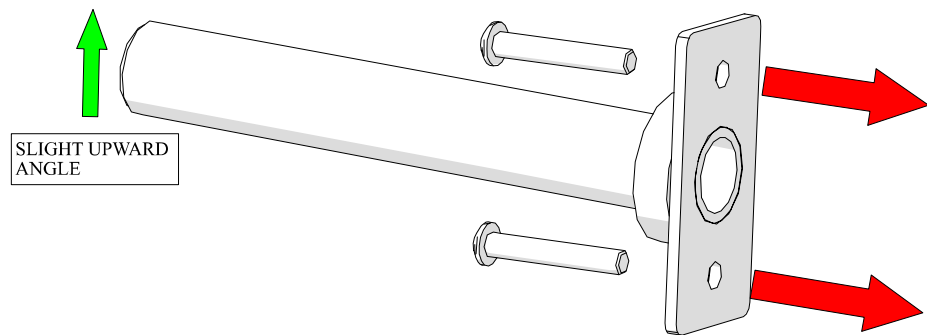

REPEAT ON OPPOSITE SIDE

