



8002 HIP HACK SQUAT

FINAL ASSEMBLY GUIDE

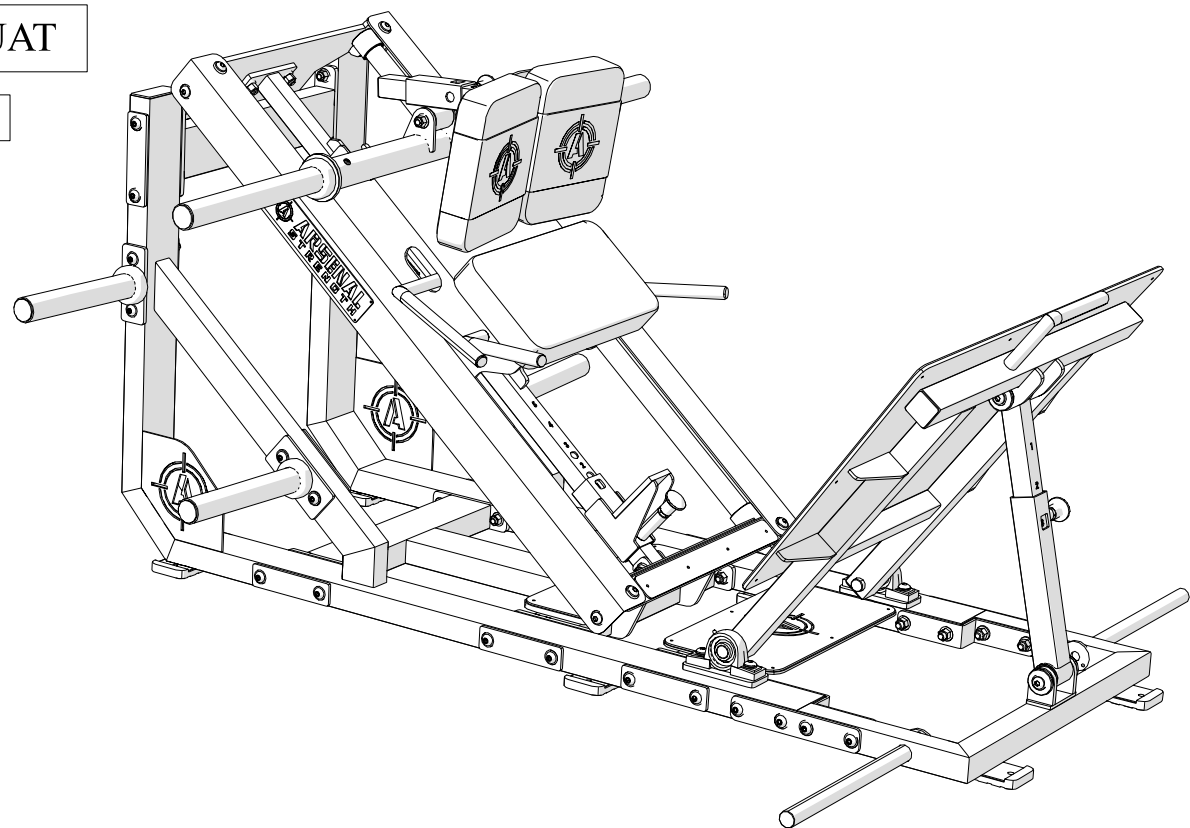


REMOVE (QTY 4) 1/2"-13 X 3.25" BUTTON HEAD
SCREWS, WASHERS, NYLOCK NUTS, AND
BACKING PLATES FROM FRAME TUBES



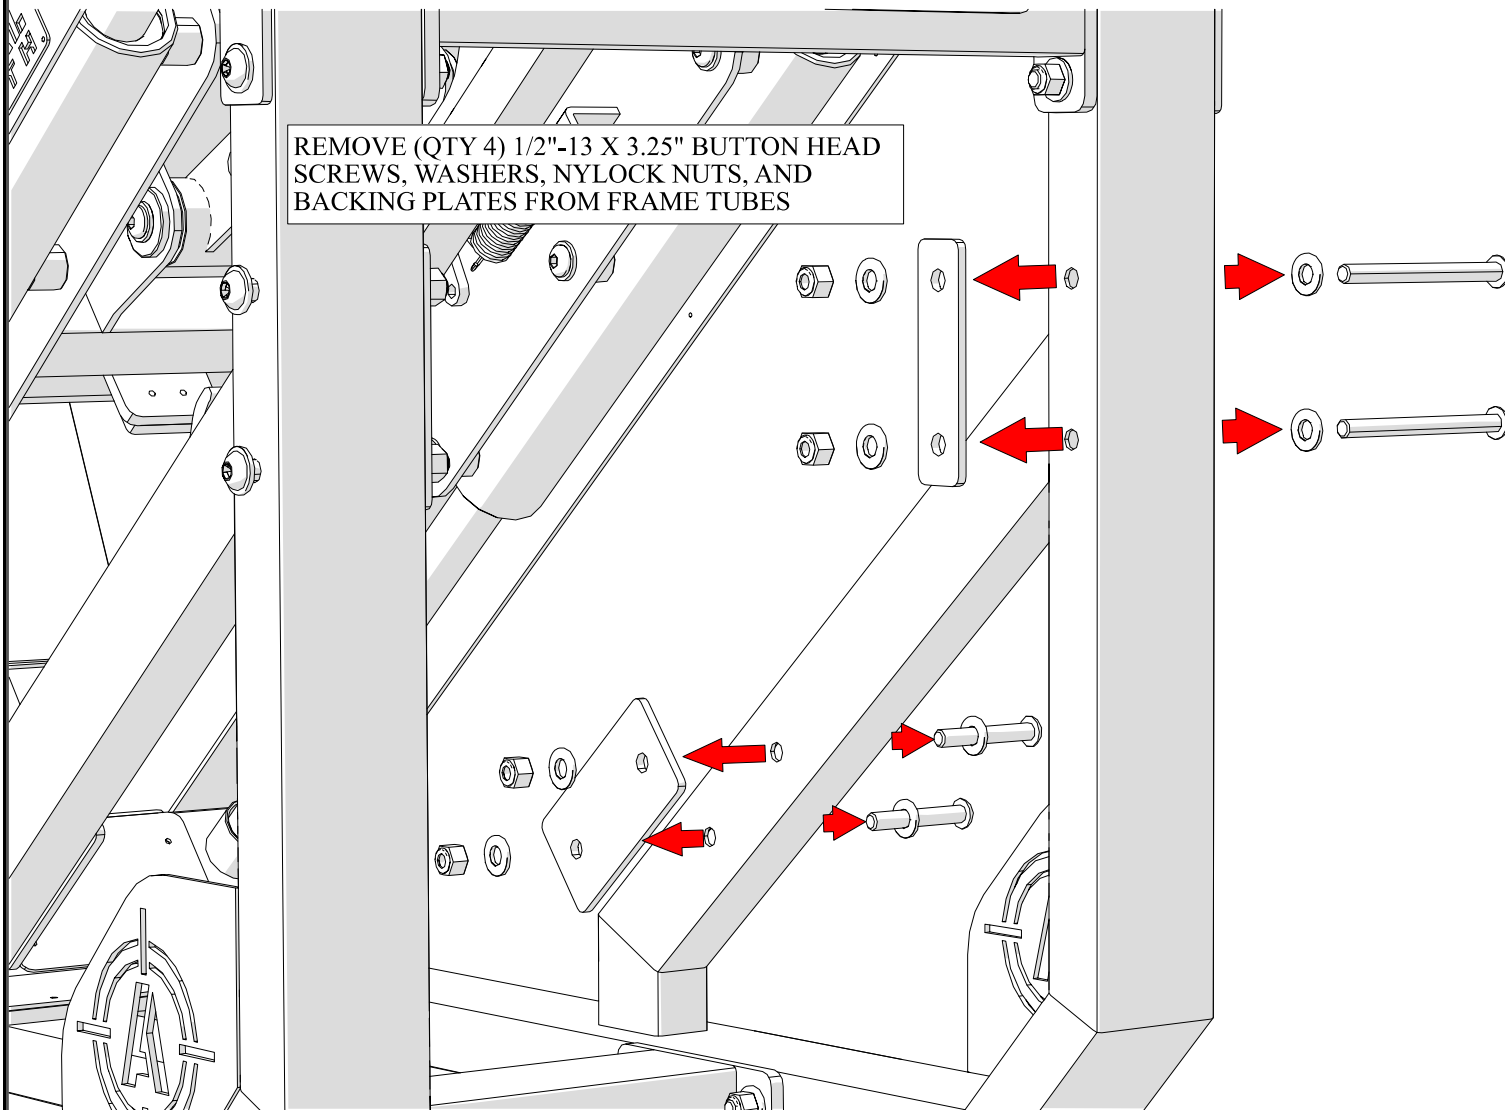


POSITION WEIGHT STORAGE PEGS AS SHOWN
AND SECURE WITH HARDWARE PREVIOUSLY
REMOVED.


NOTE: WEIGHT HORNS WILL ANGLE UP SLIGHTLY.
BE CAREFUL NOT TO INSTALL UPSIDE-DOWN

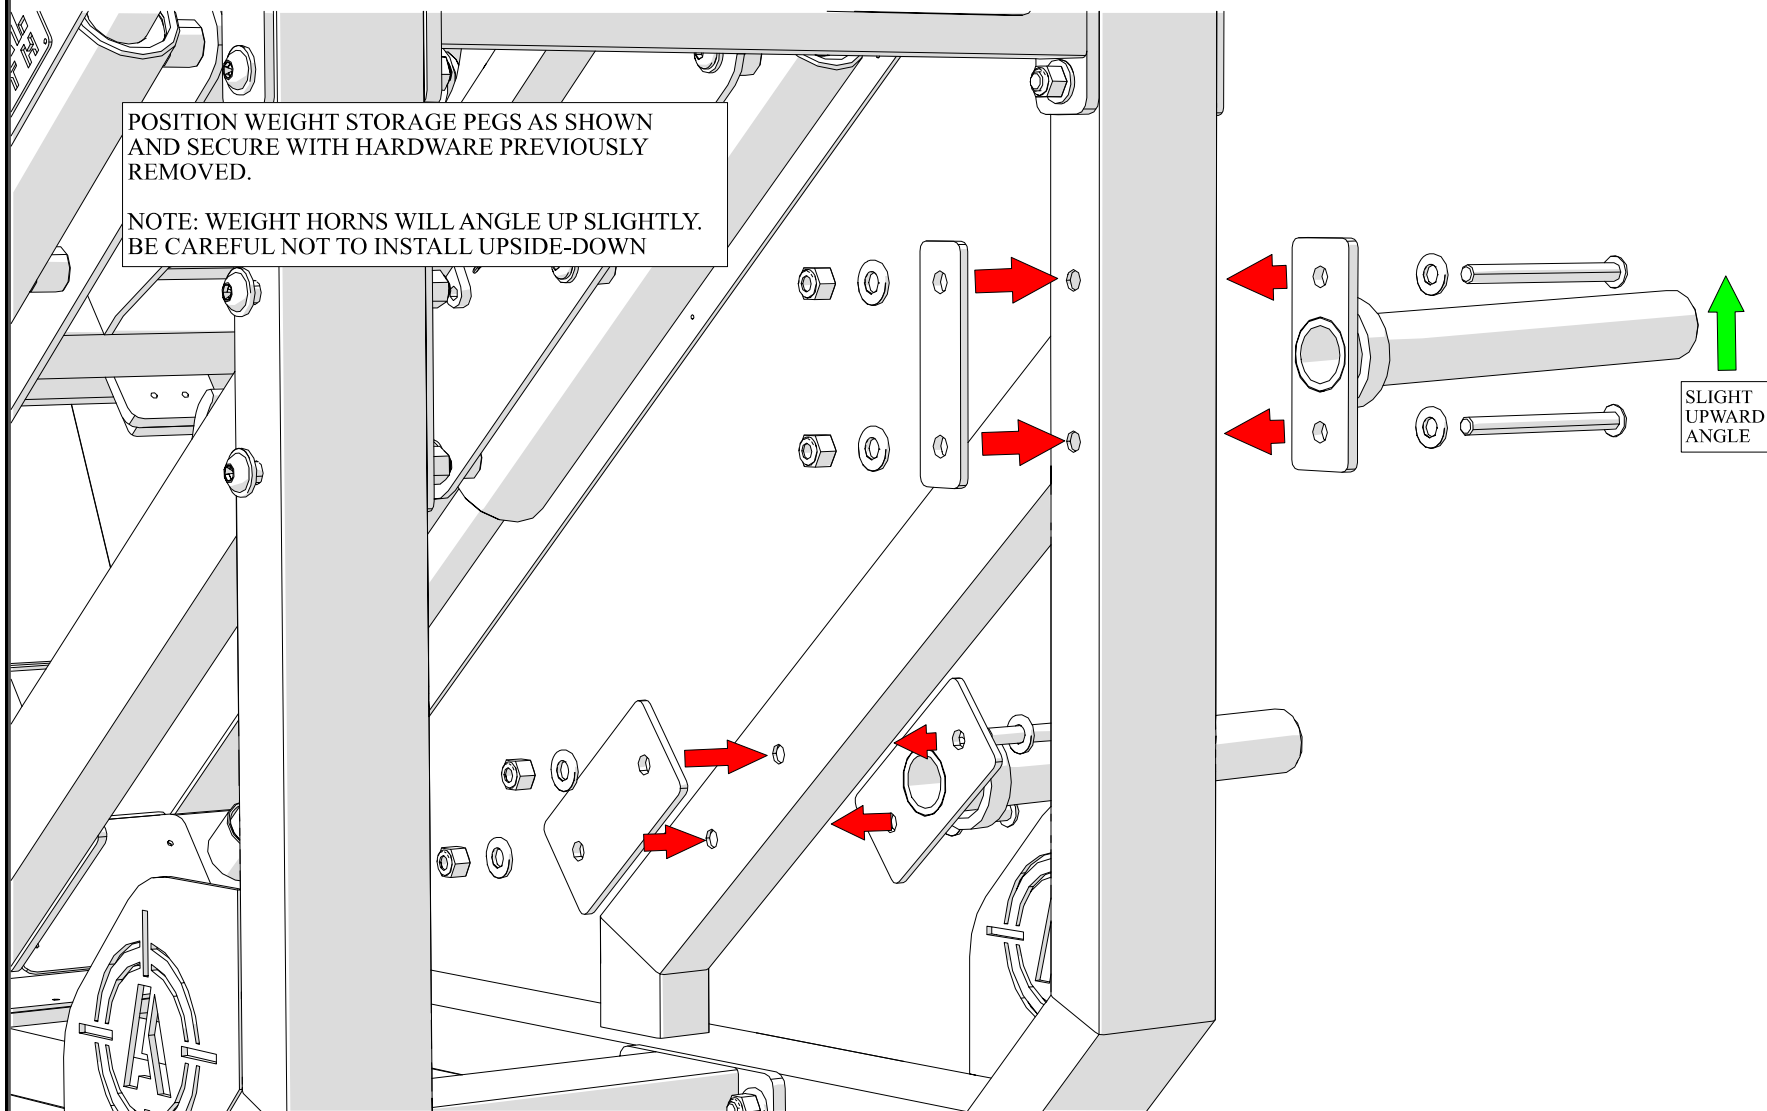

REPEAT WEIGHT HORN INSTALLATION
ON OPPOSITE SIDE

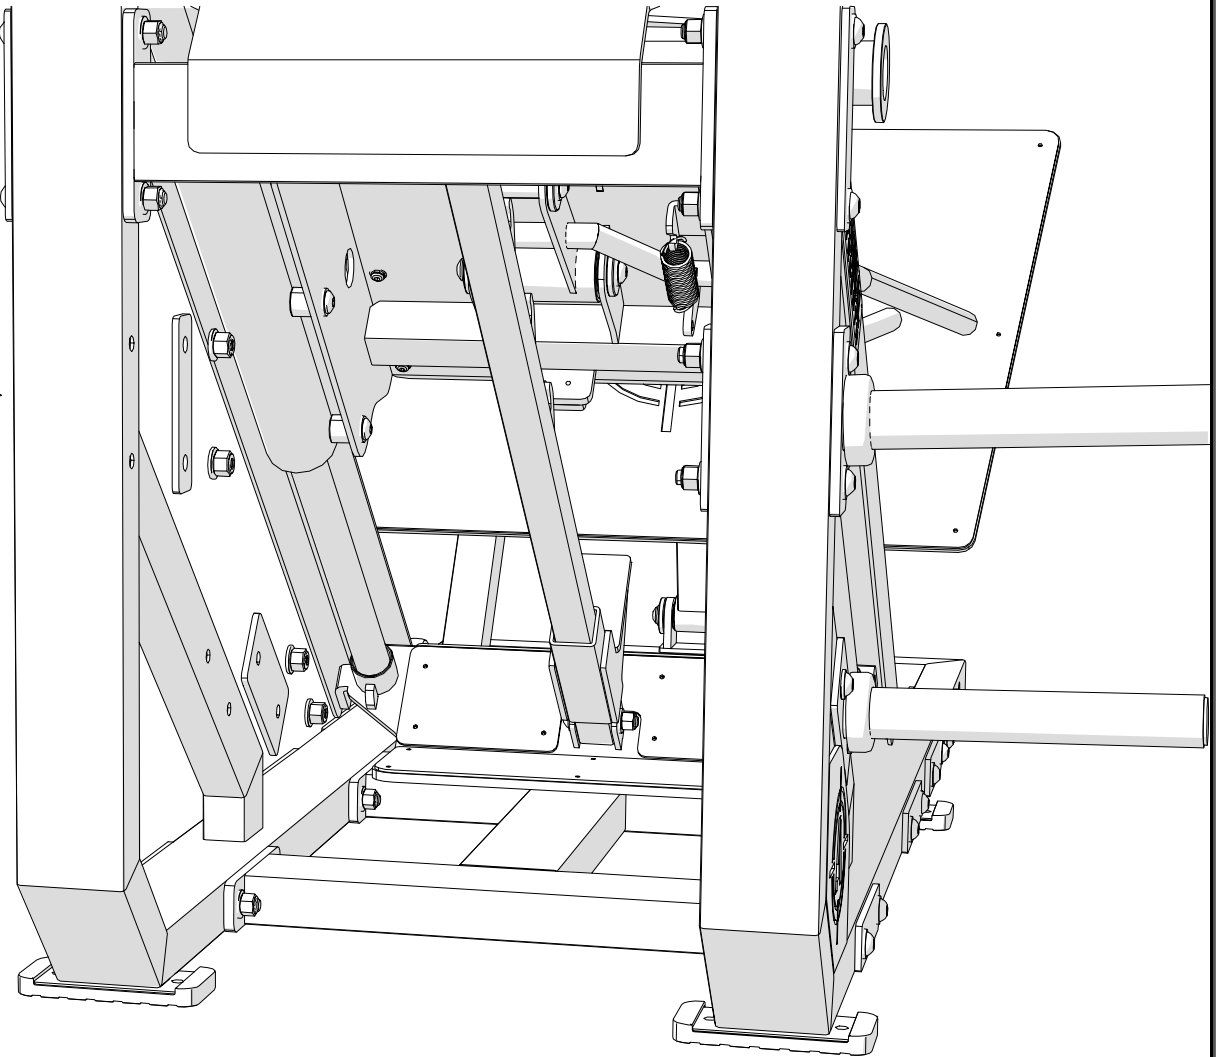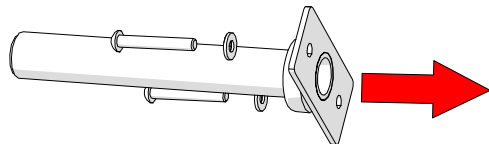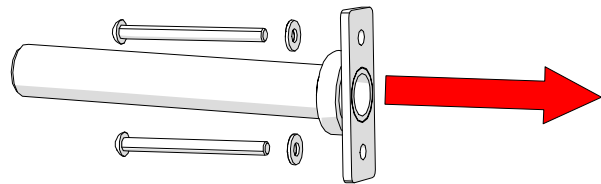


LOCATE UPPER WEIGHT HORN TUBE
AND SLIDE INTO FRAME TUBE

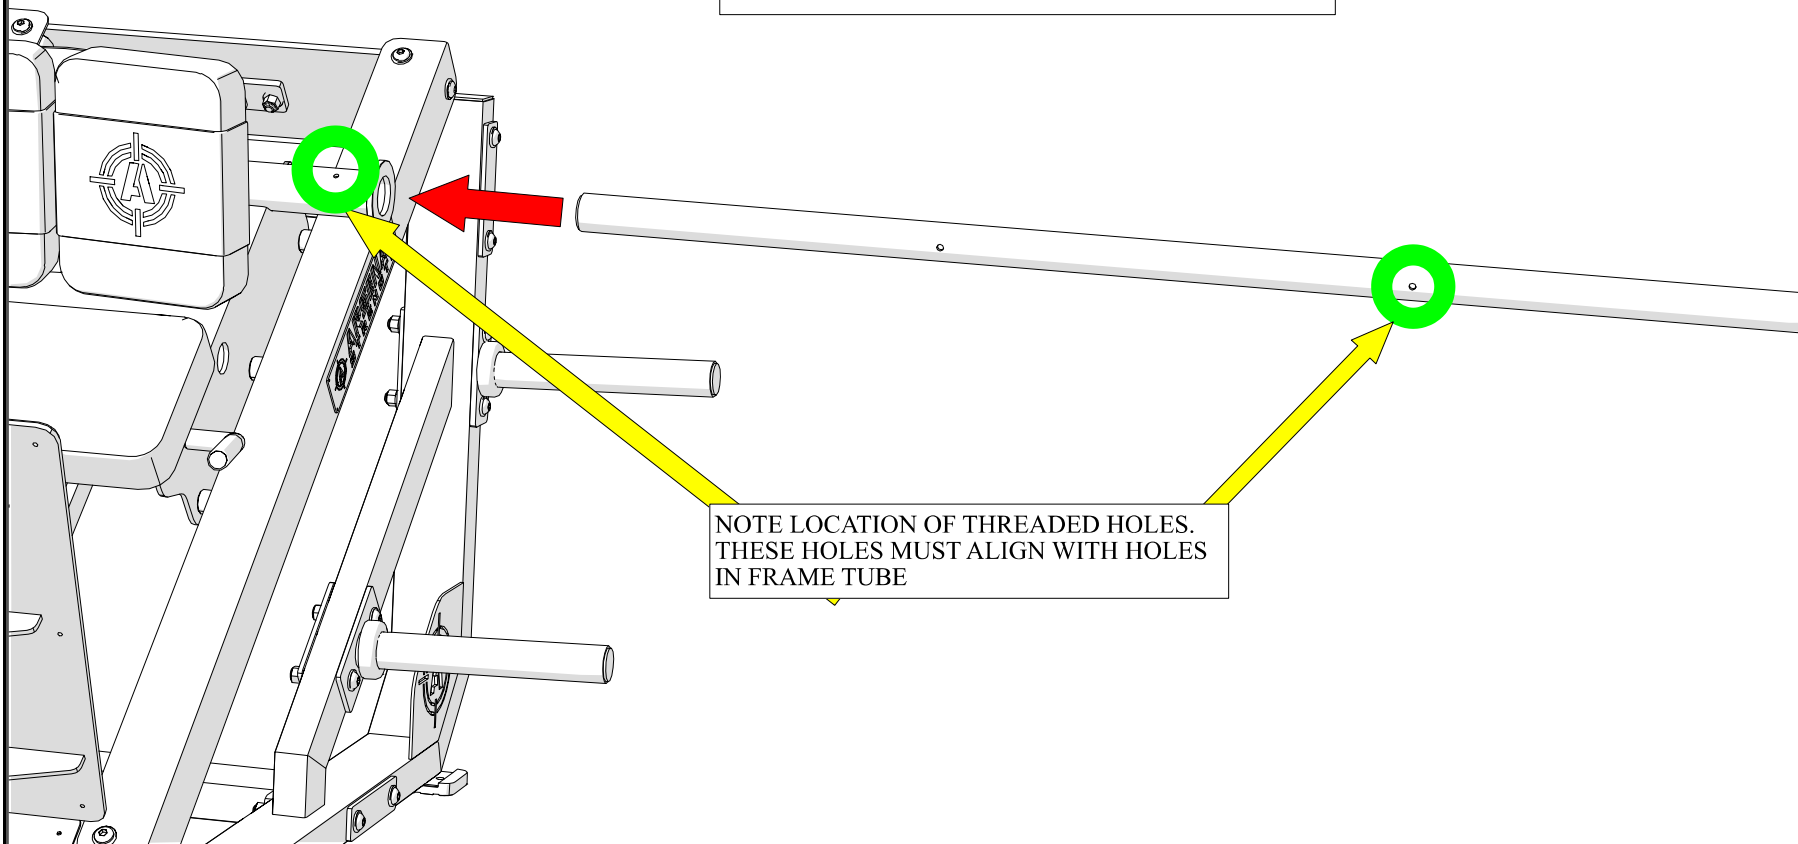


NOTE LOCATION OF THREADED HOLES.
THESE HOLES MUST ALIGN WITH HOLES
IN FRAME TUBE

SECURE WEIGHT HORN TUBE WITH
5.17"-18 X .5" BUTTON HEAD SCREW.


NOTE:SCREW SHOULD THREAD INTO
THREADED HOLE IN TUBE

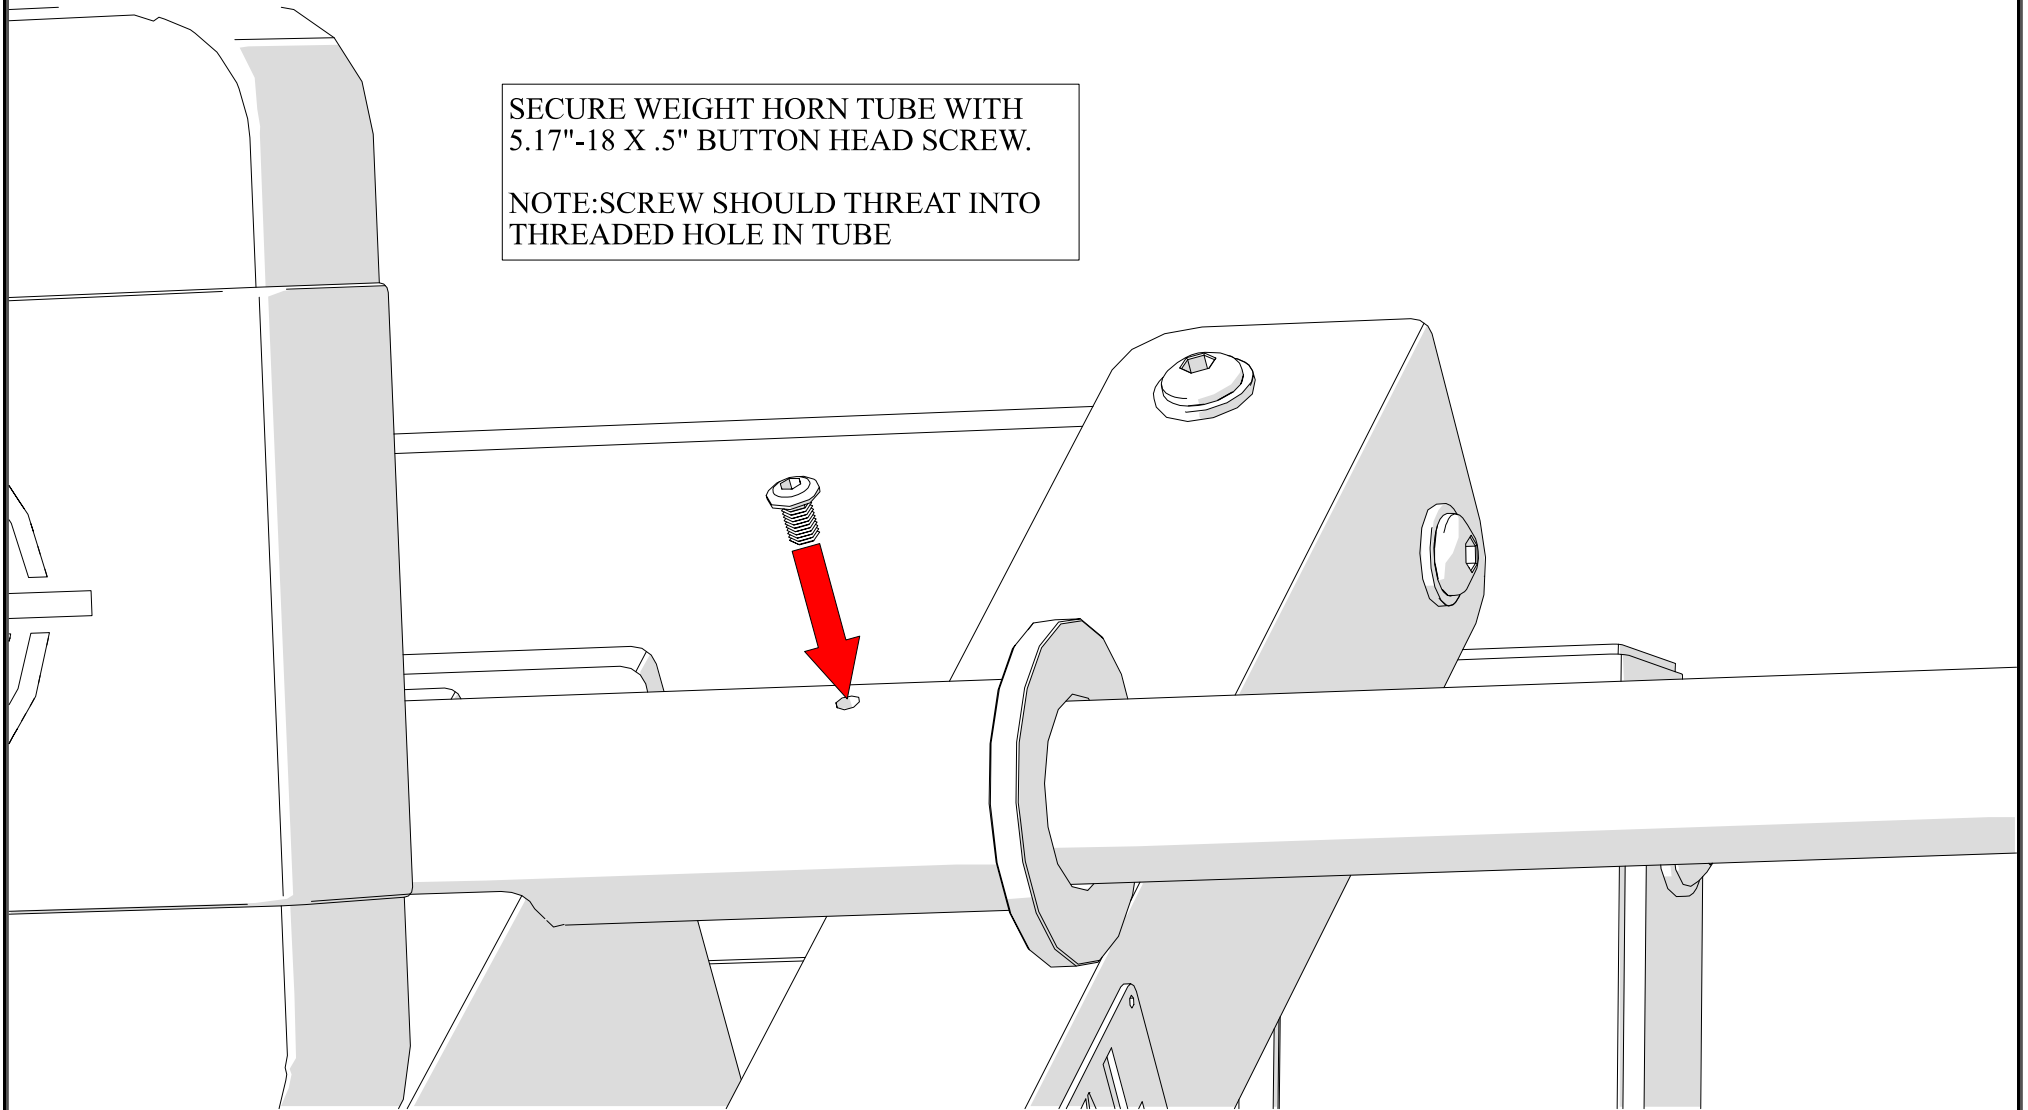

REPEAT ON OPPOSITE SIDE

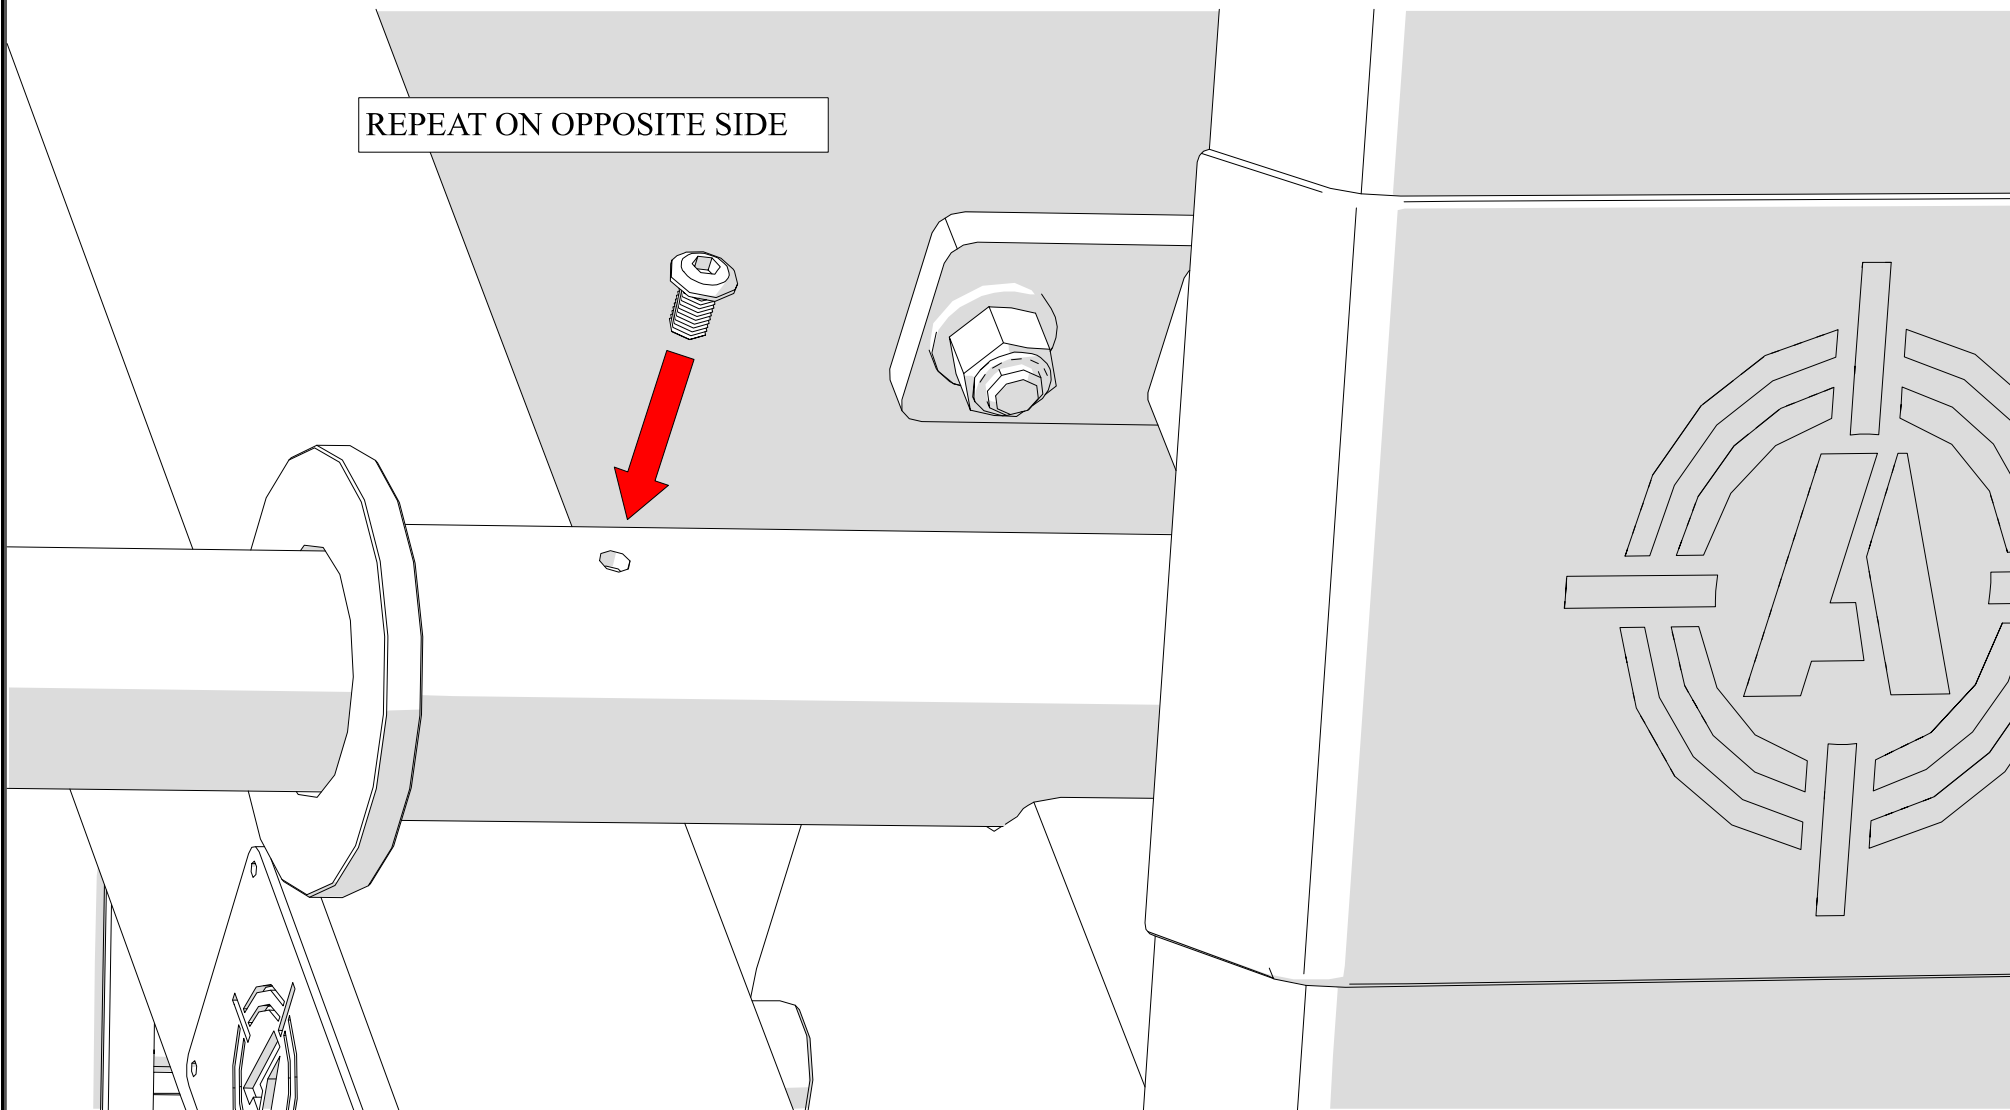

INSTALL RUBBER STOPPERS ON WEIGHT HORNS

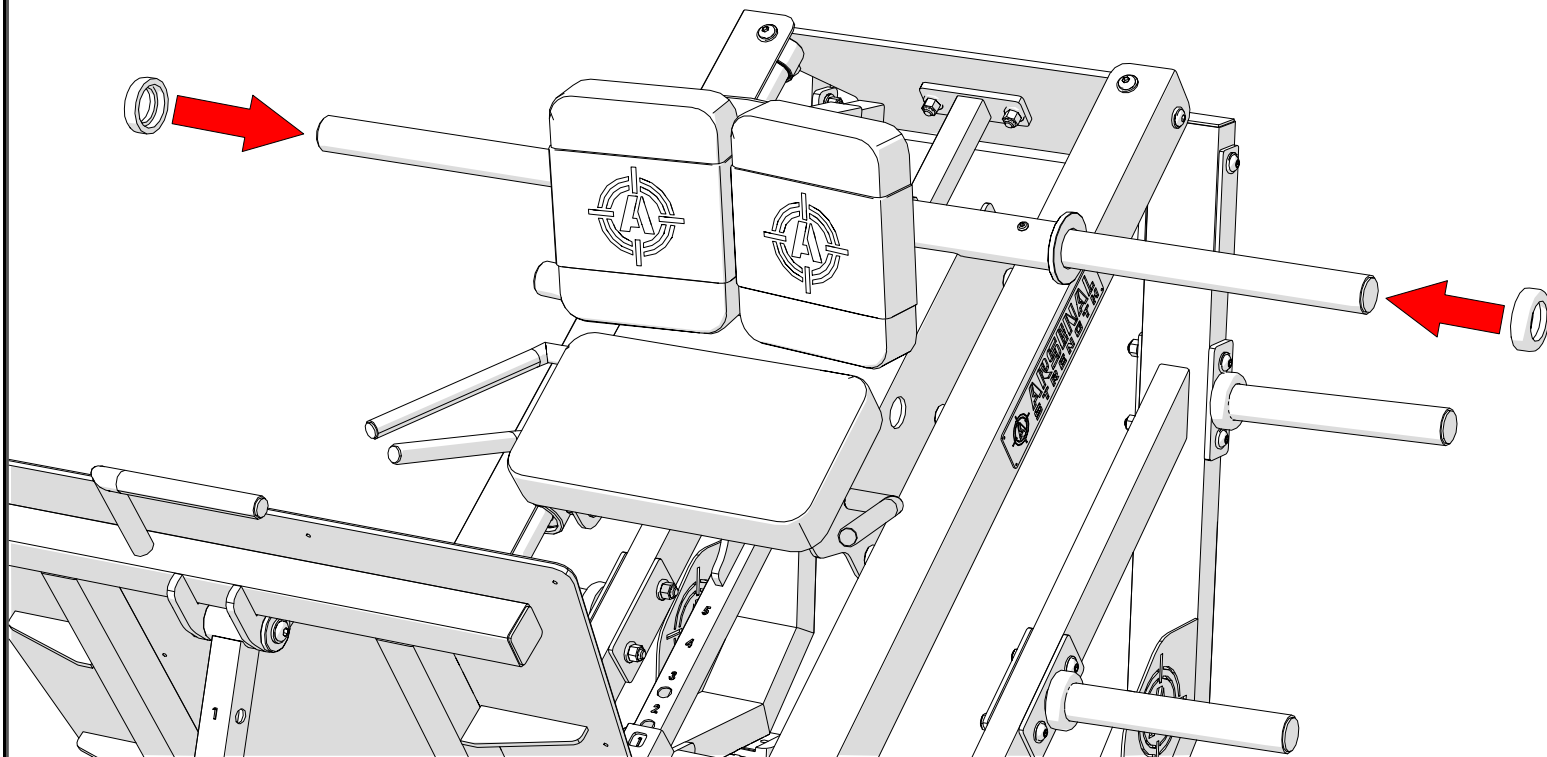

MAKE SURE ALL HARDWARE IS TIGHT
AND TEST ALL FUNCTIONS BEFORE
OPERATING EQUIPMENT

