



8006 UPRIGHT DECLINE FLY

FINAL ASSEMBLY GUIDE

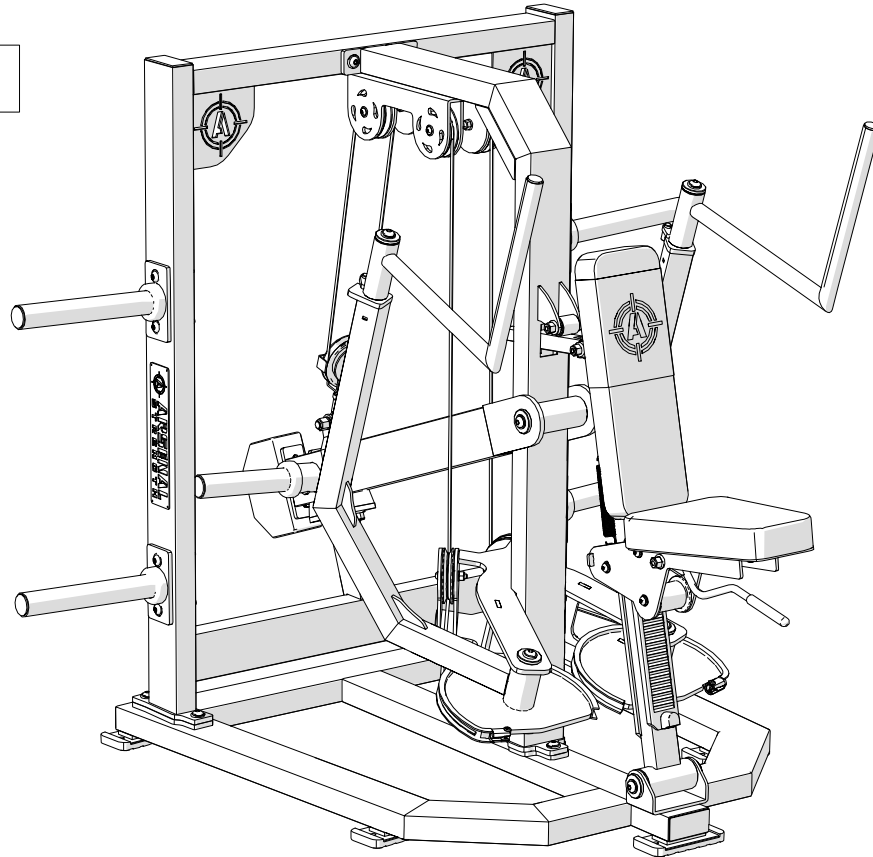



BEGIN BY INSTALLING RUBBER
FEET ON METAL FRAME PADS
(OPTIONAL)

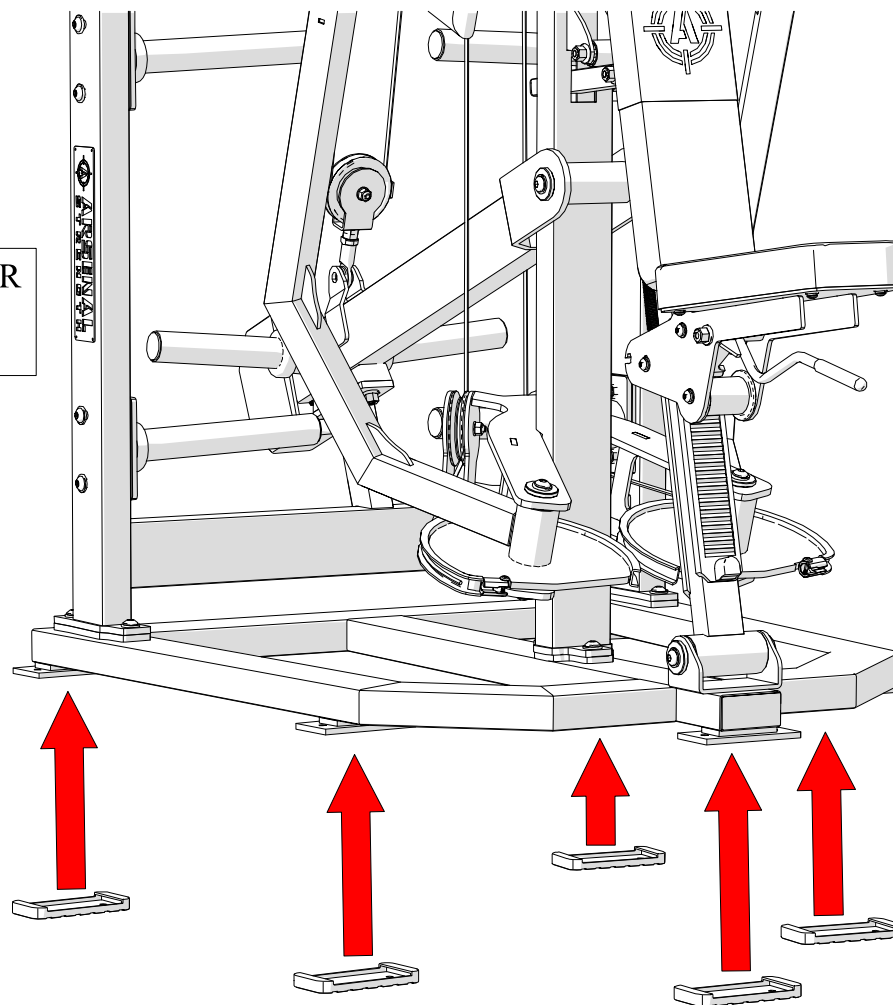

WEIGHT STORAGE PEGS ARE REVERSED
FOR SHIPPING.



REMOVE (QTY 2) 1/2"-13 X 3" BUTTON
HEAD SCREWS, WASHERS, NYLOCK NUTS,
WEIGHT HORN, AND BACKING PLATE FROM
REAR FRAME TUBE

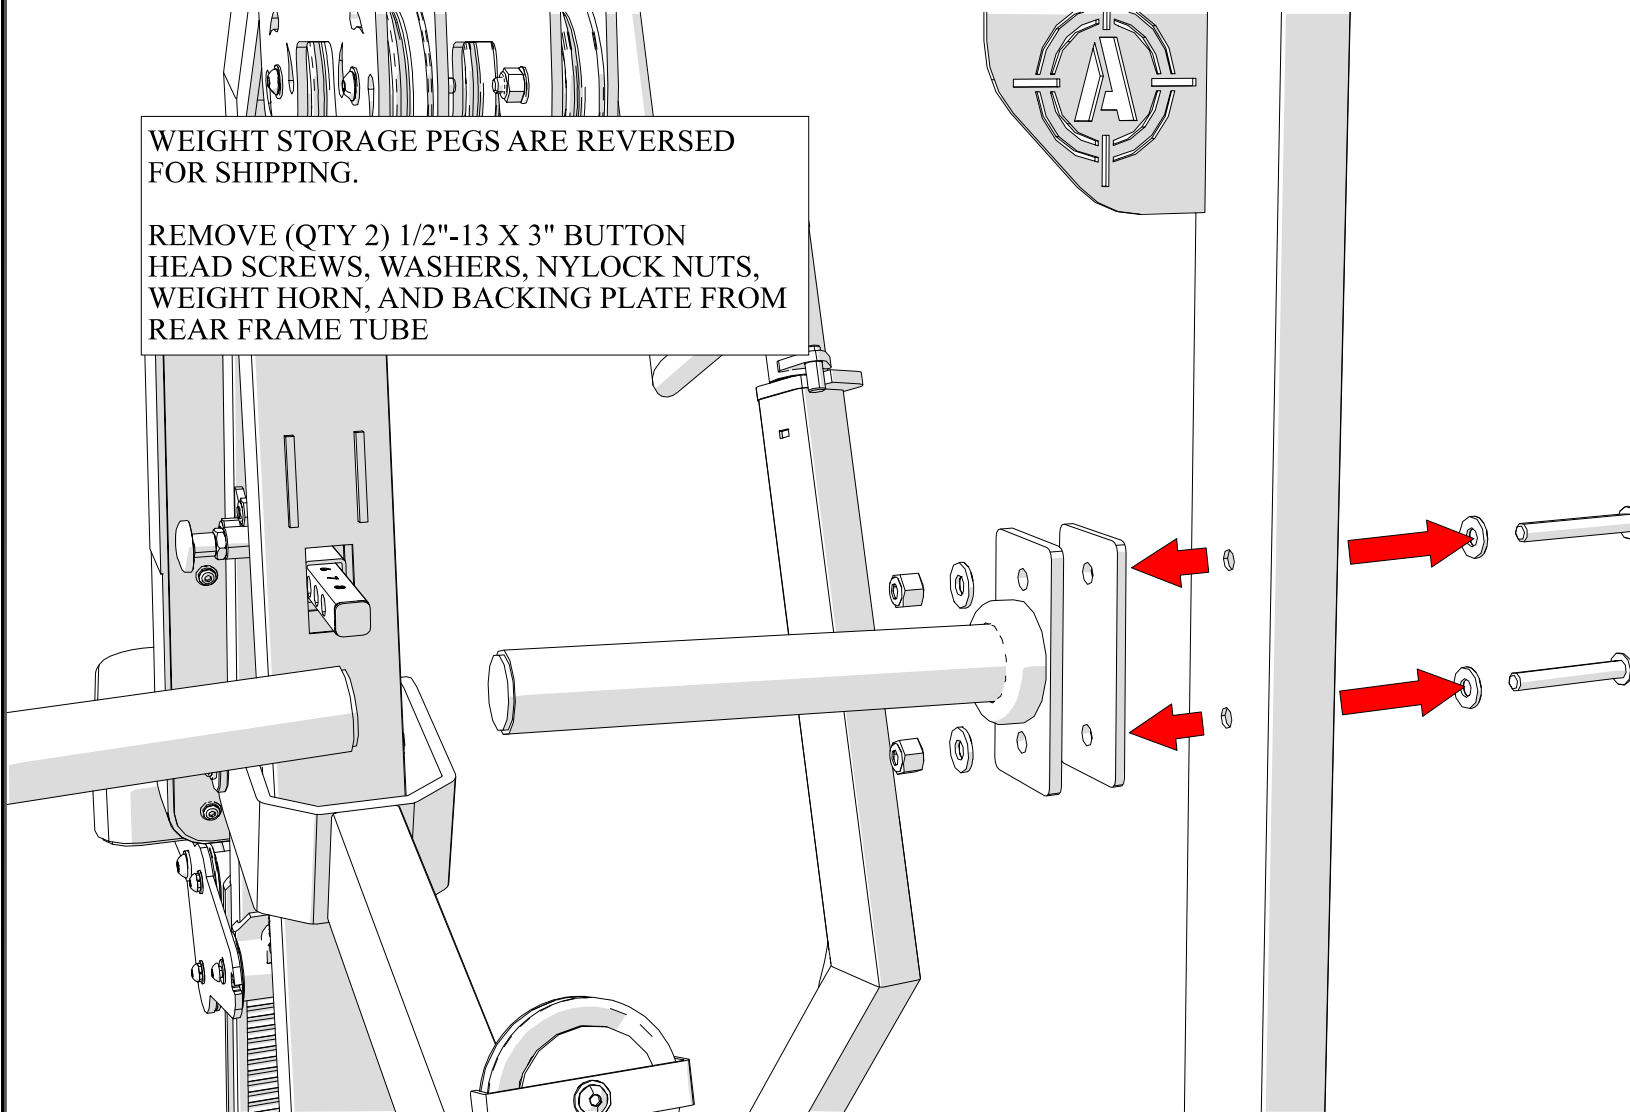


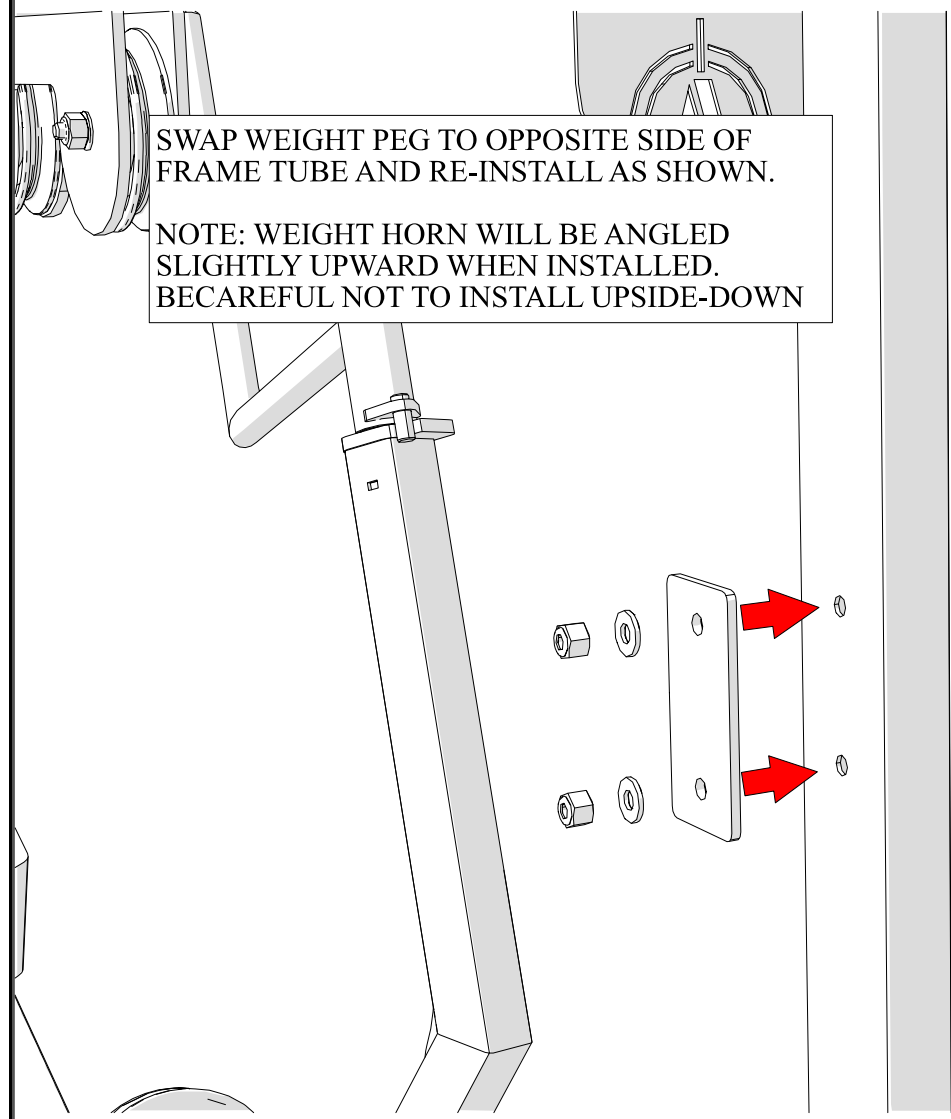

SWAP WEIGHT PEG TO OPPOSITE SIDE OF
FRAME TUBE AND RE-INSTALL AS SHOWN.

NOTE: WEIGHT HORN WILL BE ANGLED
SLIGHTLY UPWARD WHEN INSTALLED.
BE CAREFUL NOT TO INSTALL UPSIDE-DOWN

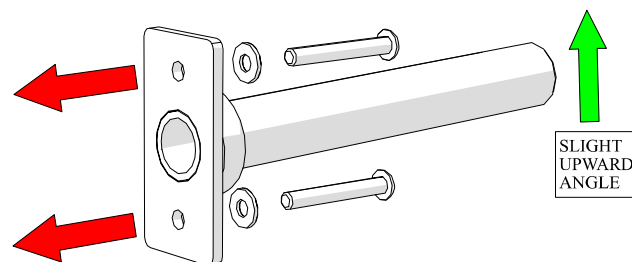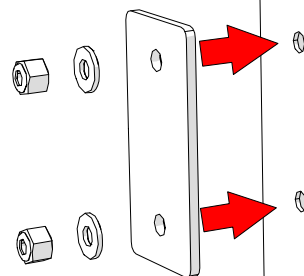

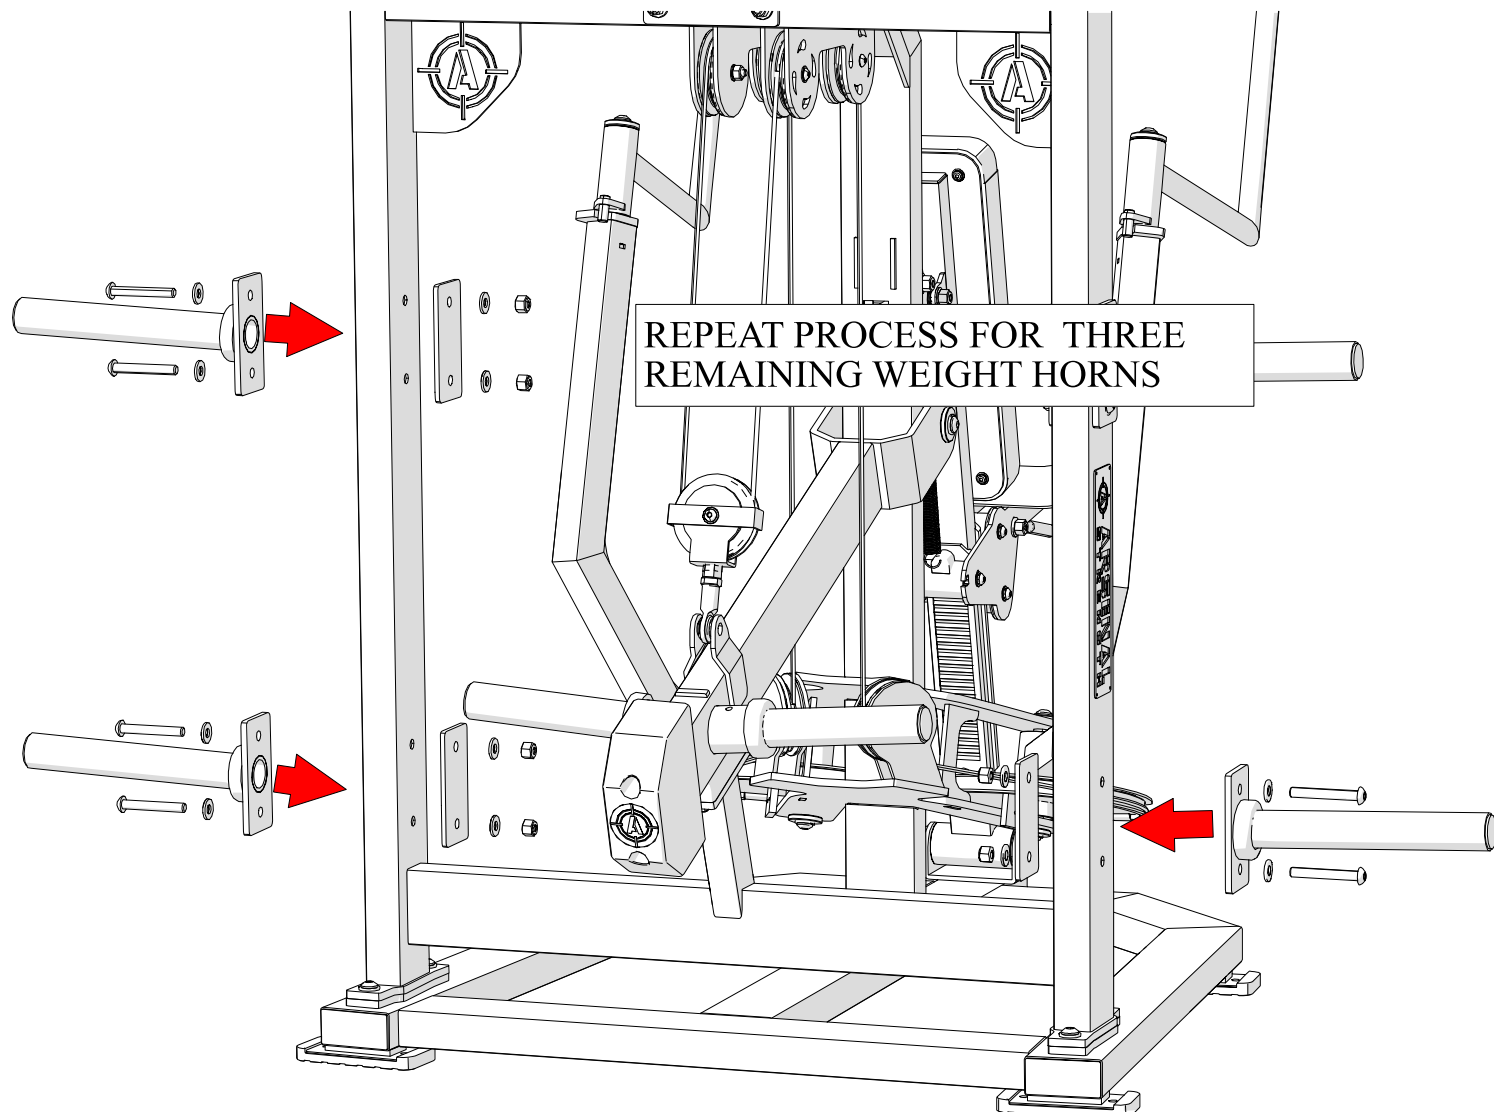

MAKE SURE ALL HARDWARE IS TIGHT
AND CHECK ALL MACHINE FUNCTIONS
BEFORE OPERATING EQUIPMENT

