



9208 LOW ROW- SINGLE PULLEY


CABLE INSTALLATION GUIDE

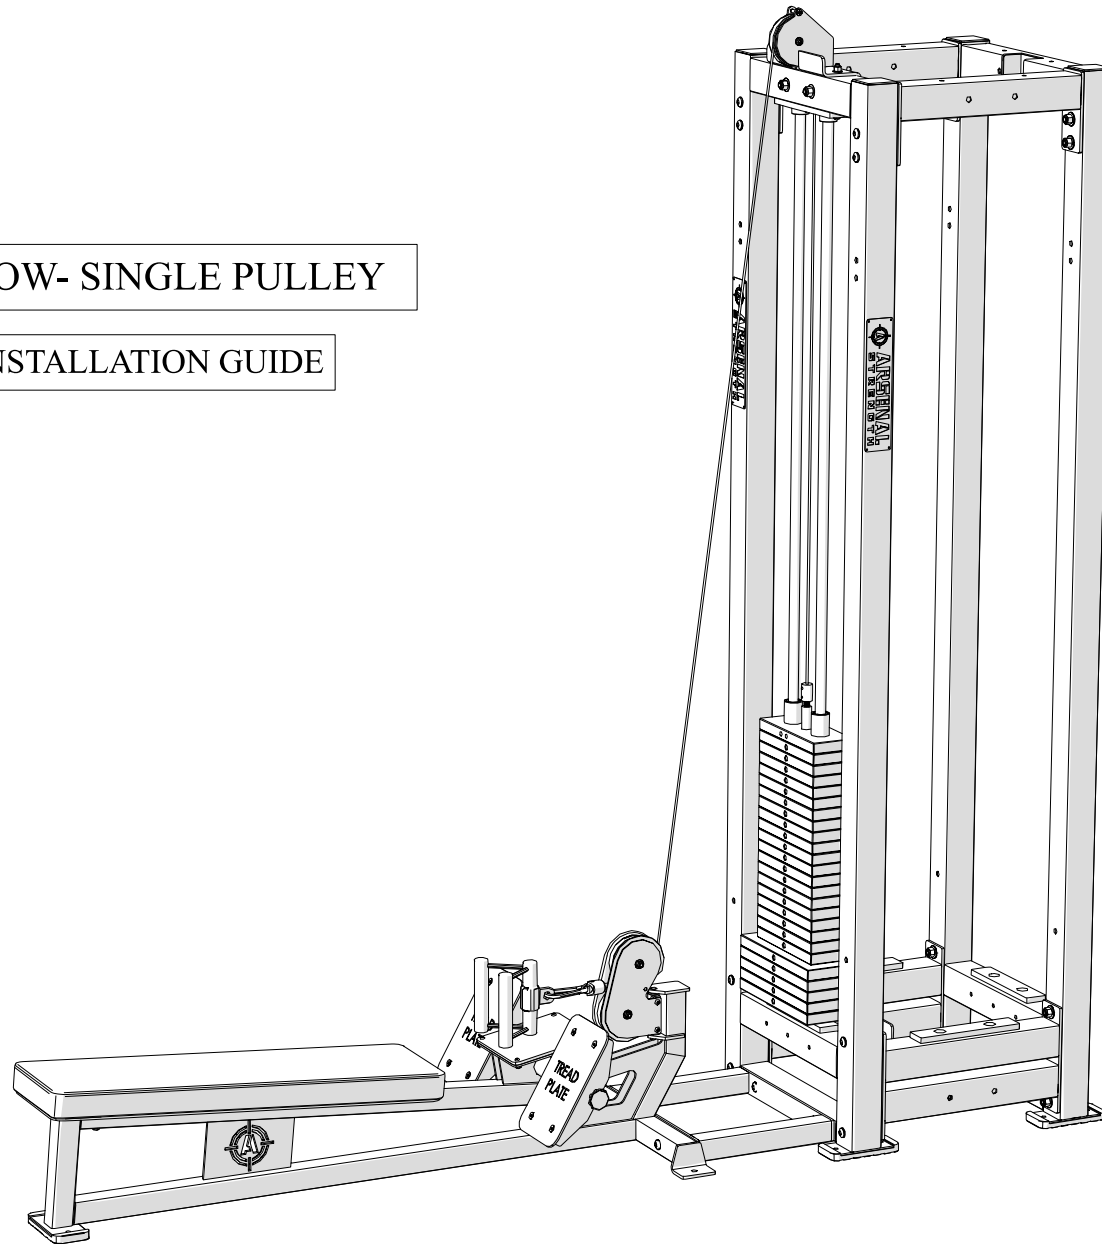

BEGIN BY ROUTING BARE END OF CABLE
(NON-BALL END) THROUGH SWIVEL BRACKET
BETWEEN PULLIES

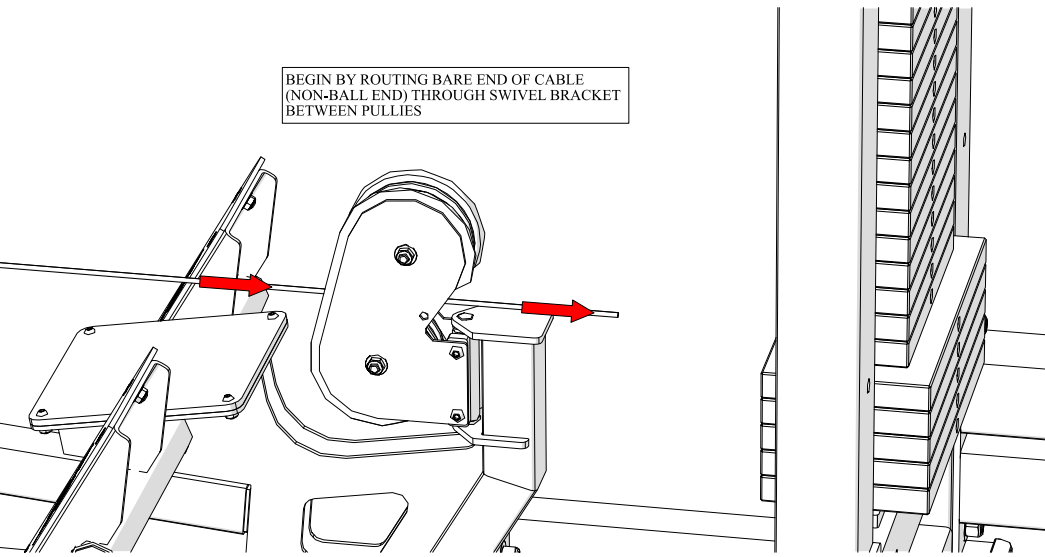


ROUTE CABLE UP OVER TOP PULLEY AND BACK DOWN
TOWARDS WEIGHT STACK

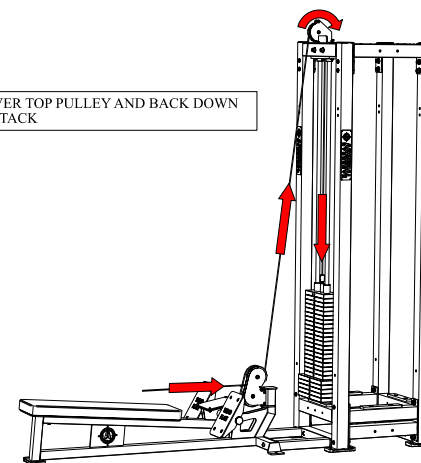


THERE ARE 3 SCREWS ON THE CABLE RETAINER.
PUSH CABLE IN ALL THE WAY- MAKE SURE CABLE
BOTTOMS OUT INSIDE RETAINER

BOTTOM SCREW MUST BE TIGHTENED FIRST!


TIGHTEN BOTTOM SCREW AND CHECK TO MAKE SURE
SCREW IS MAKING CONTACT BEFORE MOVING ON TO
REMAINING SCREWS.

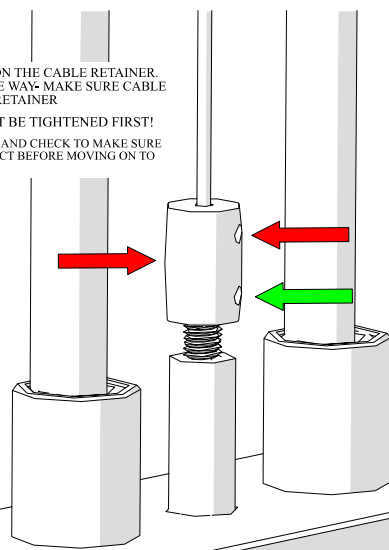

MOVE TO SWIVEL PULLEY AND
LOCATE CABLE STOPPER
COMPONENTS

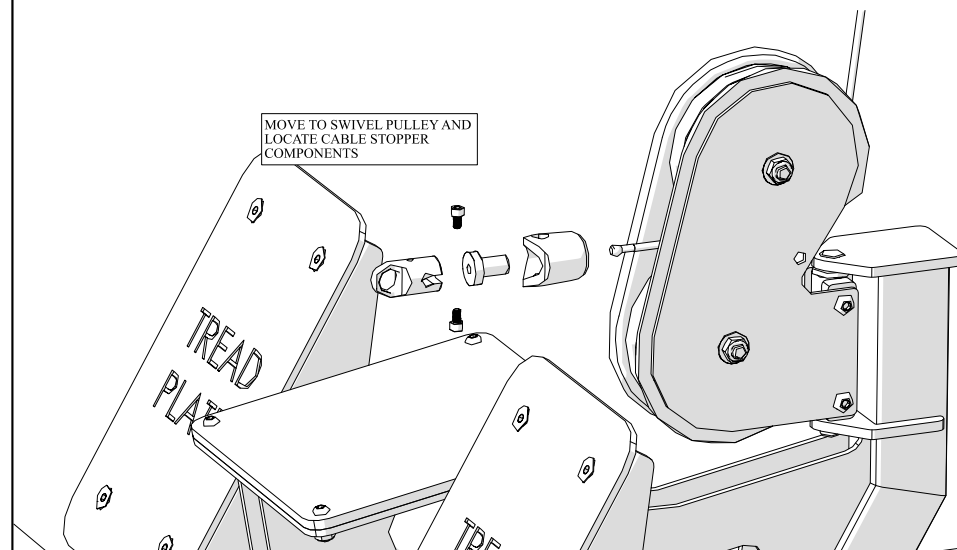


CABLE STOPPER INSTALLATION

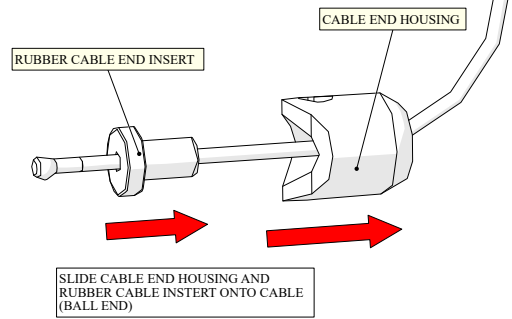


CABLE STOPPER INSTALLATION

PUSH CABLE END LINK ONTO CABLE BALL END

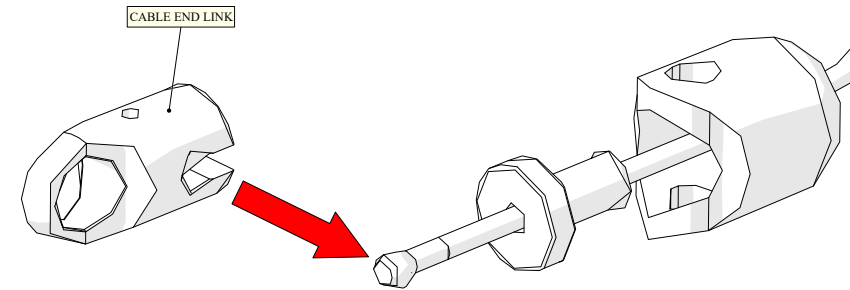


CABLE STOPPER INSTALLATION

SLIDE CABLE END HOUSING OVER RUBBER CABLE INSERT AND CABLE END LINK

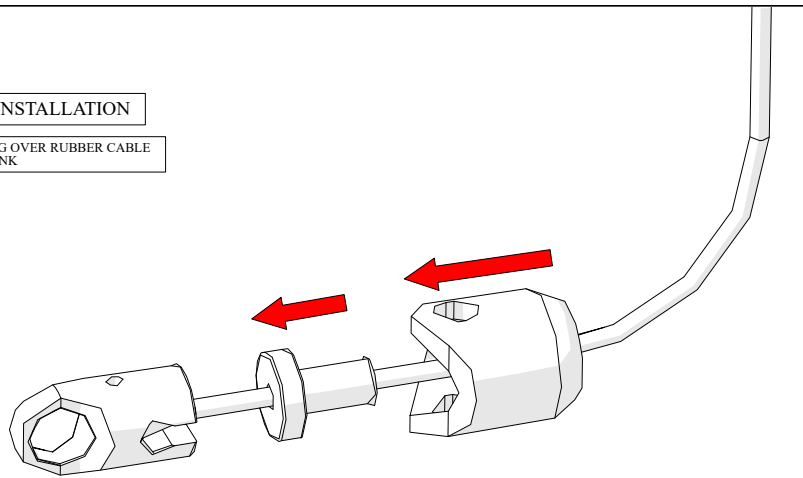


CABLE STOPPER INSTALLATION


SECURE CABLE END LINK AND HOUSING WITH (QTY 2) 5MM X 8MM L SOCKET HEAD CAP SCREWS

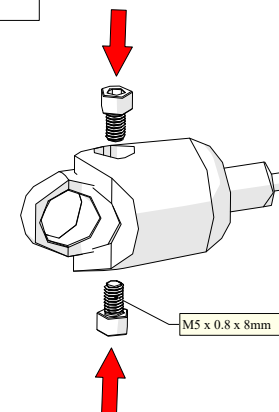

WHEN ADJUSTED PROPERLY, CABLE STOPPER
SHOULD NOT CONTACT PULLIES.
CABLE AJUSTMENT INSTRUCTIONS ON FOLLOWING PAGE

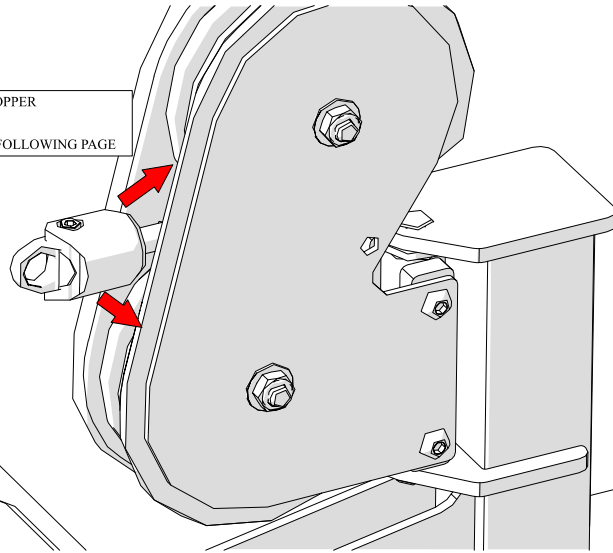

CABLE TENSION ADJUSTMENTS MAY BE MADE
BY ADJUSTING THE THREAD ENGAGEMENT ON
CABLE RETAINER.
LOOSEN JAM NUT AND SCREW RETAINER IN
(CLOCK WISE) TO INCREASE CABLE TENSION.
TIGHTEN JAM NUT WHEN FINISHED.

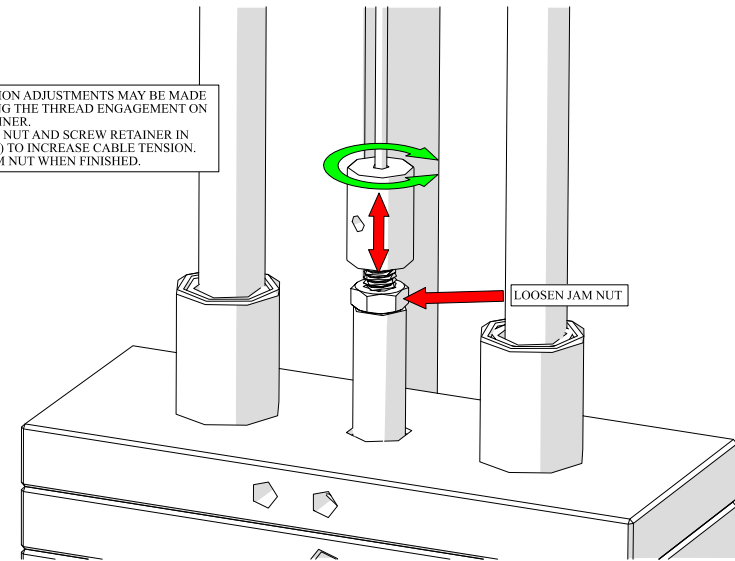

MAKE SURE ALL HARDWARE IS TIGHT
AND TEST ALL FUNCTIONS BEFORE
OPERATING EQUIPMENT

