



9017 RELOADED ISO INCLINE PRESS


FINAL ASSEMBLY GUIDE

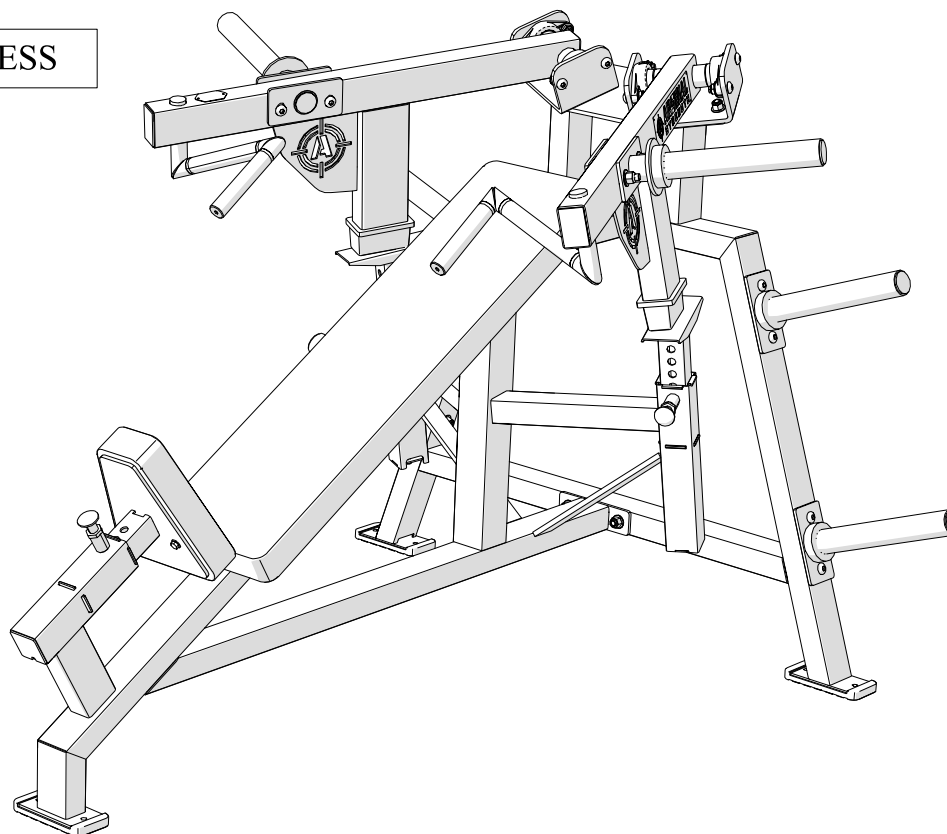

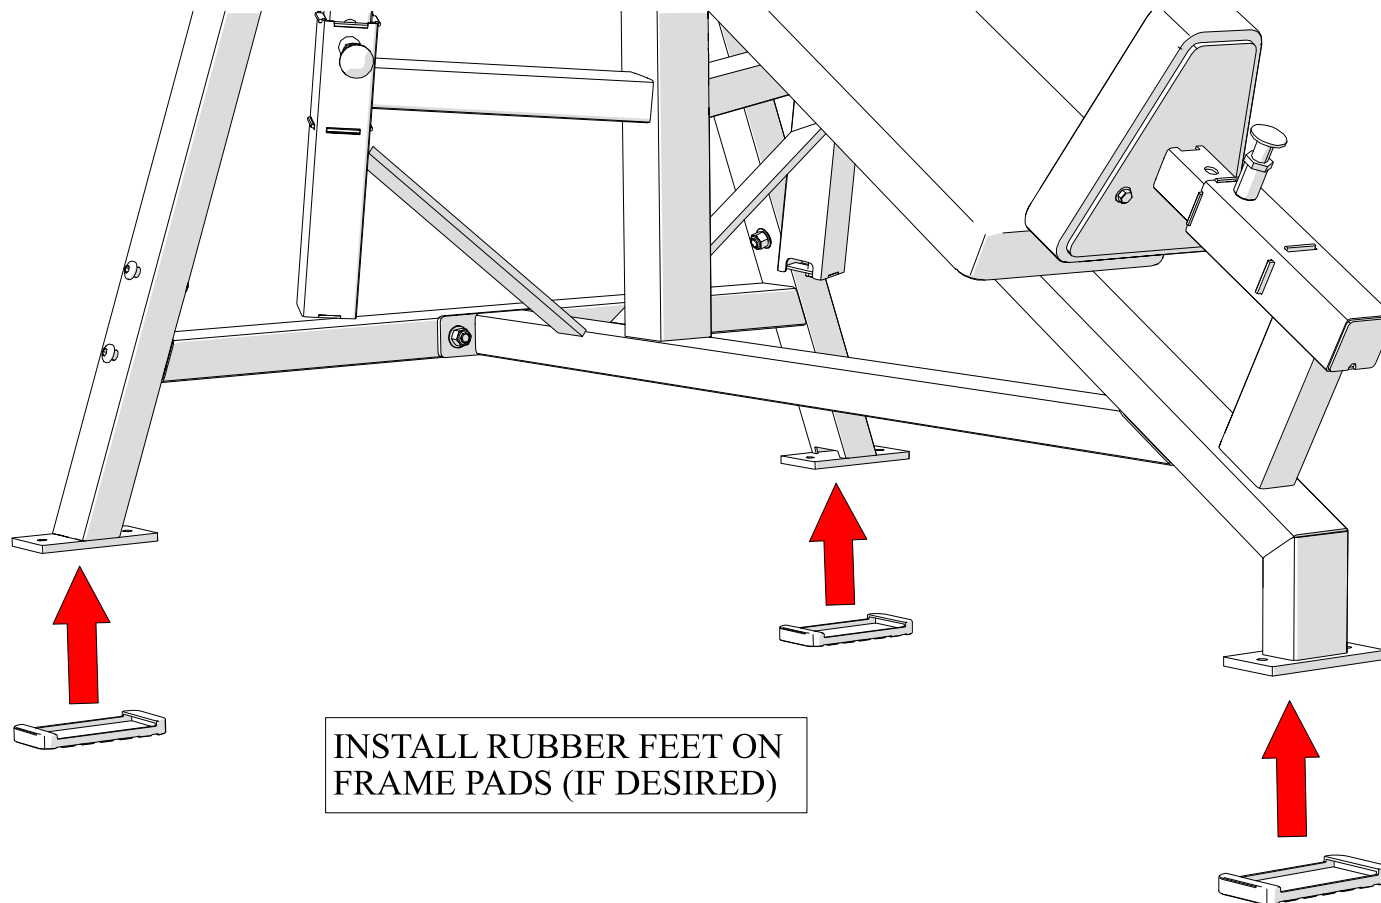


INSTALL RUBBER FEET ON
FRAME PADS (IF DESIRED)


UNWRAP AND SET ASIDE ALL PARTS
NOT ATTACHED TO MACHINE

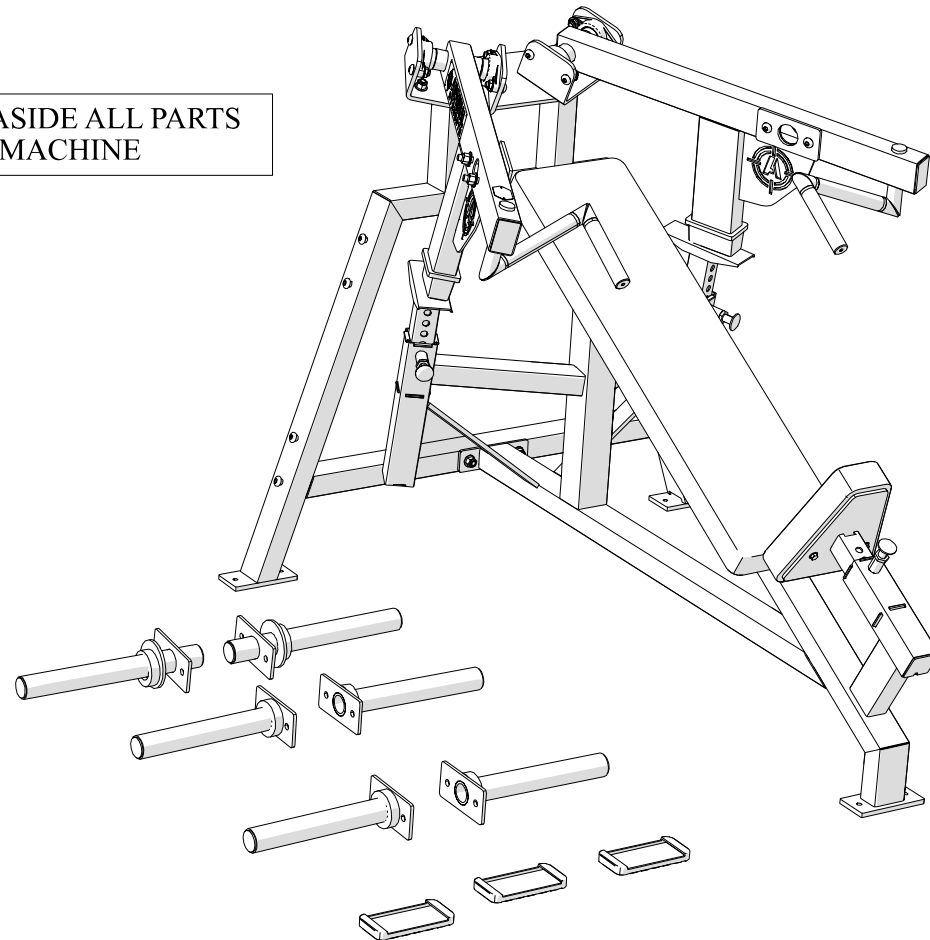


REMOVE (QTY 2) 1/2"-13 X 3"
BUTTON HEAD SCREWS, WASHERS,
NYLOCK NUTS, AND BACKING PLATE
FROM WORK ARM

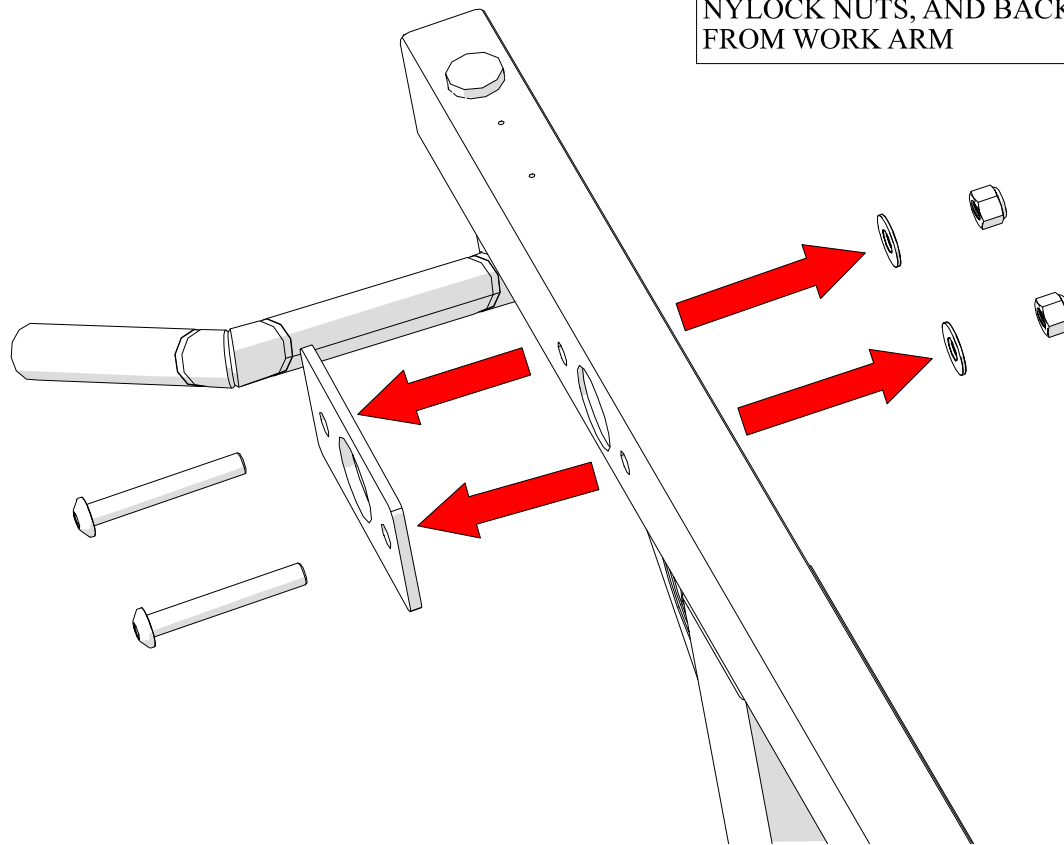


POSITION WEIGHT HORN AS SHOWN
AND SECURE WITH SCREWS, WASHERS,
AND NYLOCK NUTS REMOVED IN
PREVIOUS STEP

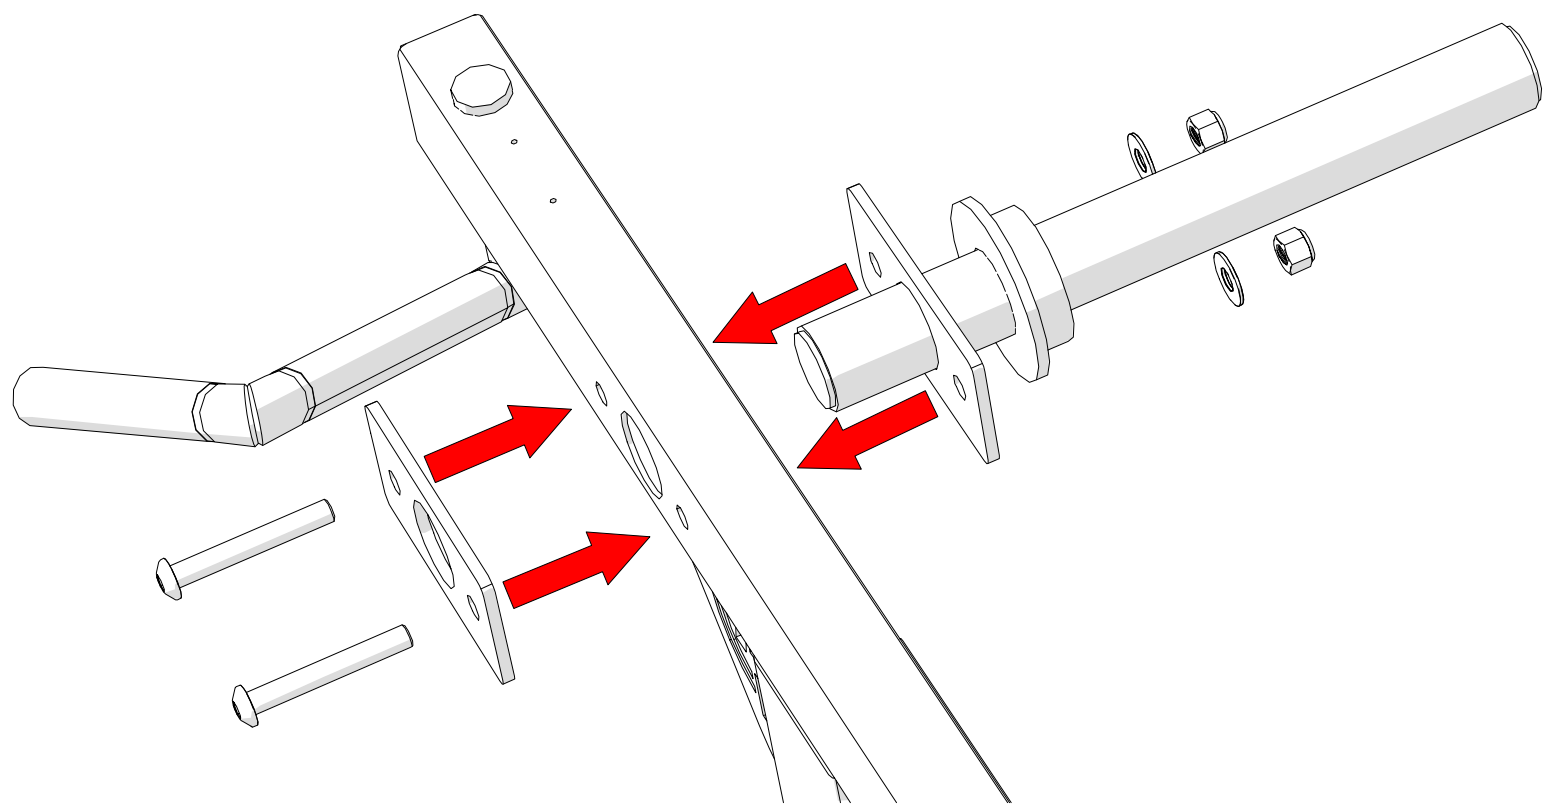


REPEAT ON OPPOSITE SIDE

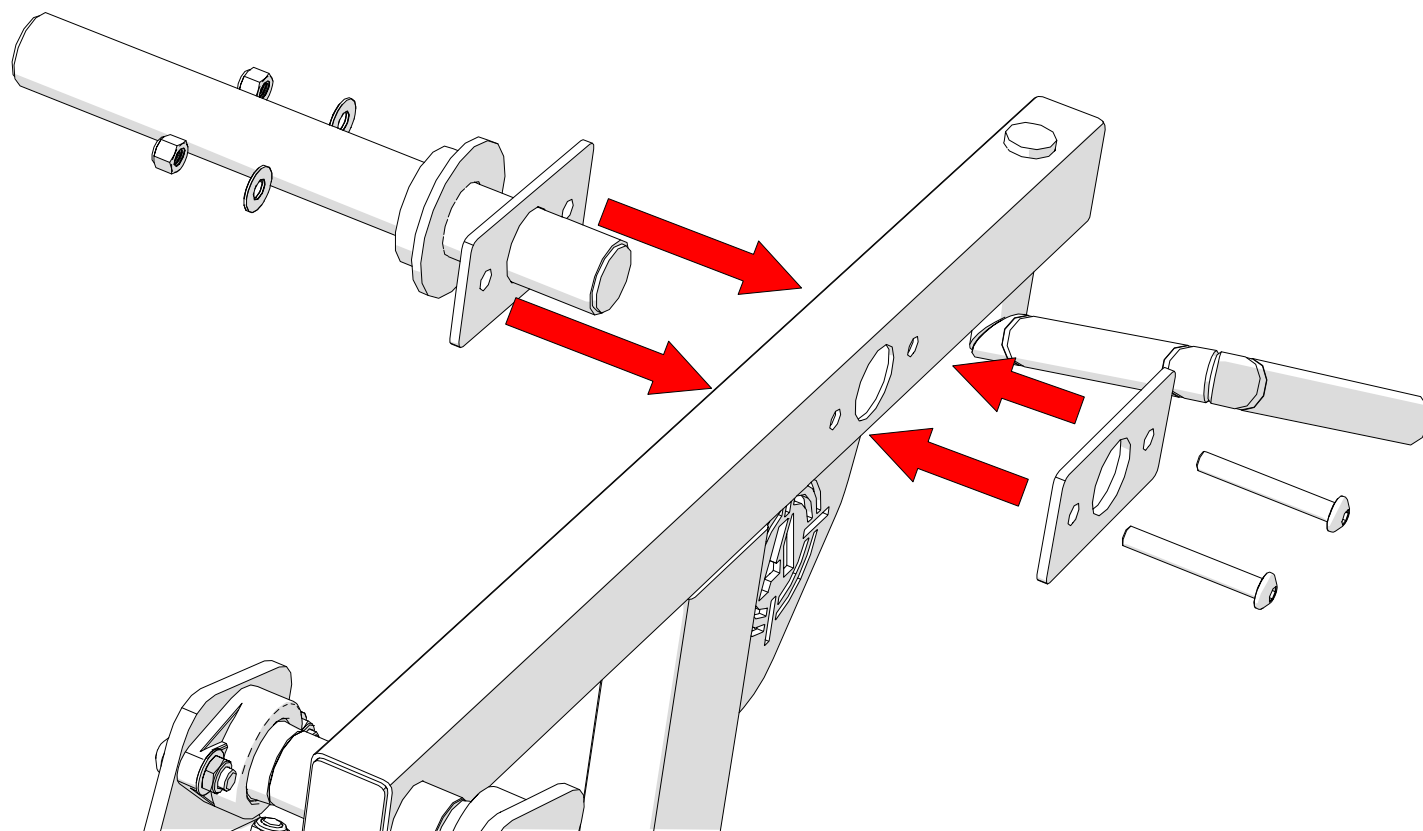

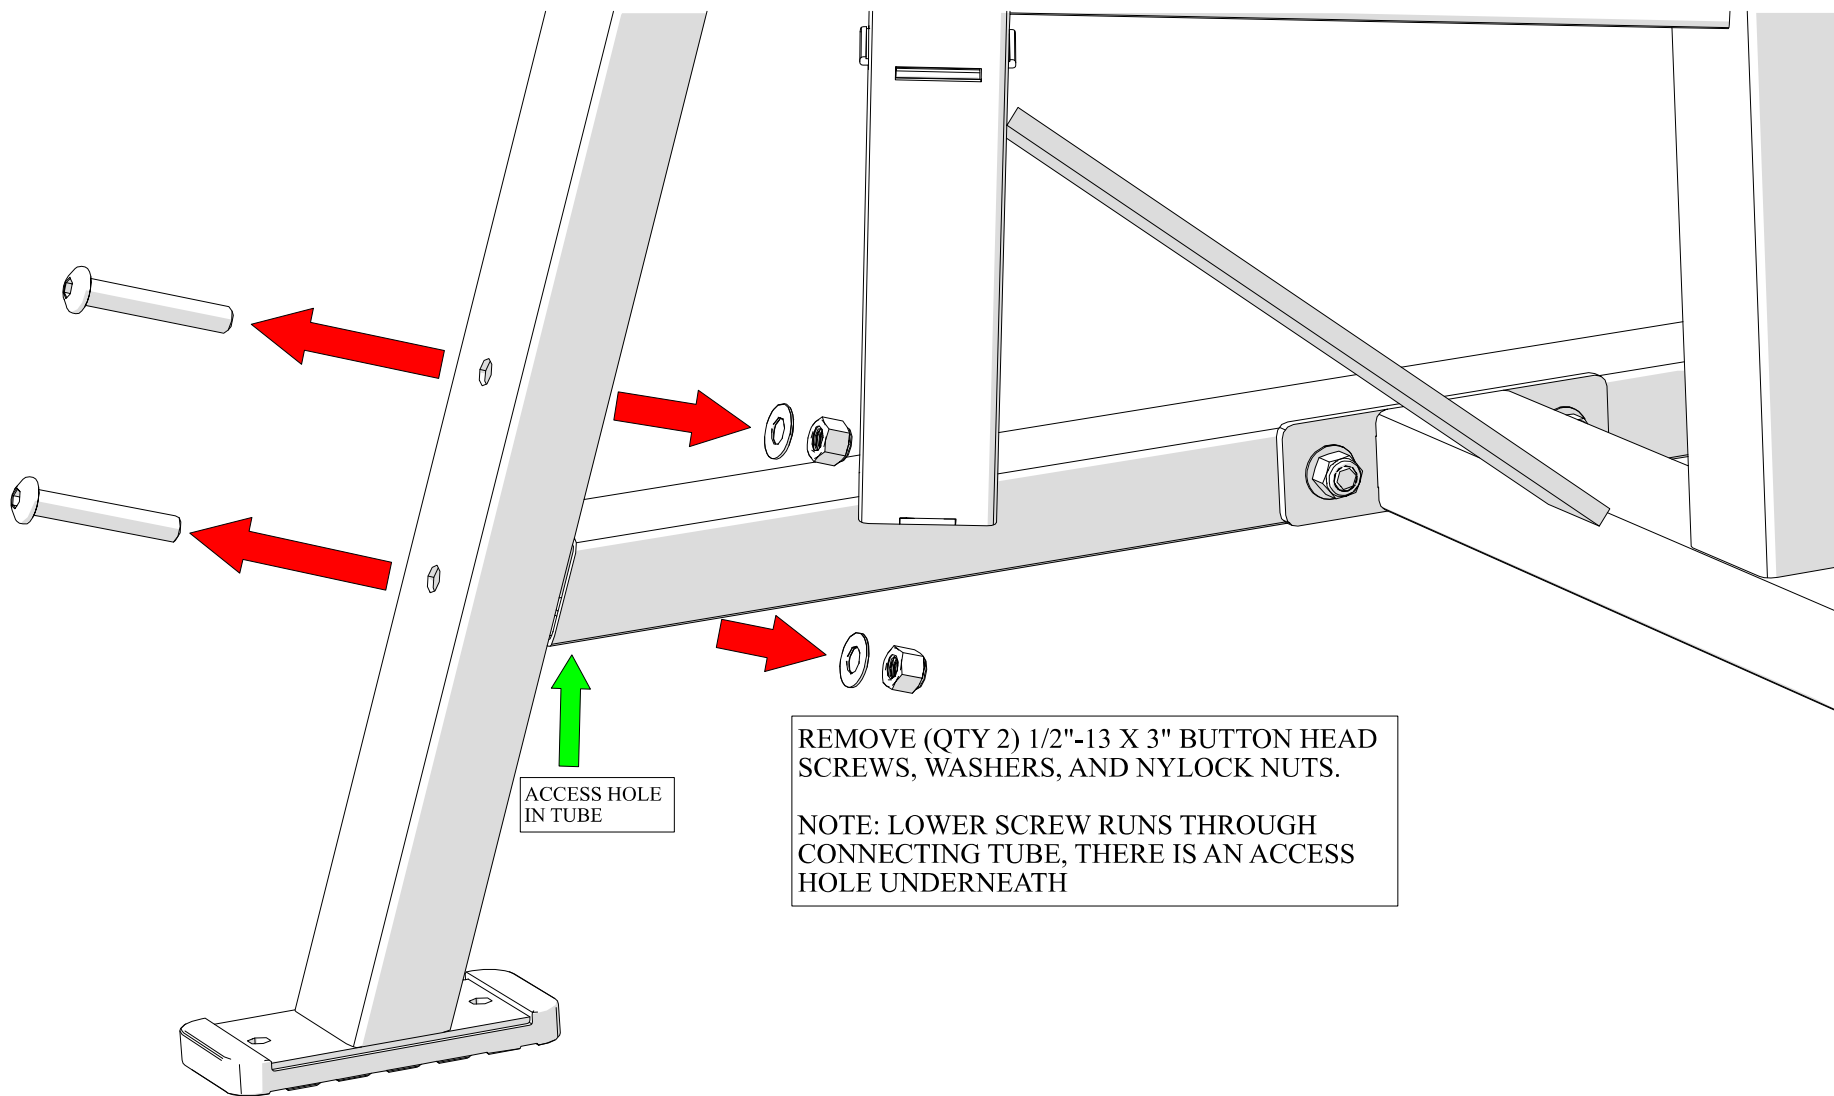



POSITION WEIGHT HORN AS SHOWN
AND SECURE WITH SCREWS, WASHERS,
AND NYLOCK NUTS PREVIOUSLY REMOVED.

NOTE: WEIGHT HORNS WILL HAVE A SLIGHT
UPWARD ANGLE WHEN INSTALLED CORRECTLY

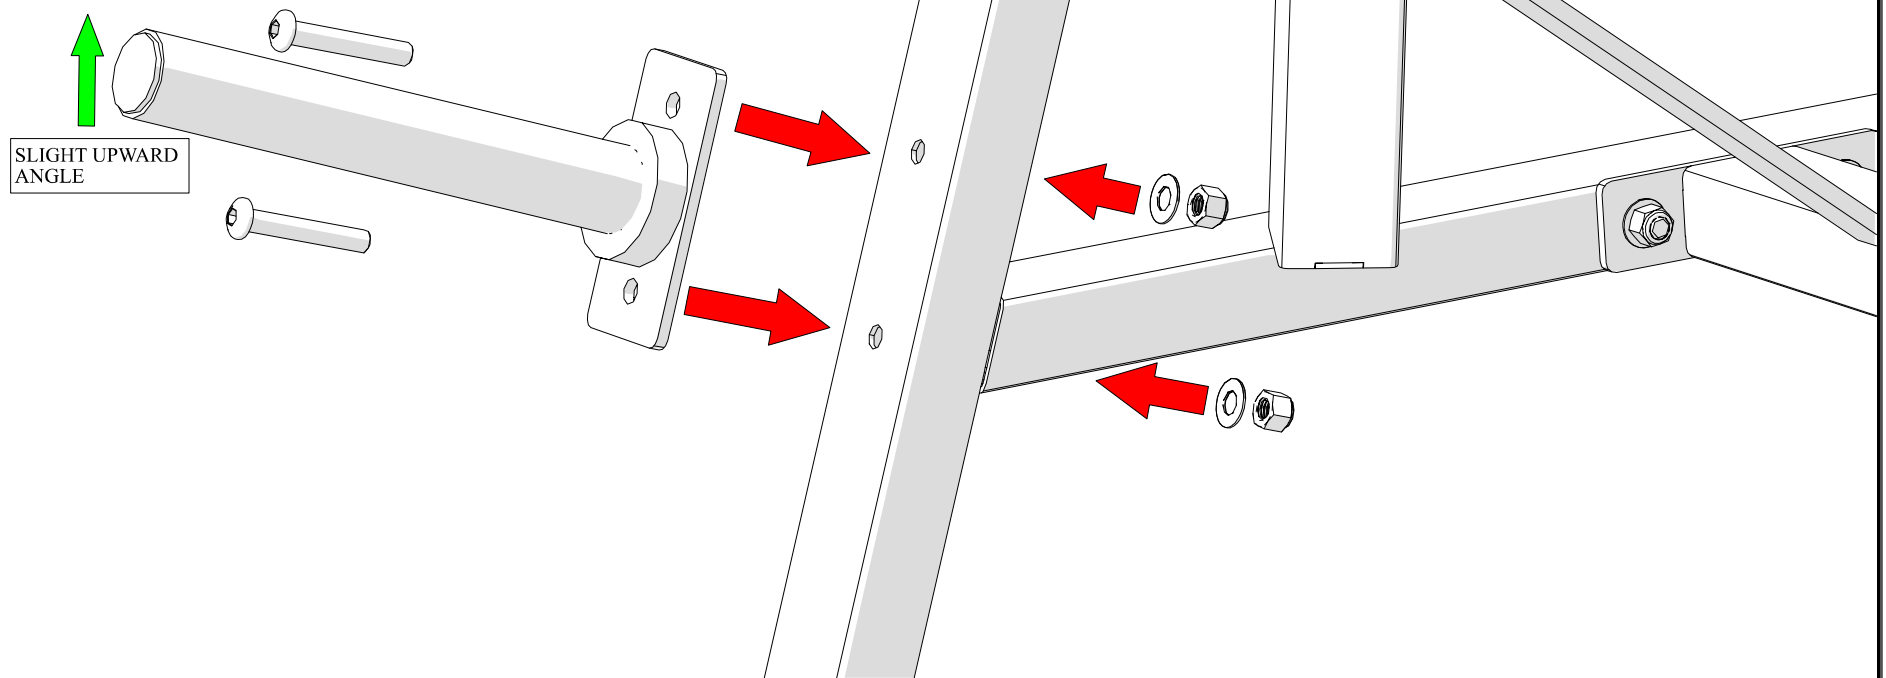


REPEAT WEIGHT HORN INSTALLATION
ON OPPOSITE SIDE

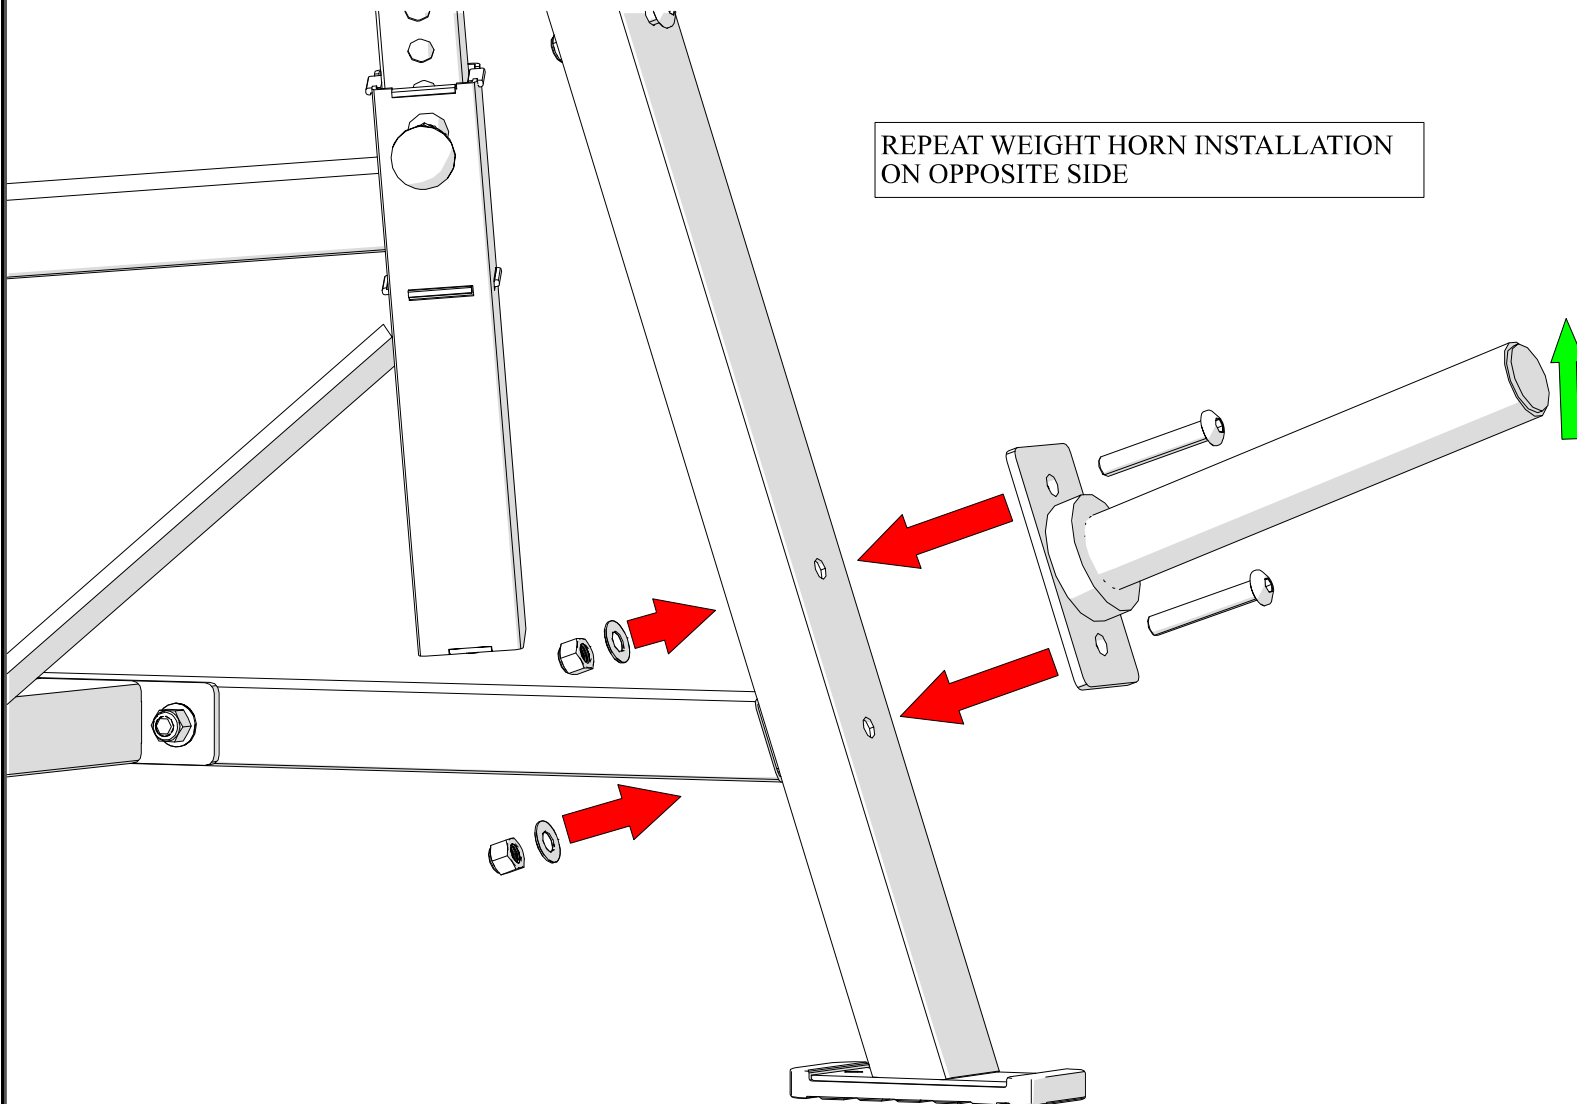

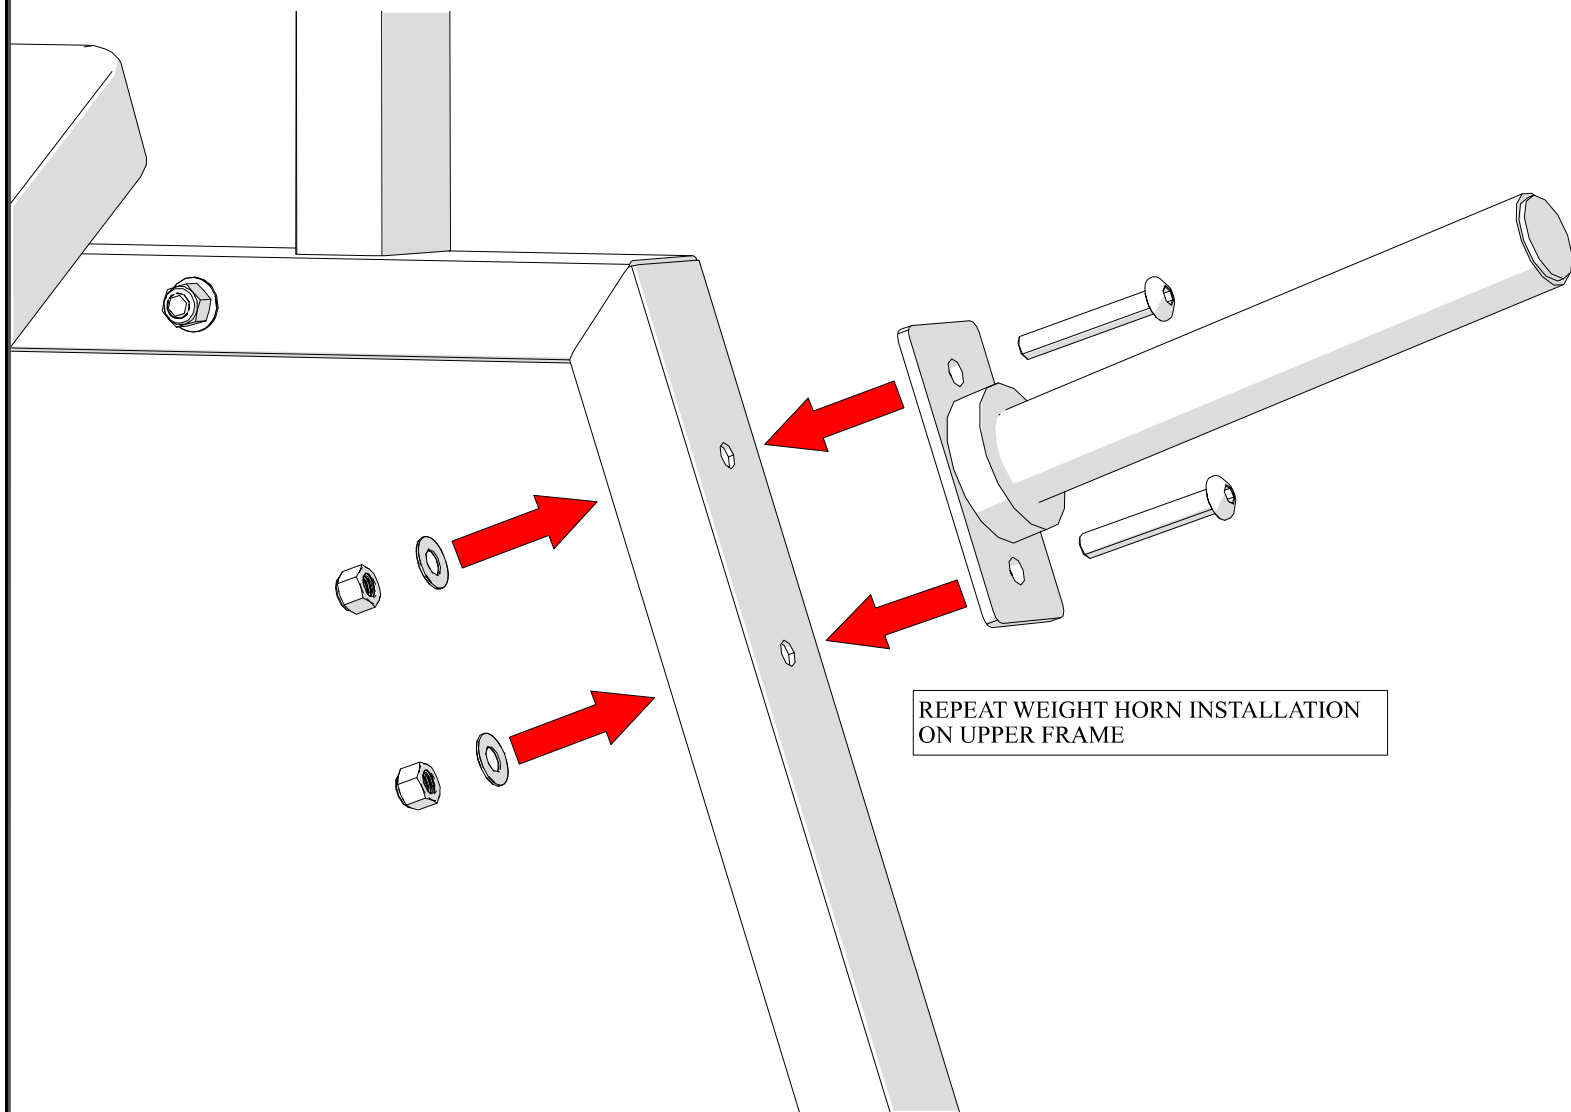

REPEAT WEIGHT HORN INSTALLATION
ON UPPER FRAME

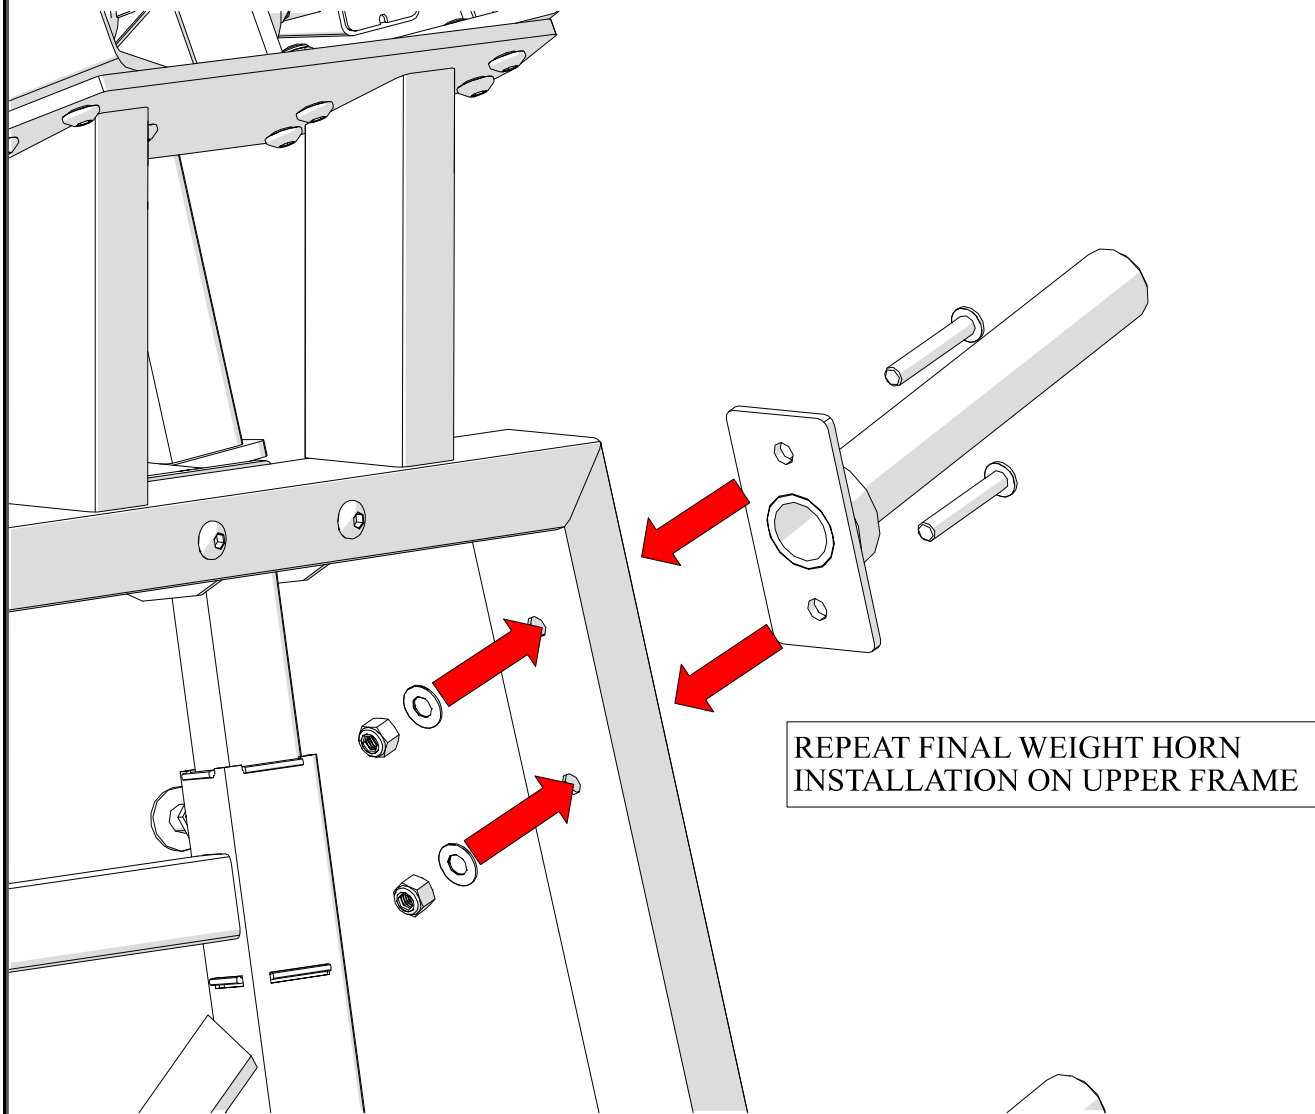

MAKE SURE ALL HARDWARE IS
TIGHT AND TEST ALL FUNCTIONS
BEFORE OPERATING EQUIPMENT

