



9074 RELOADED STANDING CHEST PRESS


FINAL ASSEMBLY GUIDE

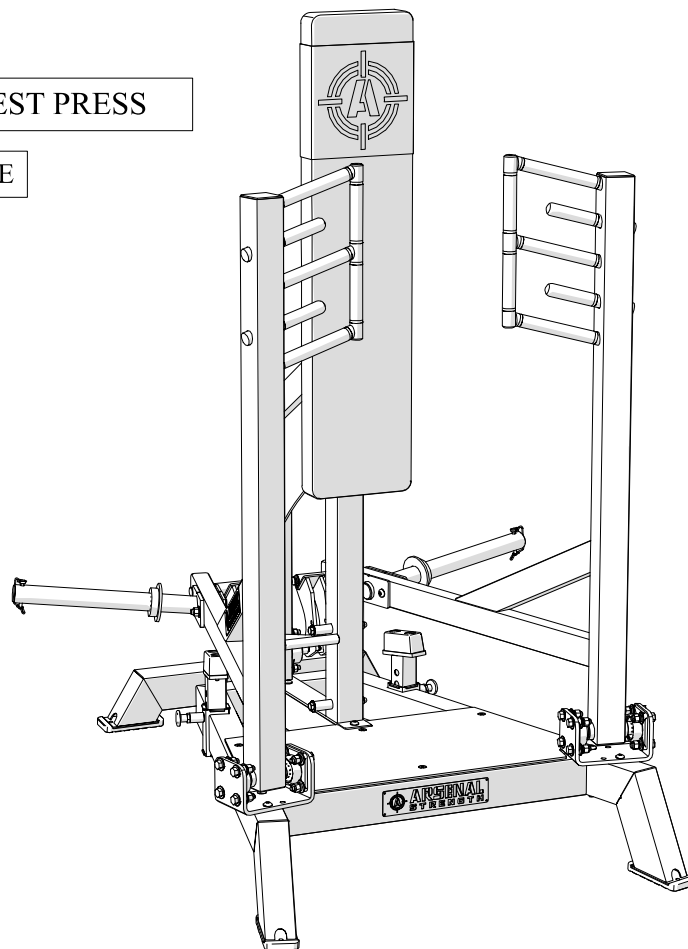


UNWRAP AND SET ASIDE ALL
LOOSE PARTS

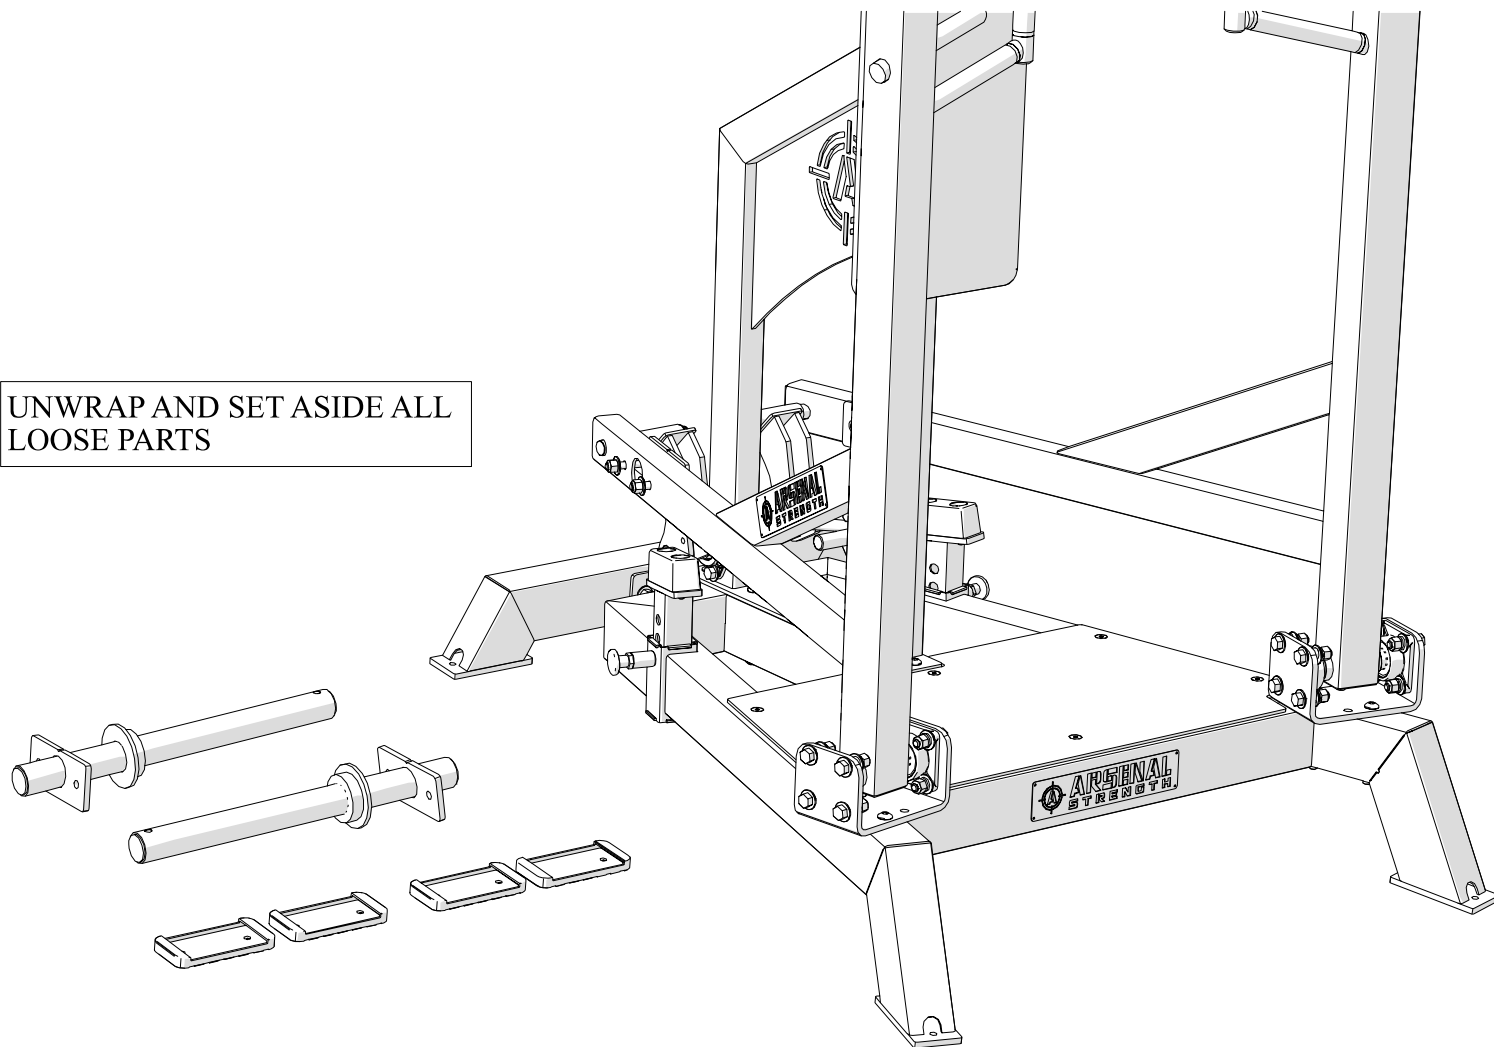

INSTALL RUBBER FEET ON METAL
FRAME PADS (IF DESIRED)

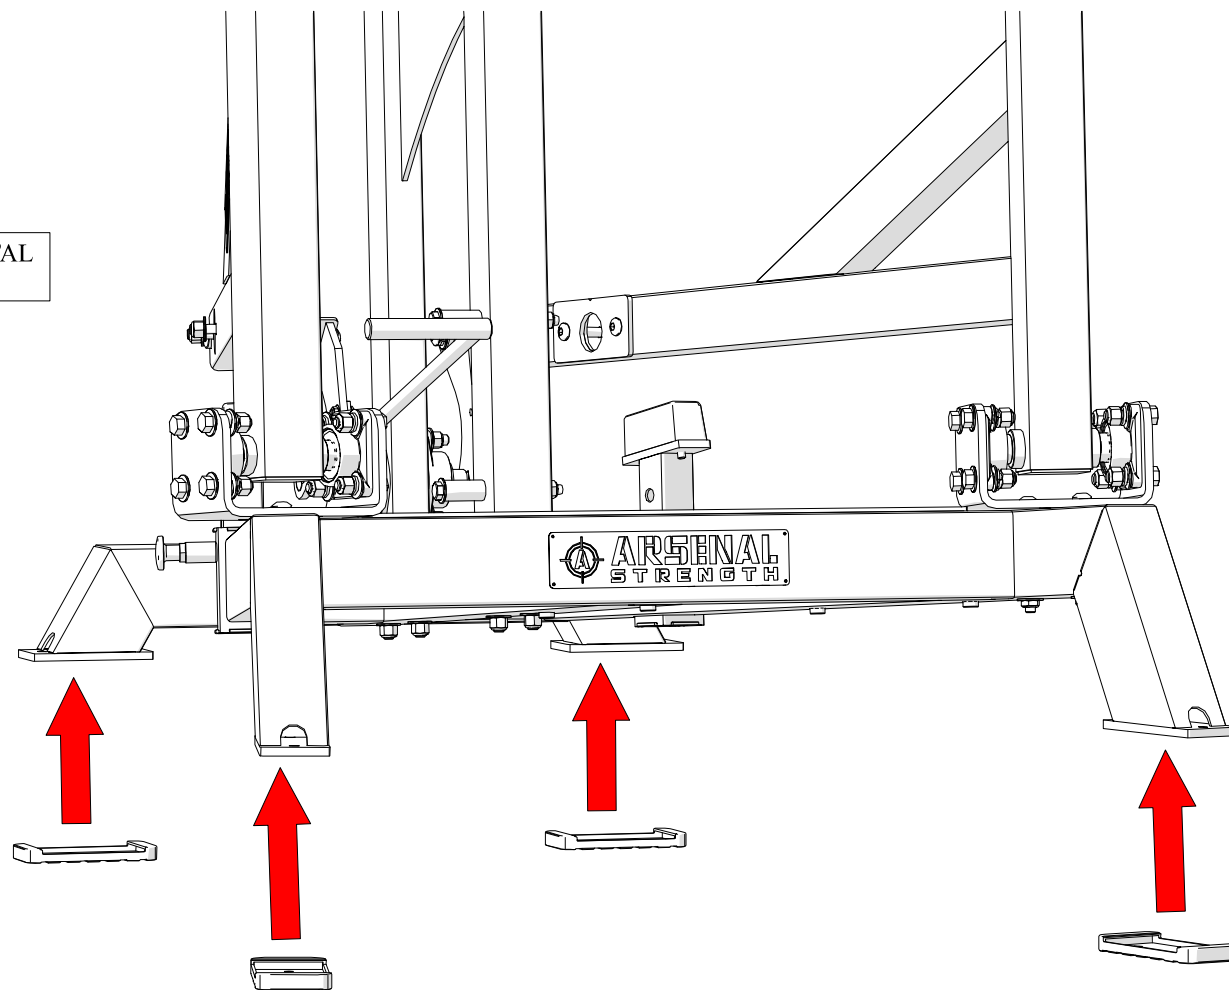


AT REAR OF WORK ARM, REMOVE
(QTY 2) 1/2"-13 NYLOCK NUTS AND
WASHERS

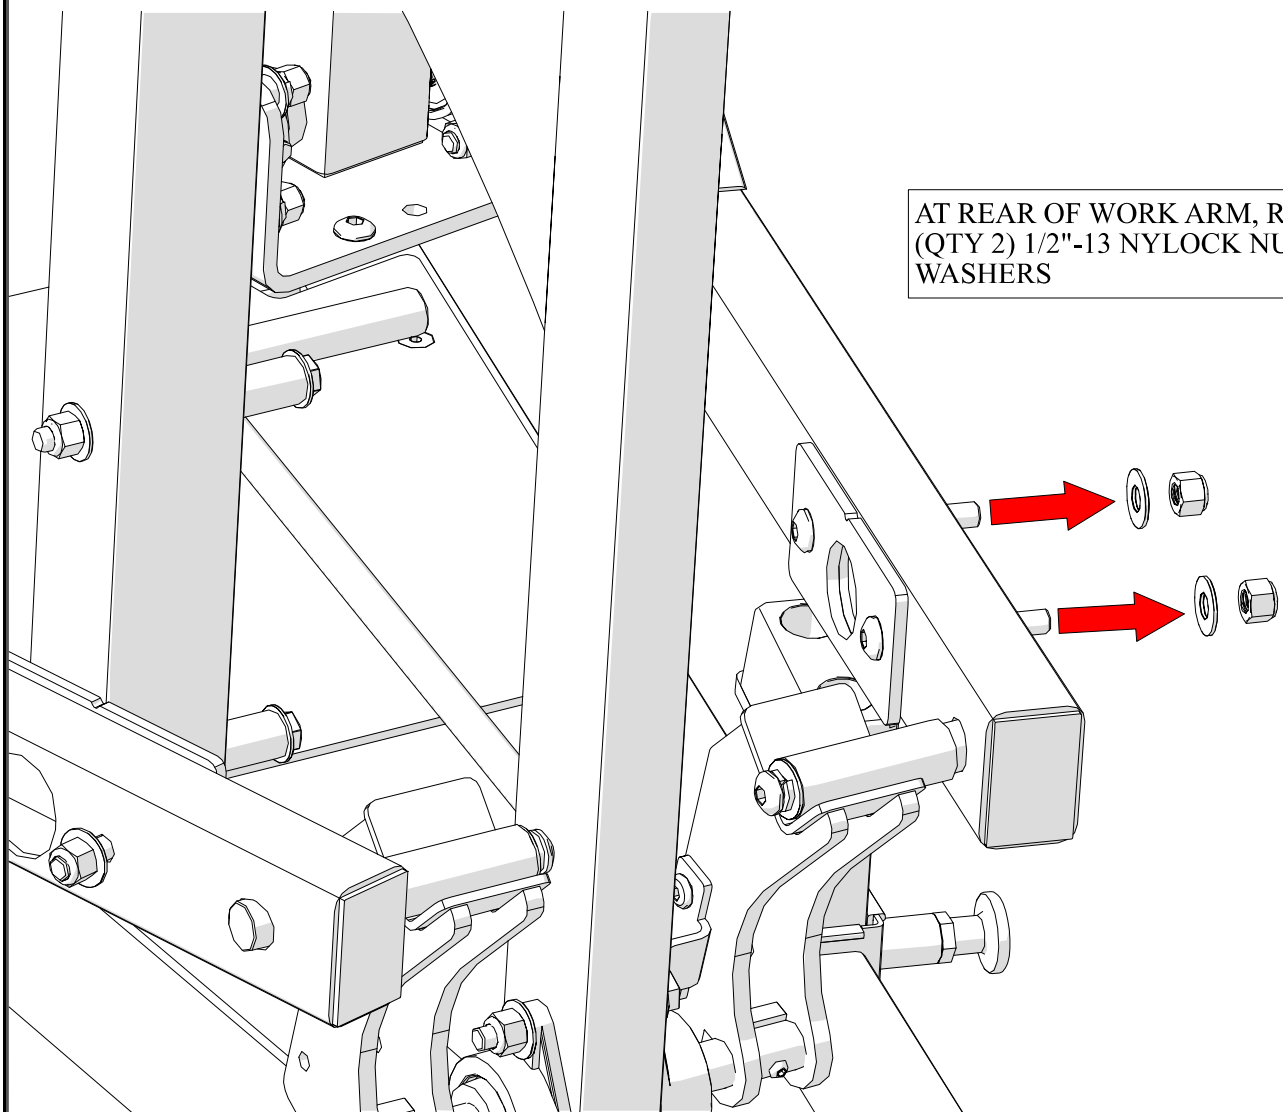


POSITION WEIGHT HORN AS SHOWN
AND SECURE WITH NYLOCK NUTS AND
WASHERS PREVIOUSLY REMOVED.

NOTCHES ON WEIGHT HORN AND BACKING
PLATE MUST FACE UP FOR PROPER WEIGHT
HORN ALIGNMENT

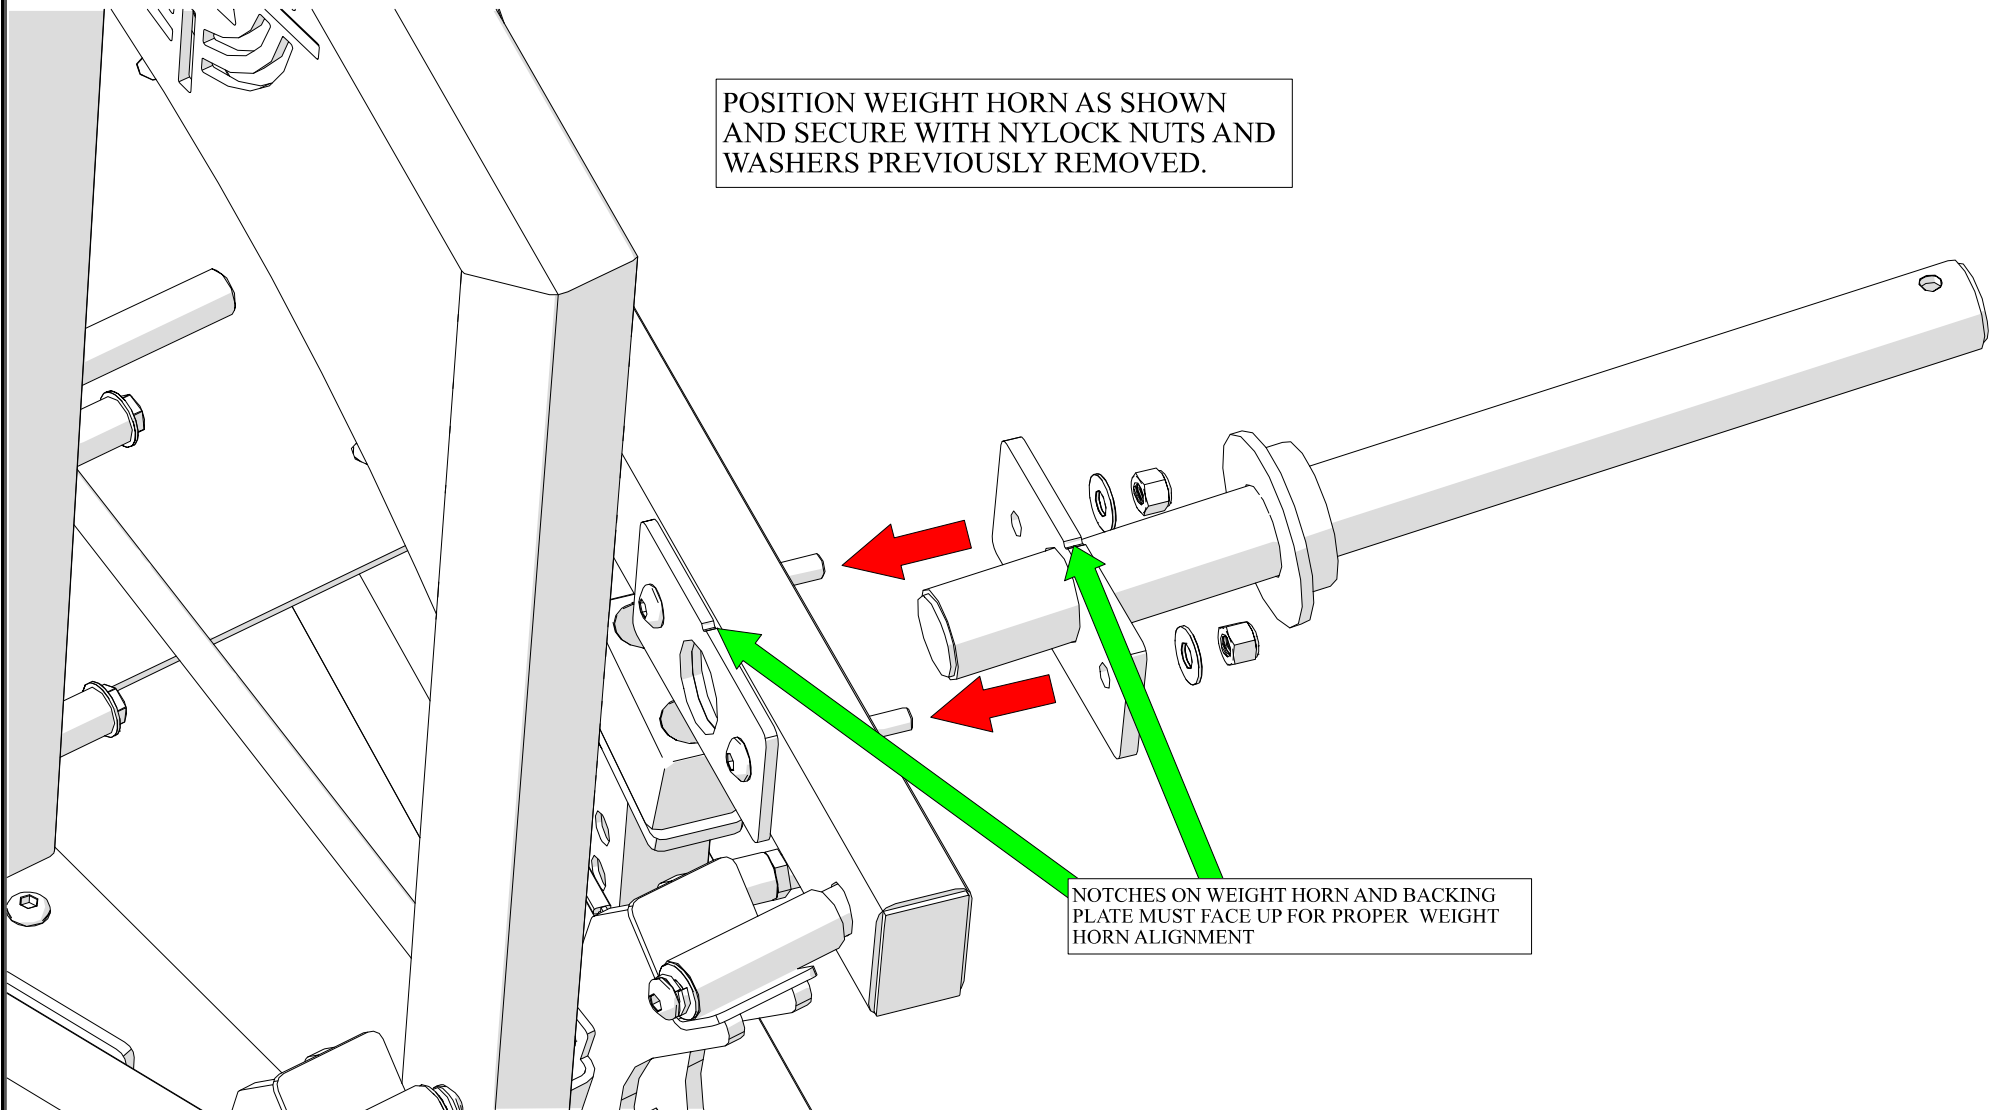

REPEAT WEIGHT HORN INSTALLATION
ON OPPOSITE SIDE

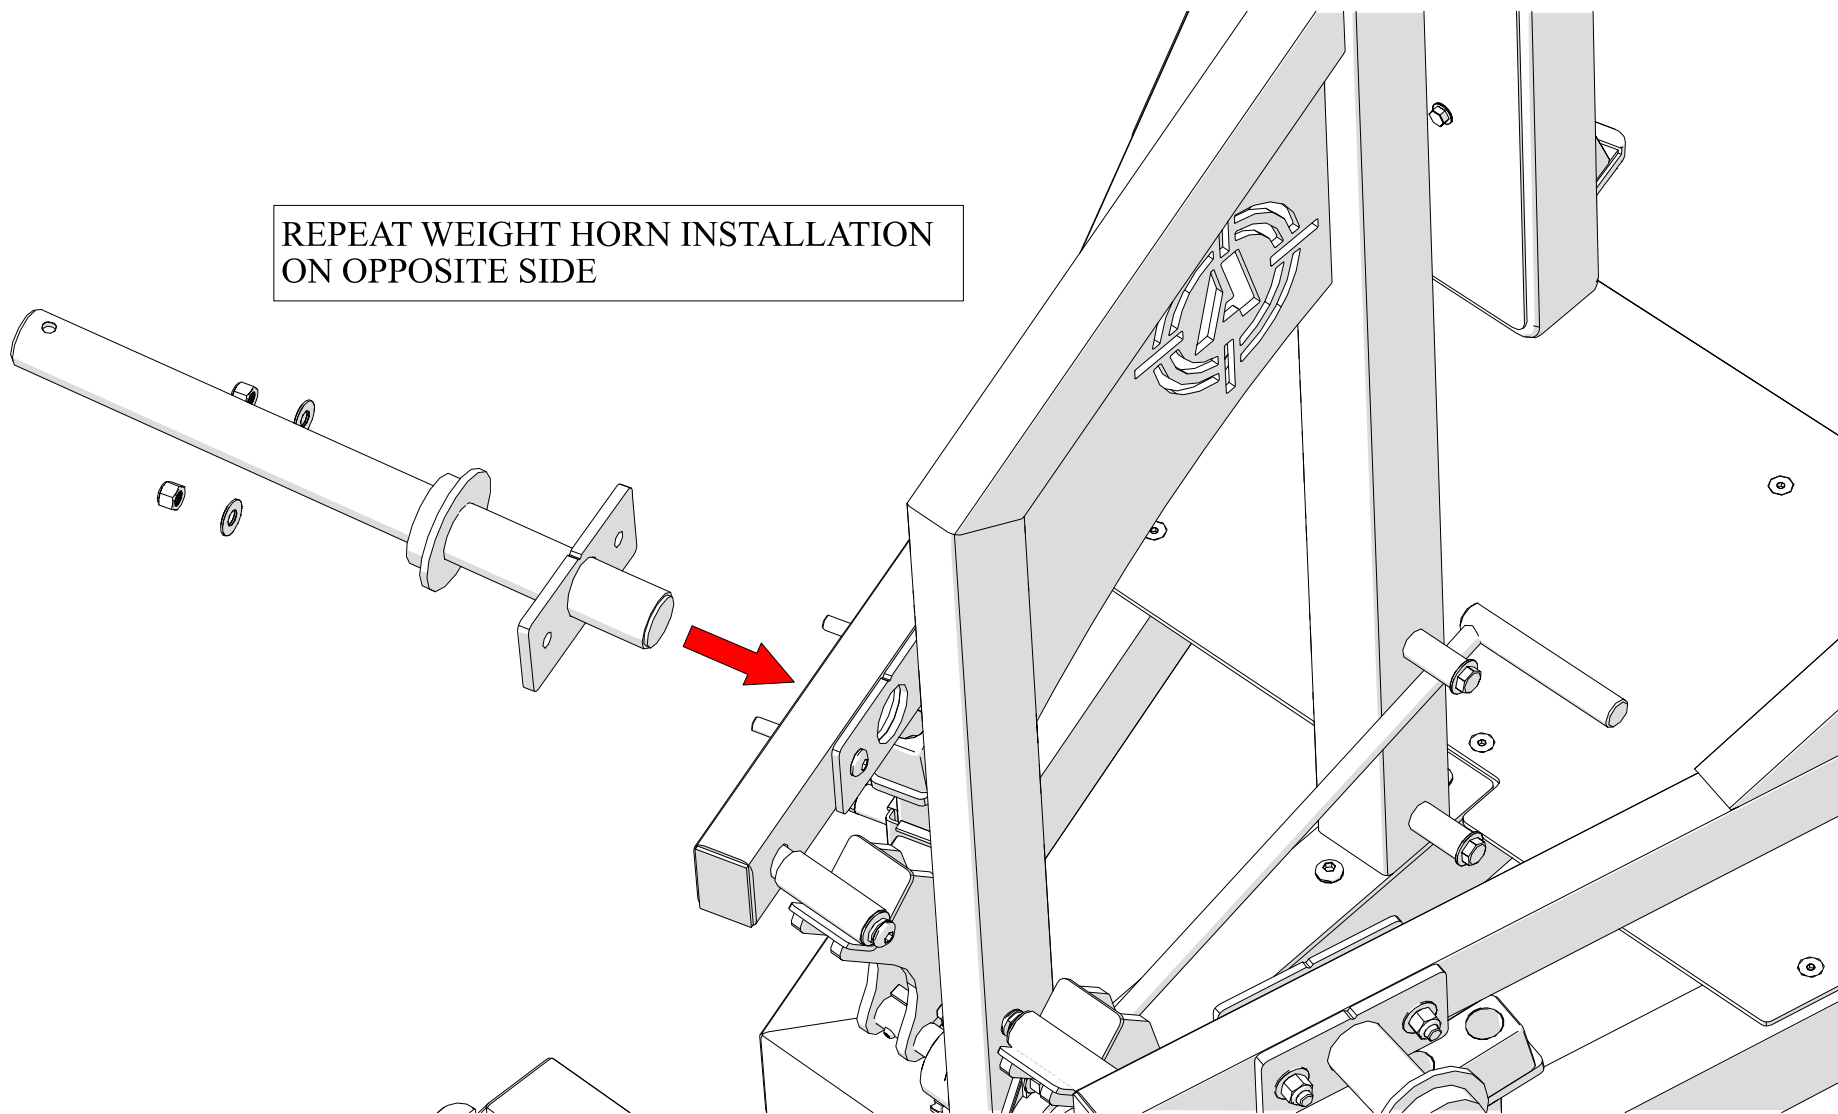

MAKE SURE ALL HARDWARE IS TIGHT AND
TEST ALL FUNCTIONS BEFORE OPERATING
EQUIPMENT

