



8005 CONVERGING CHEST PRESS


FINAL ASSEMBLY GUIDE

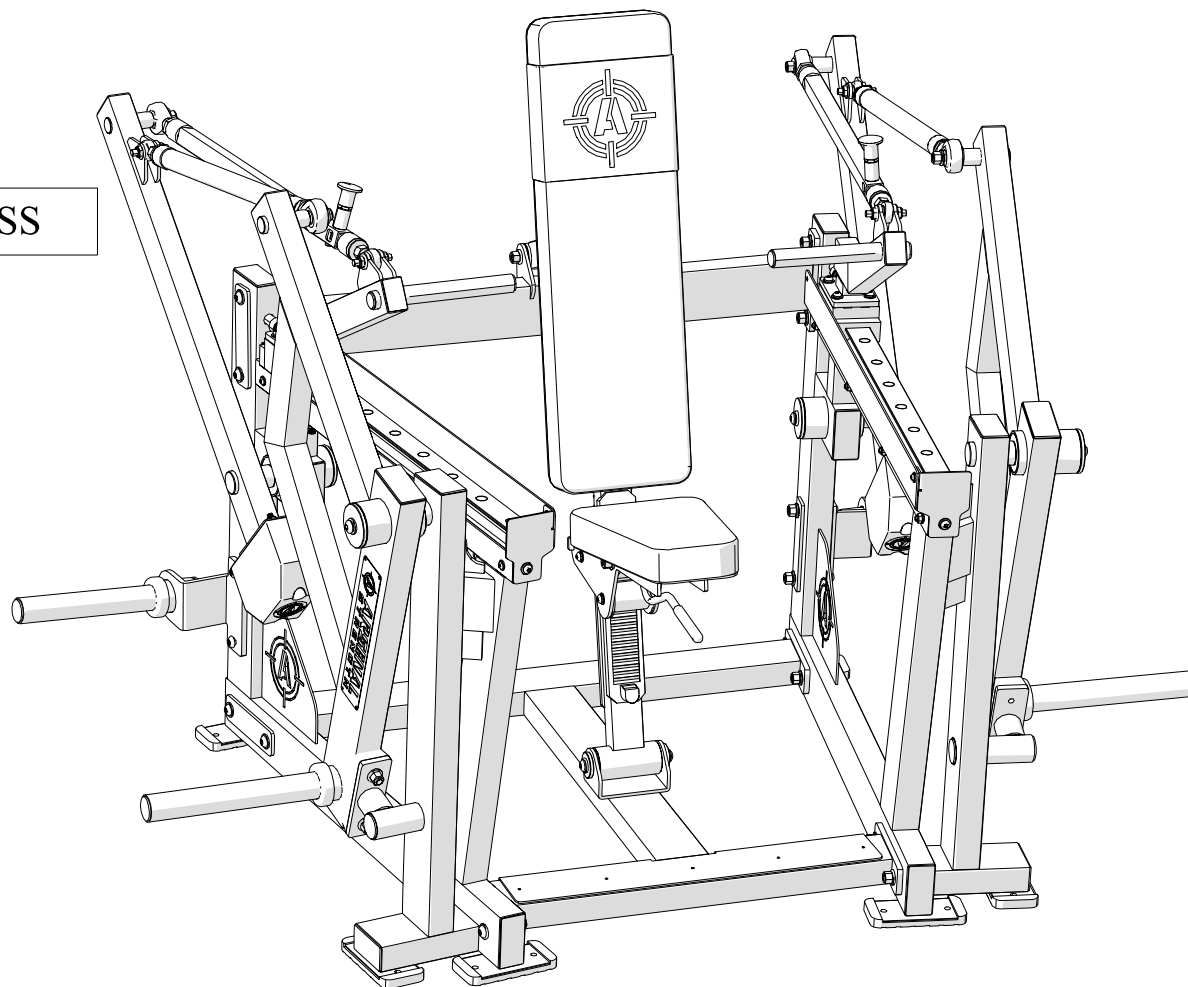


UNWRAP AND SET ASIDE
ALL LOOSE PARTS

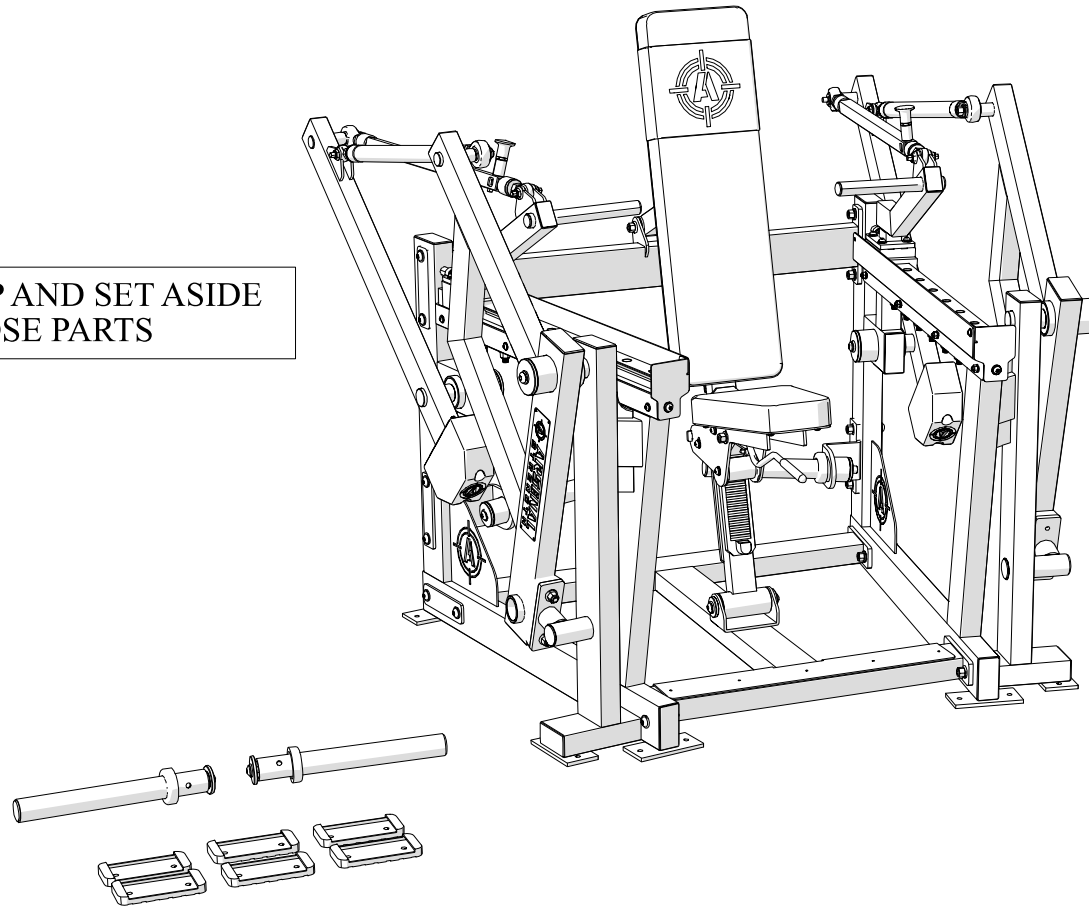


INSTALL RUBBER FEET ON METAL
FRAME PADS (OPTIONAL)

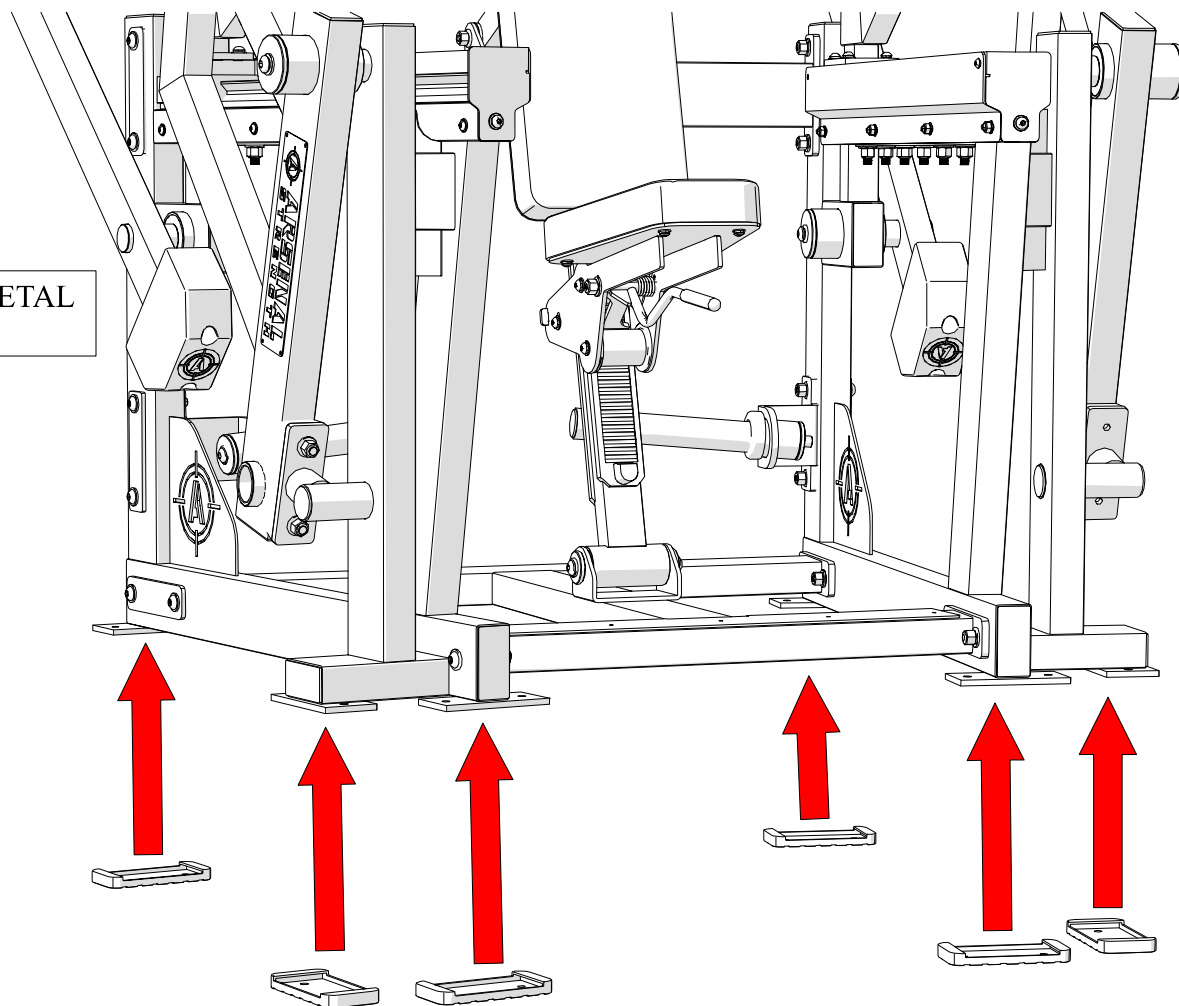


POSITION WEIGHT HORN AS SHOWN AND
SECURE USING 1/2"-13 X 1.25" BUTTON
HEAD SCREW, WASHER, AND BACKING
PLATE

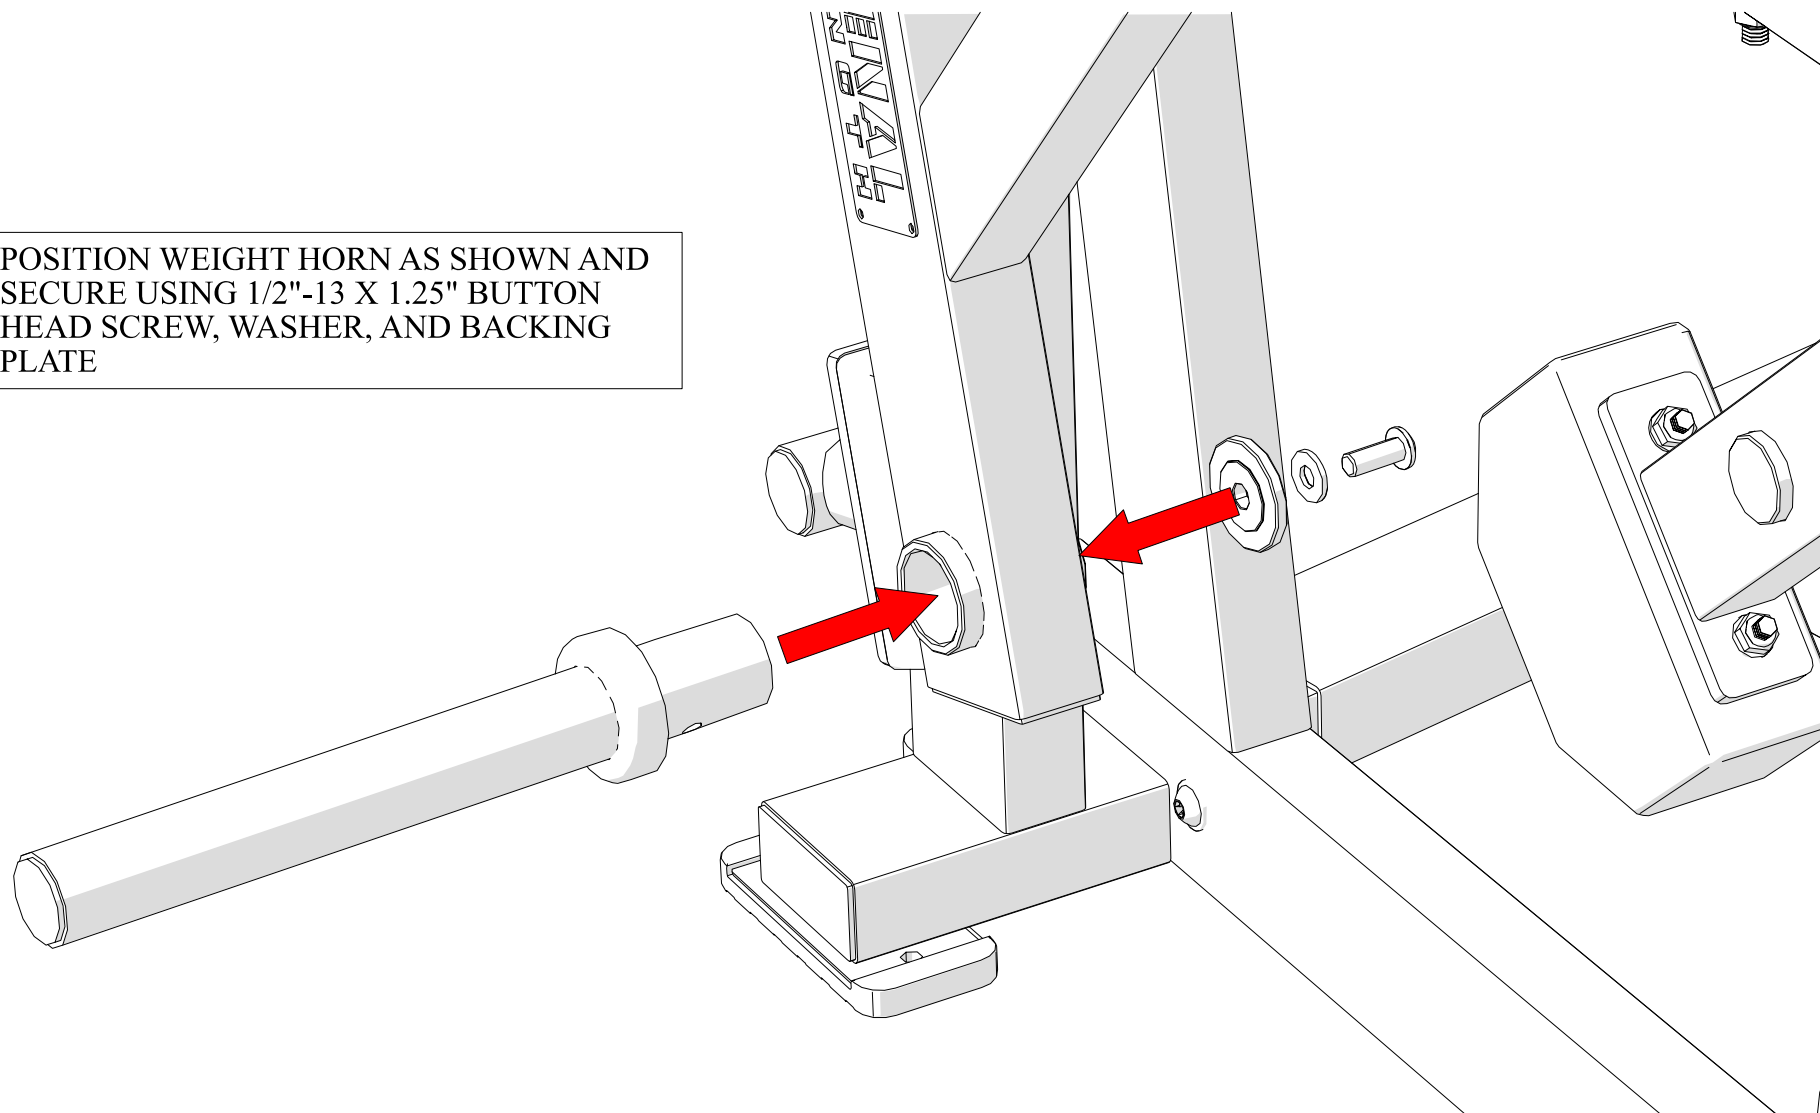


REPEAT WEIGHT HORN INSTALLATION
ON SECOND WORK ARM

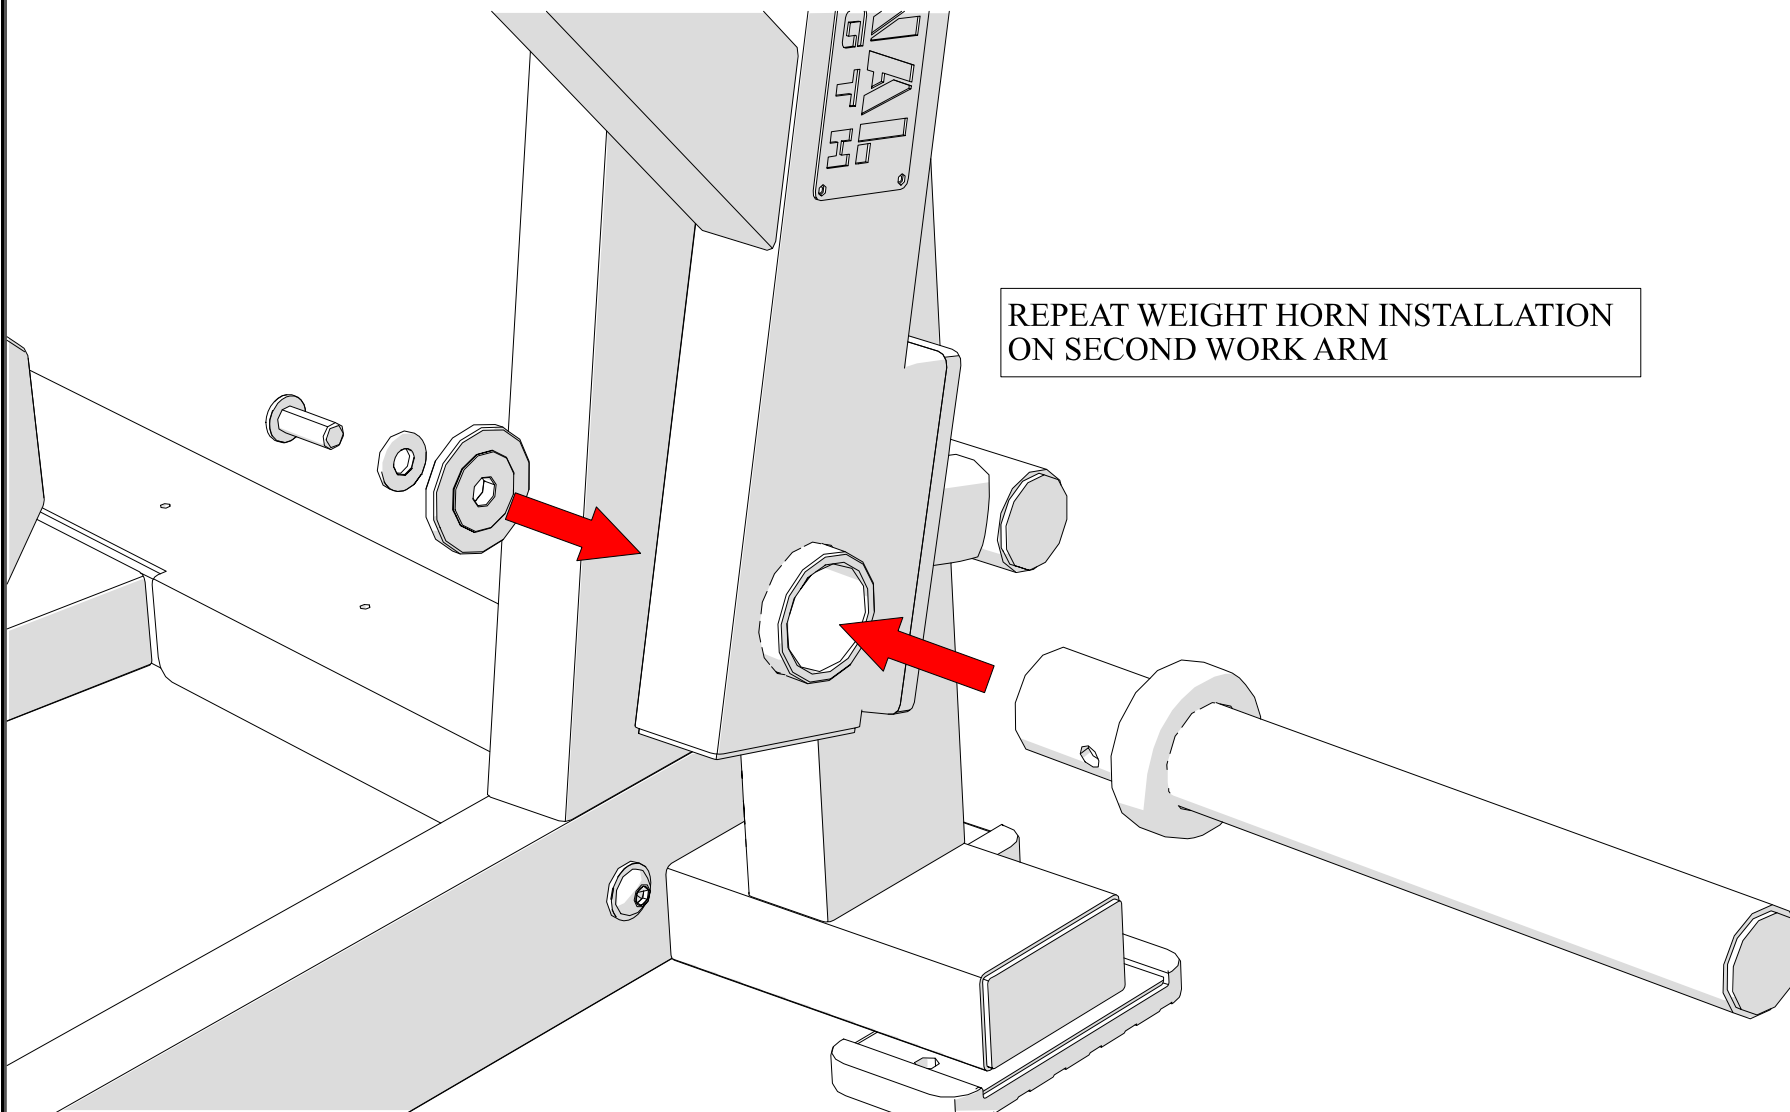


AT REAR OF MACHINE, REMOVE (QTY 2) 1/2"-13 X 3"L
BUTTON HEAD SCREWS, WASHERS, NYLOCK NUTS,
BACKING PLATE, AND WEIGHT HORN ASSEMBLY

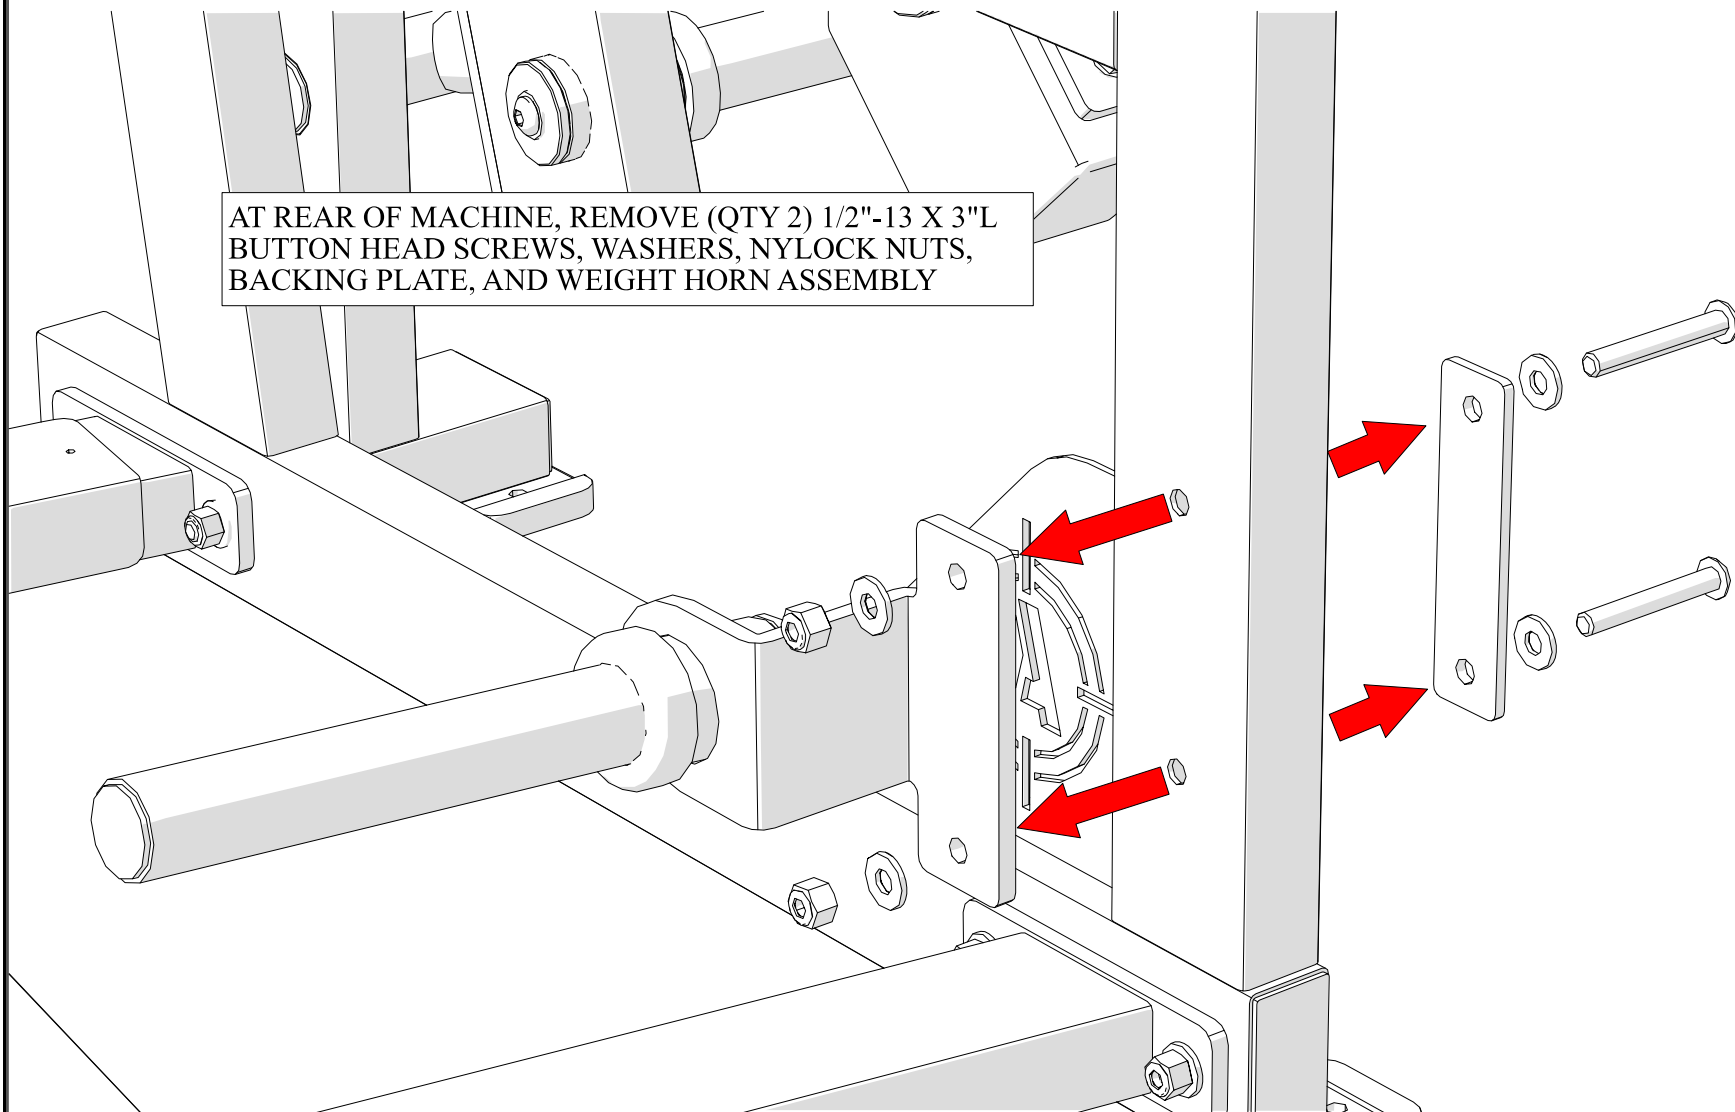

MOVE WEIGHT HORN AND BACKING PLATE
TO OPPOSITE SIDES AS SHOWN AND
SECURE WITH HARWARE PREVIOUSLY REMOVED

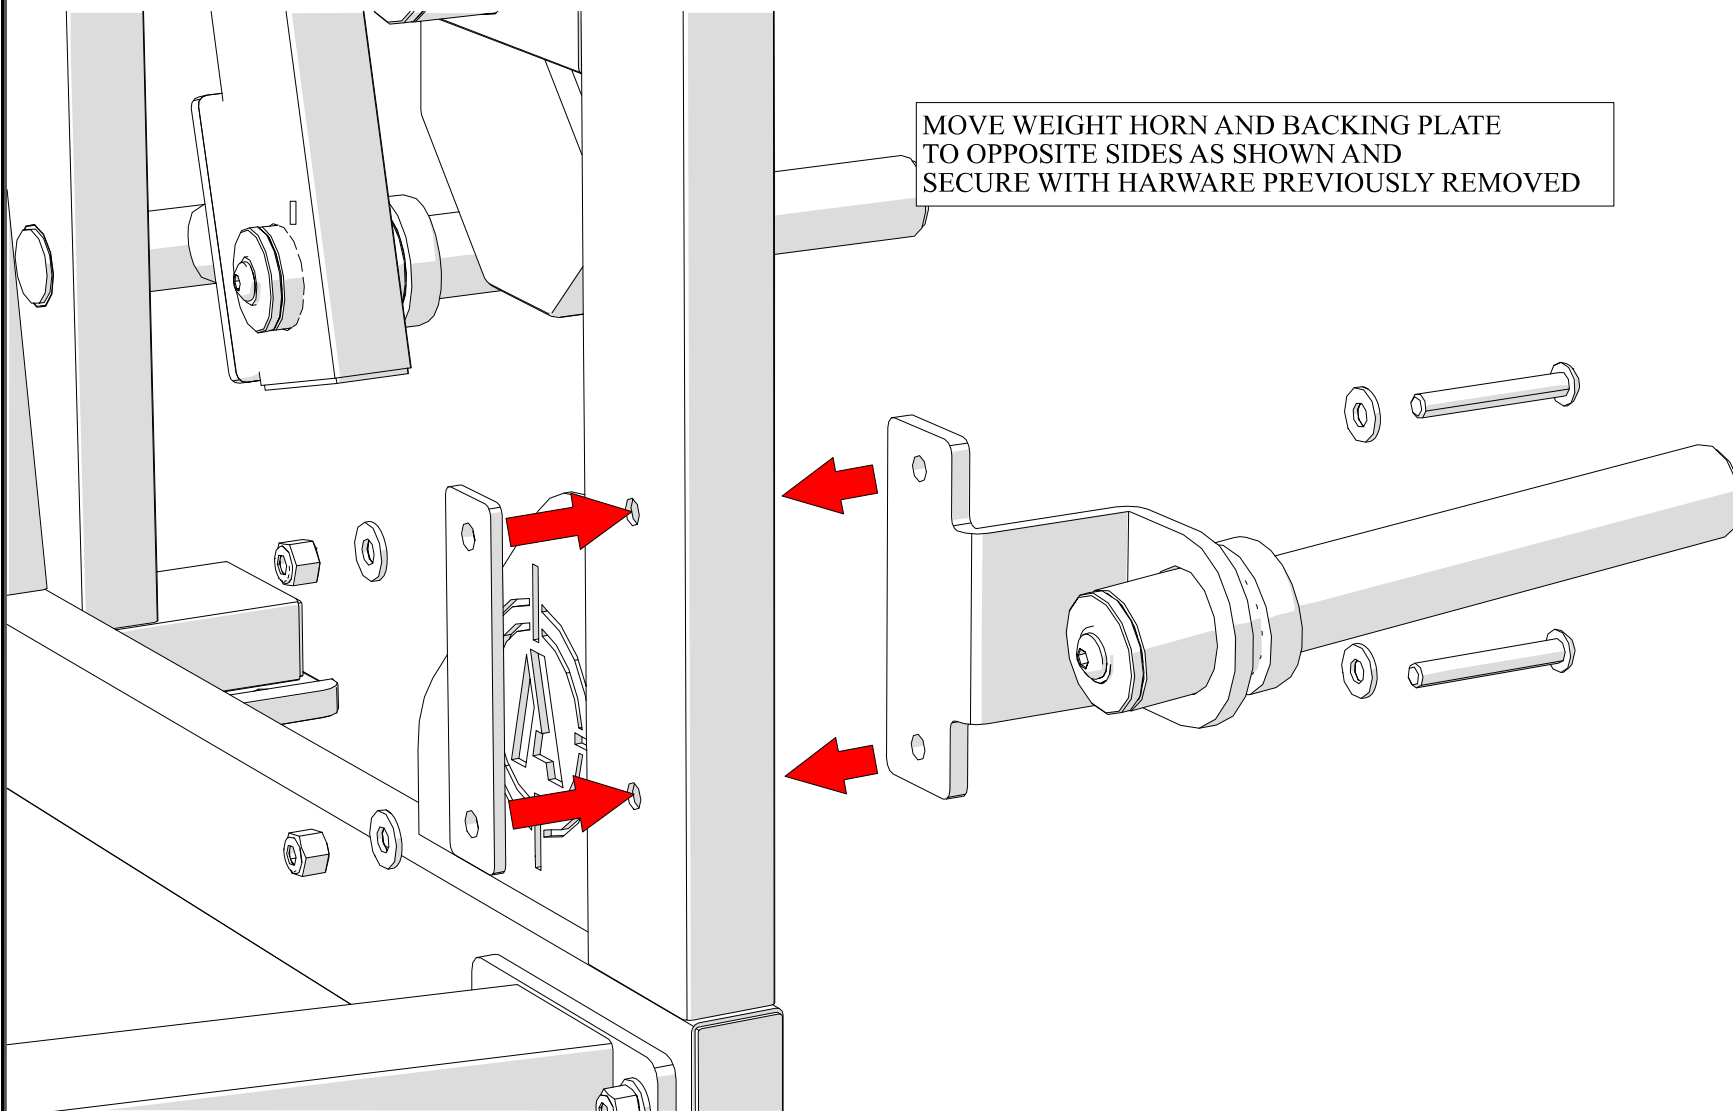

REPEAT WEIGHT HORN INSTALLATION
ON OPPOSITE SIDE

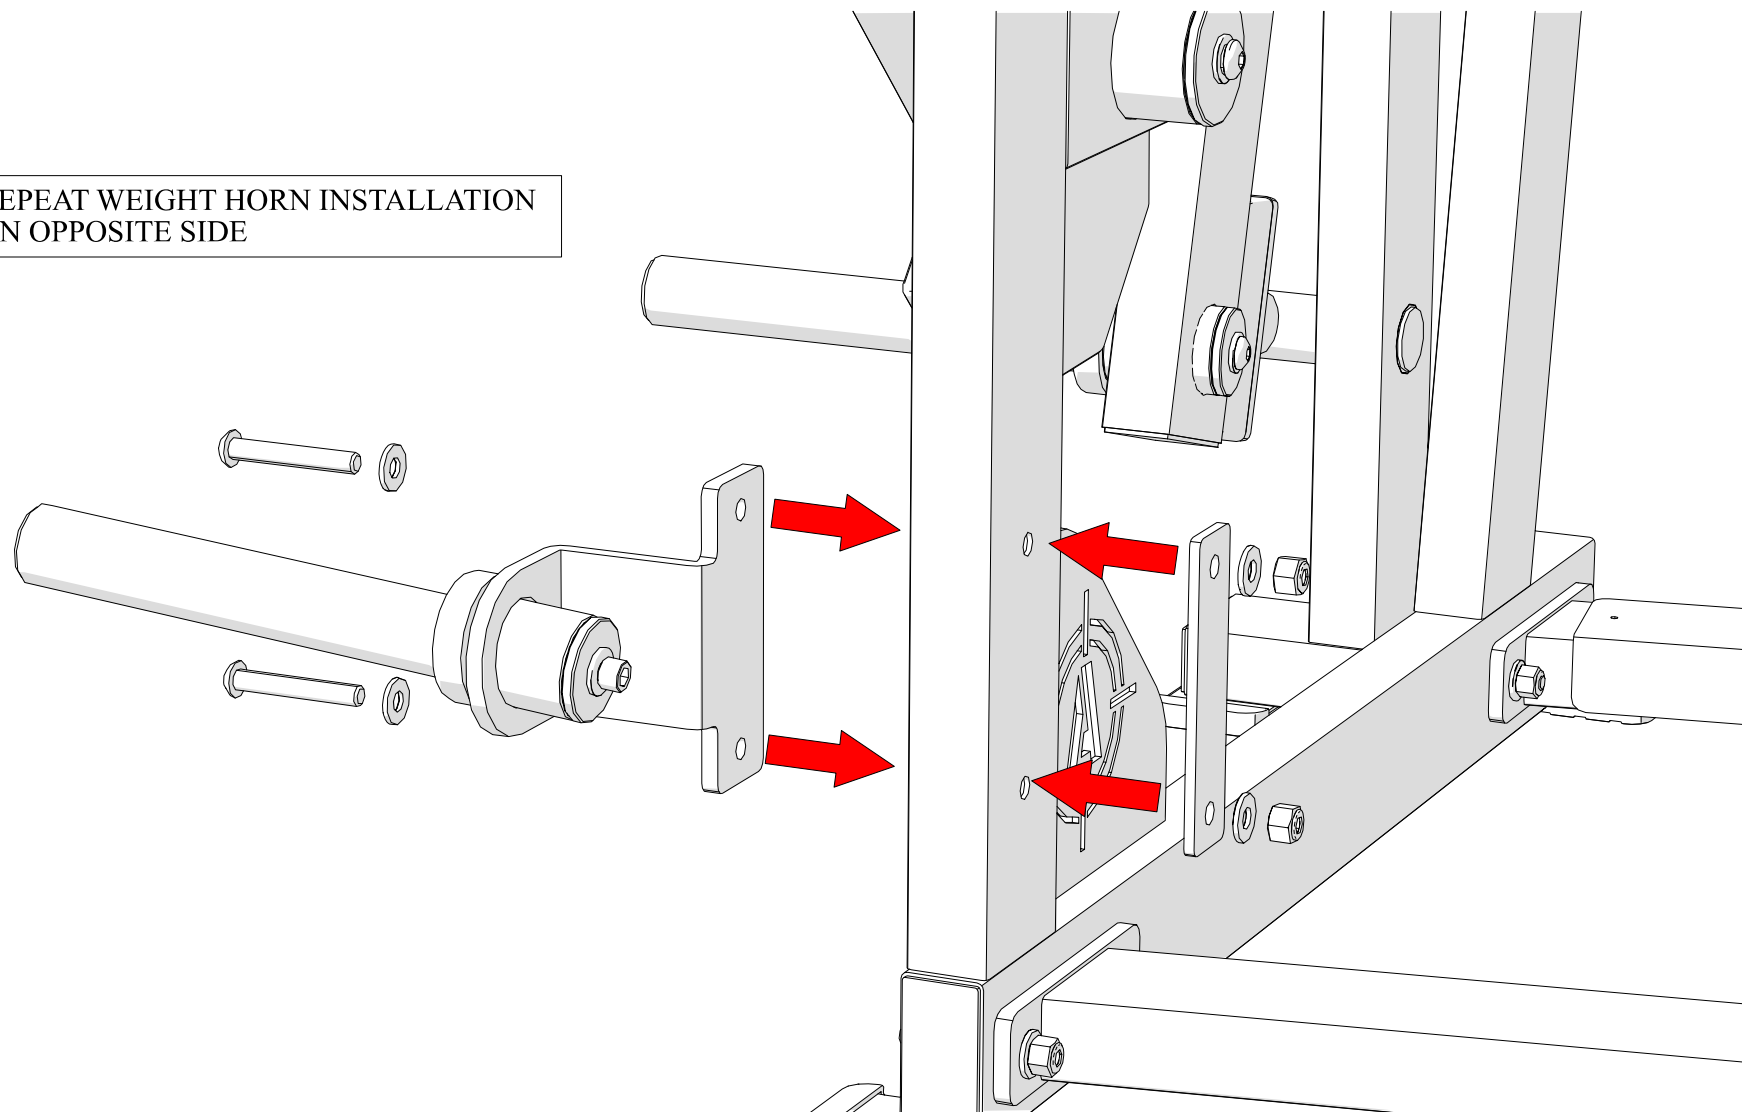

MAKE SURE ALL HARDWARE IS TIGHT
AND TEST ALL FUNCTIONS BEFORE
OPERATING EQUIPMENT

