



9090 RELOADED LINEAR SMITH ROW


FINAL ASSEMBLY GUIDE

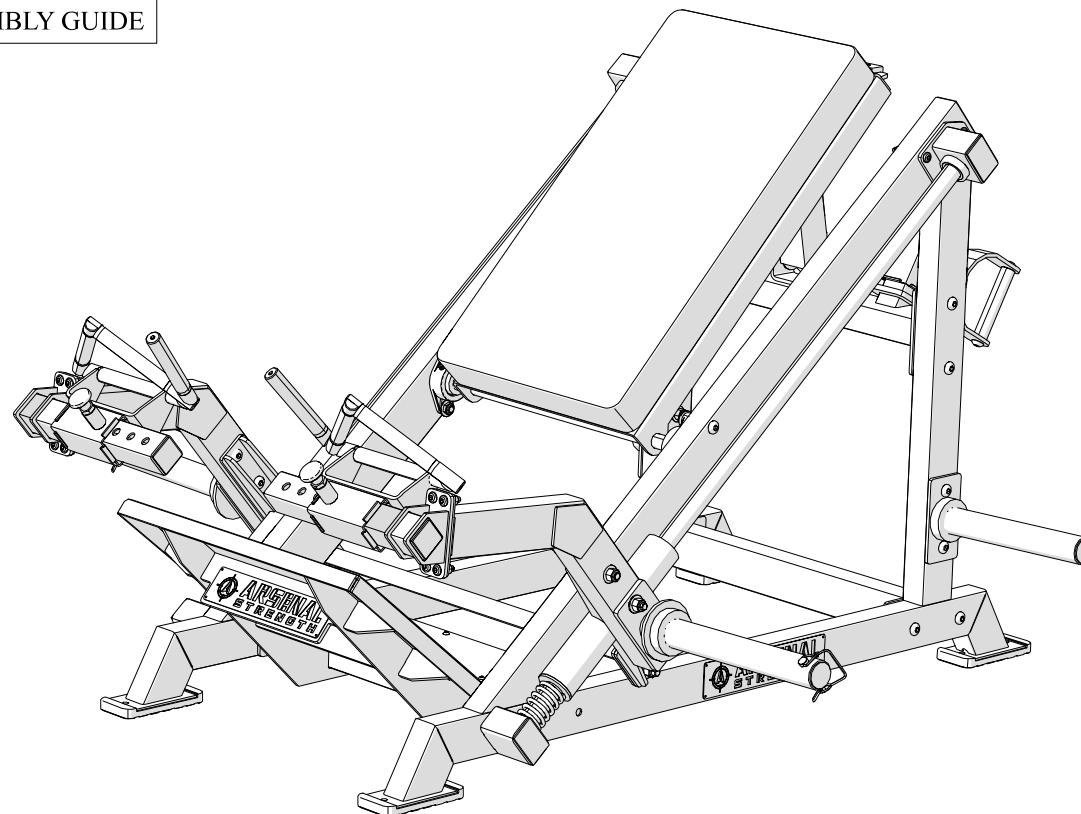


REMOVE (QTY 2) 1/2"-13 X 3.5" BUTTON HEAD
SCREWS, WASHERS, AND NYLOCK NUTS

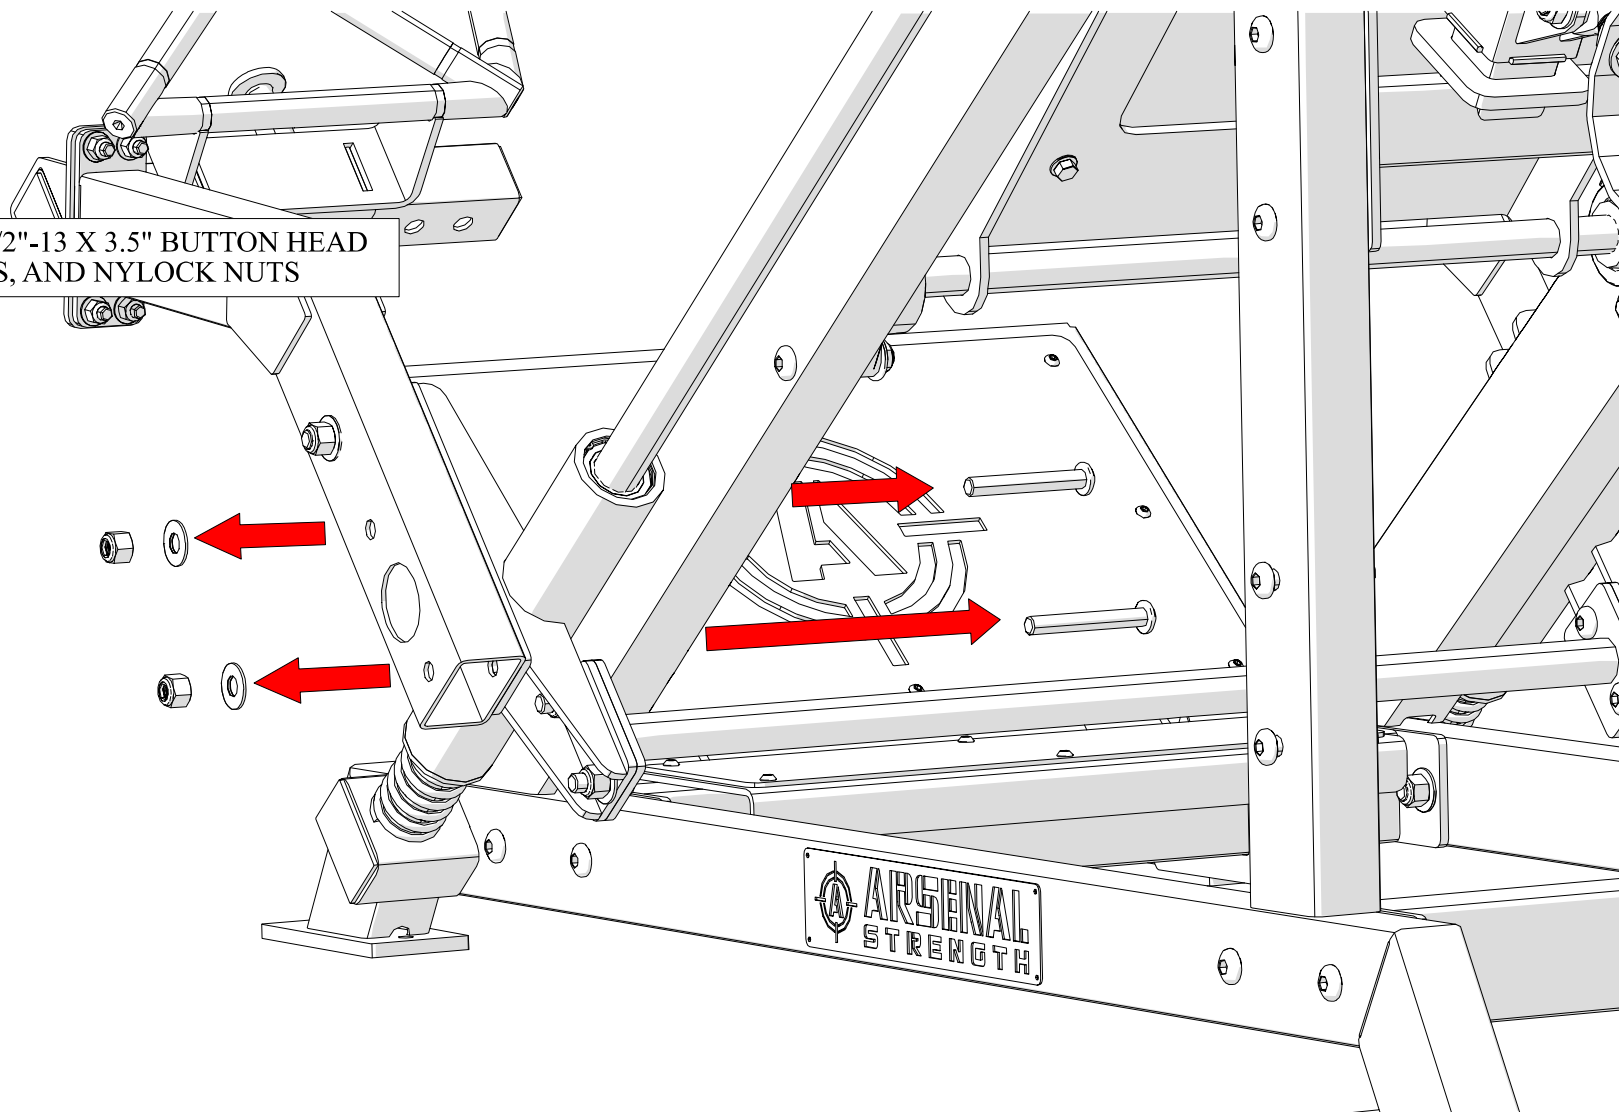


PLACE WEIGHT HORN AS SHOWN AND
SECURE WITH SCREWS, WASHERS, AND
NYLOCK NUTS REMOVED IN PREVIOUS STEP

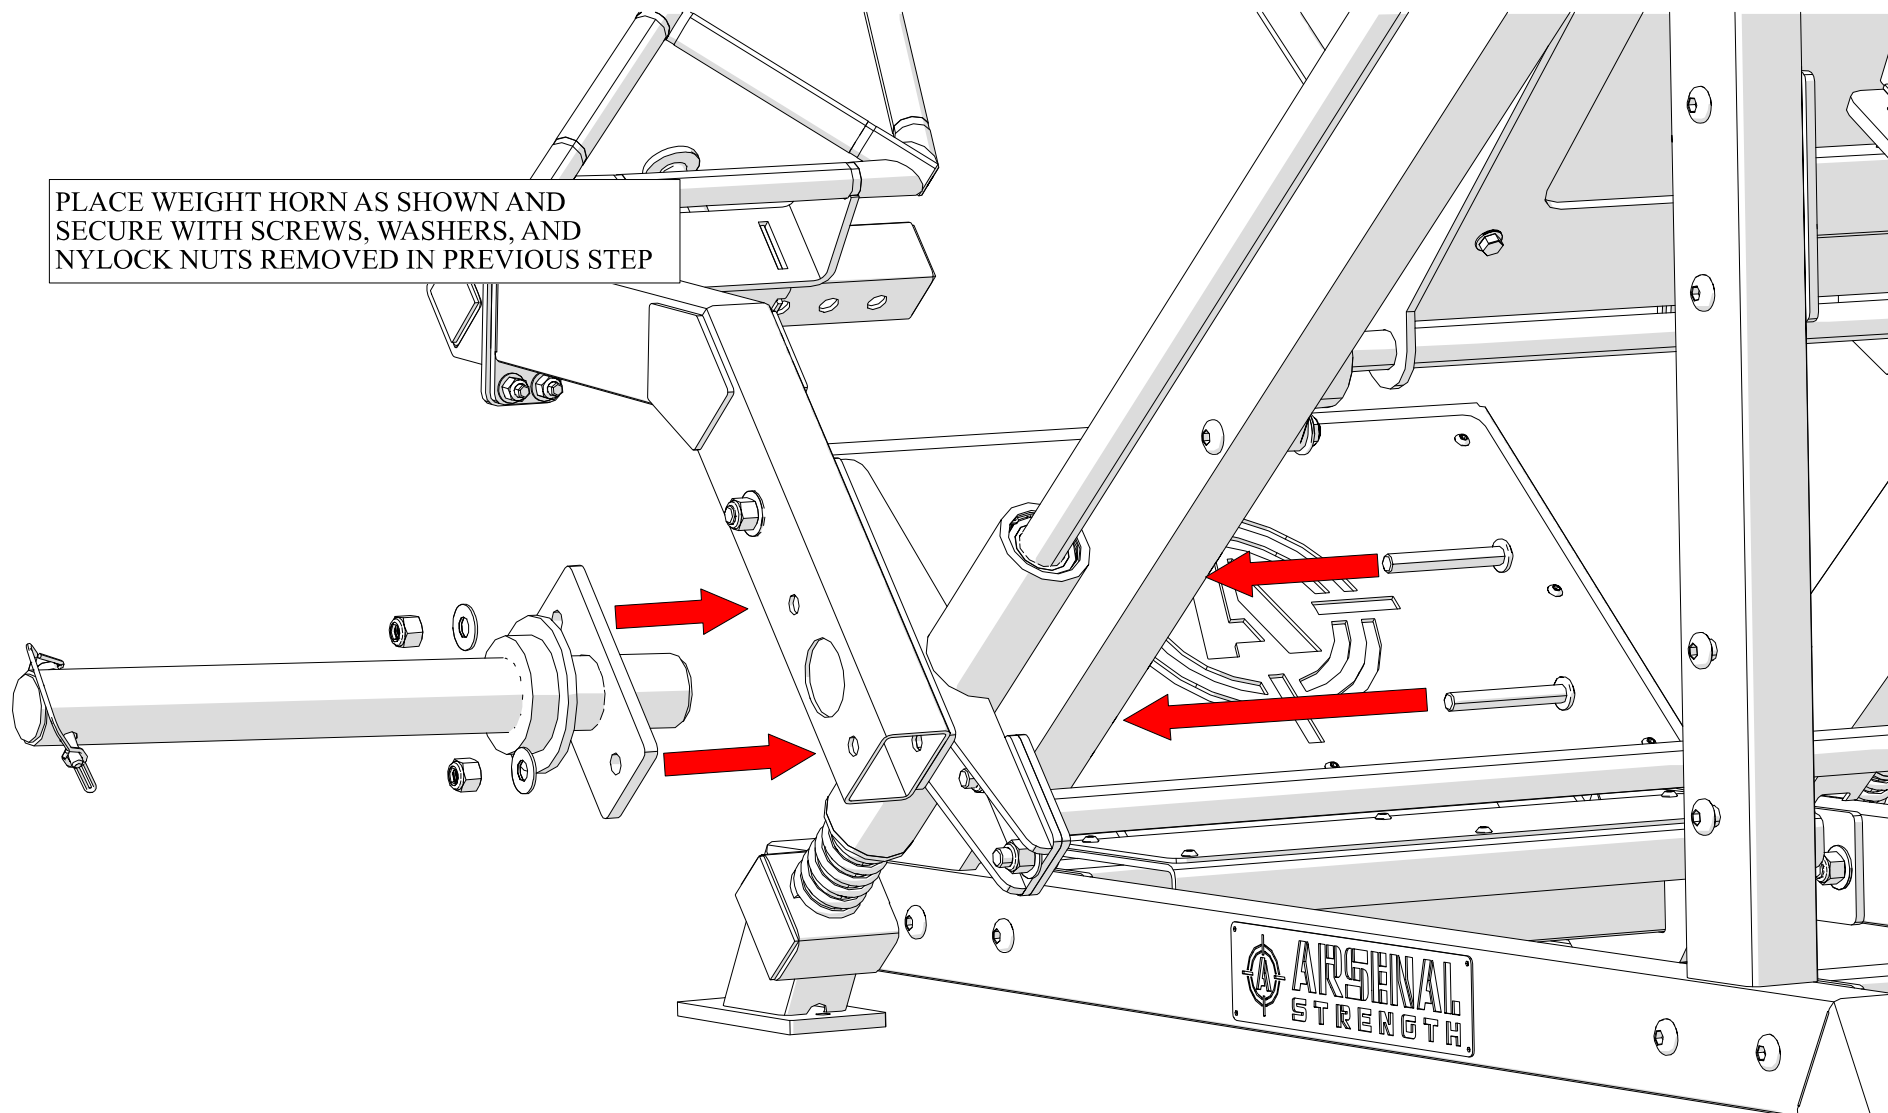

REPEAT ON OPPOSITE SIDE

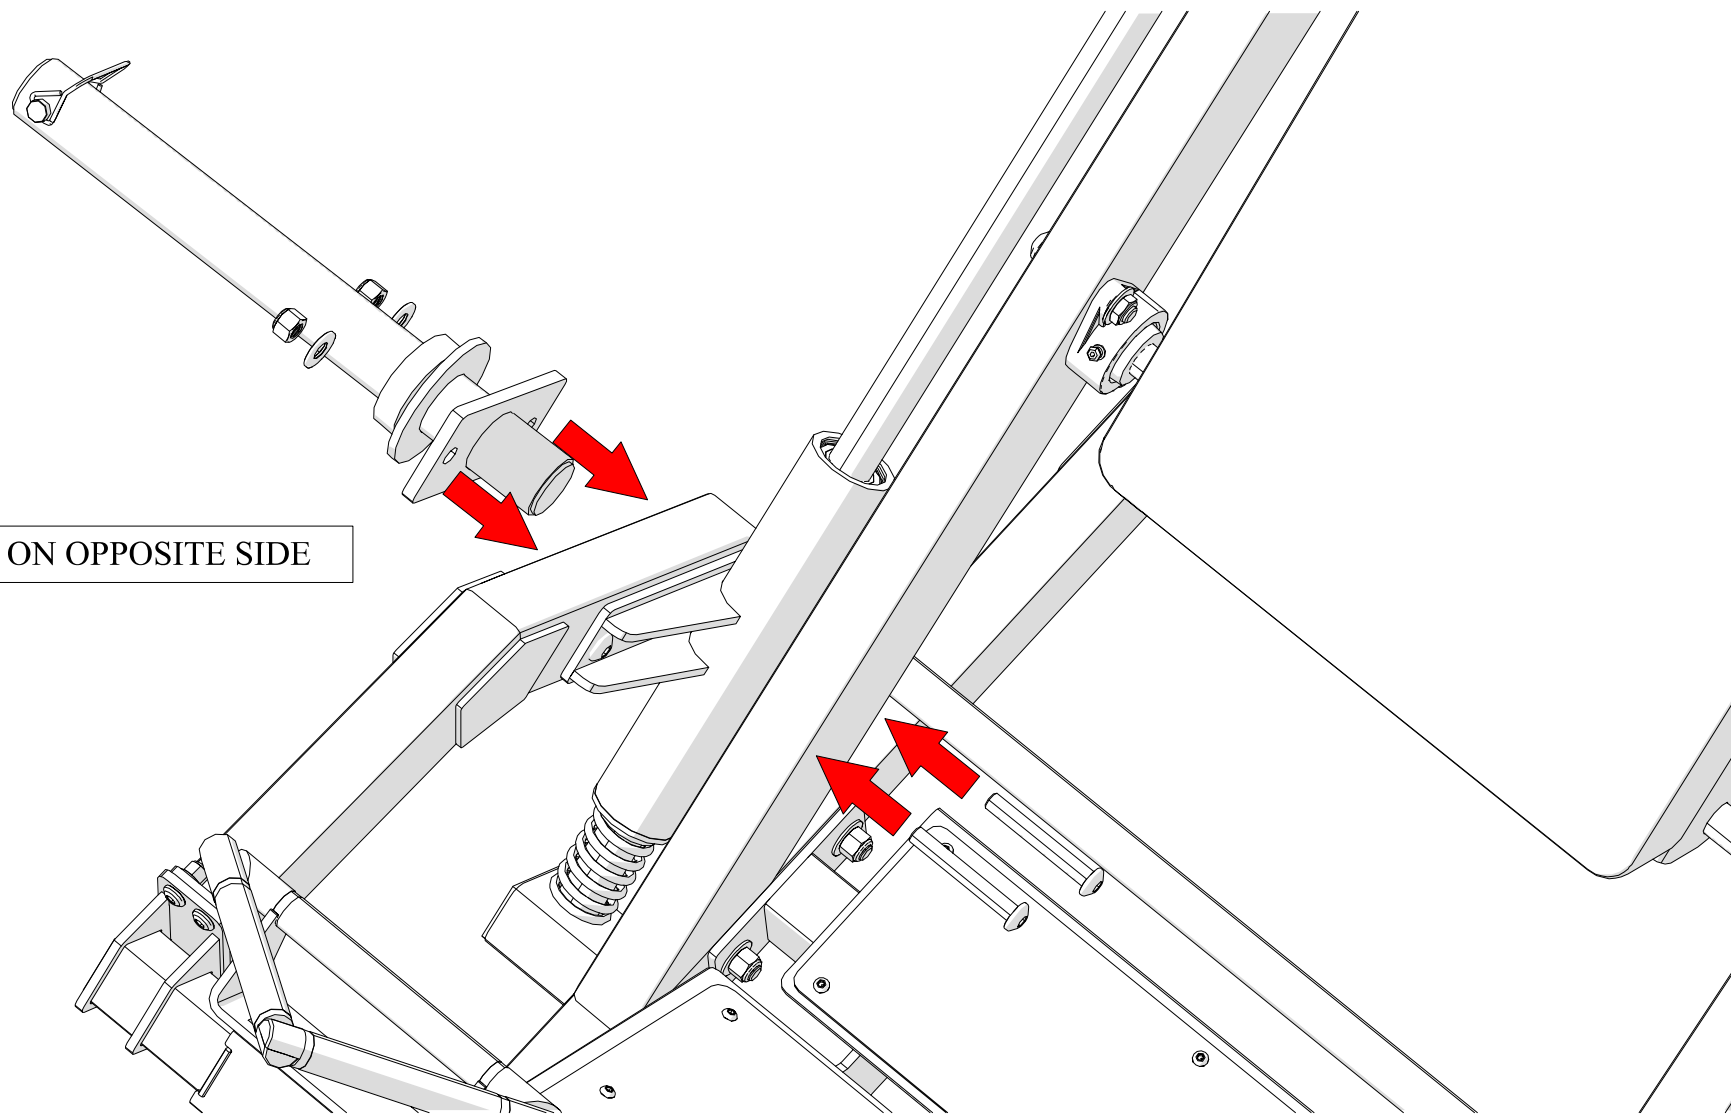


ON REAR FRAME LEG, REMOVE (QTY 2)
1/2"-13 X 3" BUTTON HEAD SCREWS,
WASHERS,
AND NYLOCK NUTS.

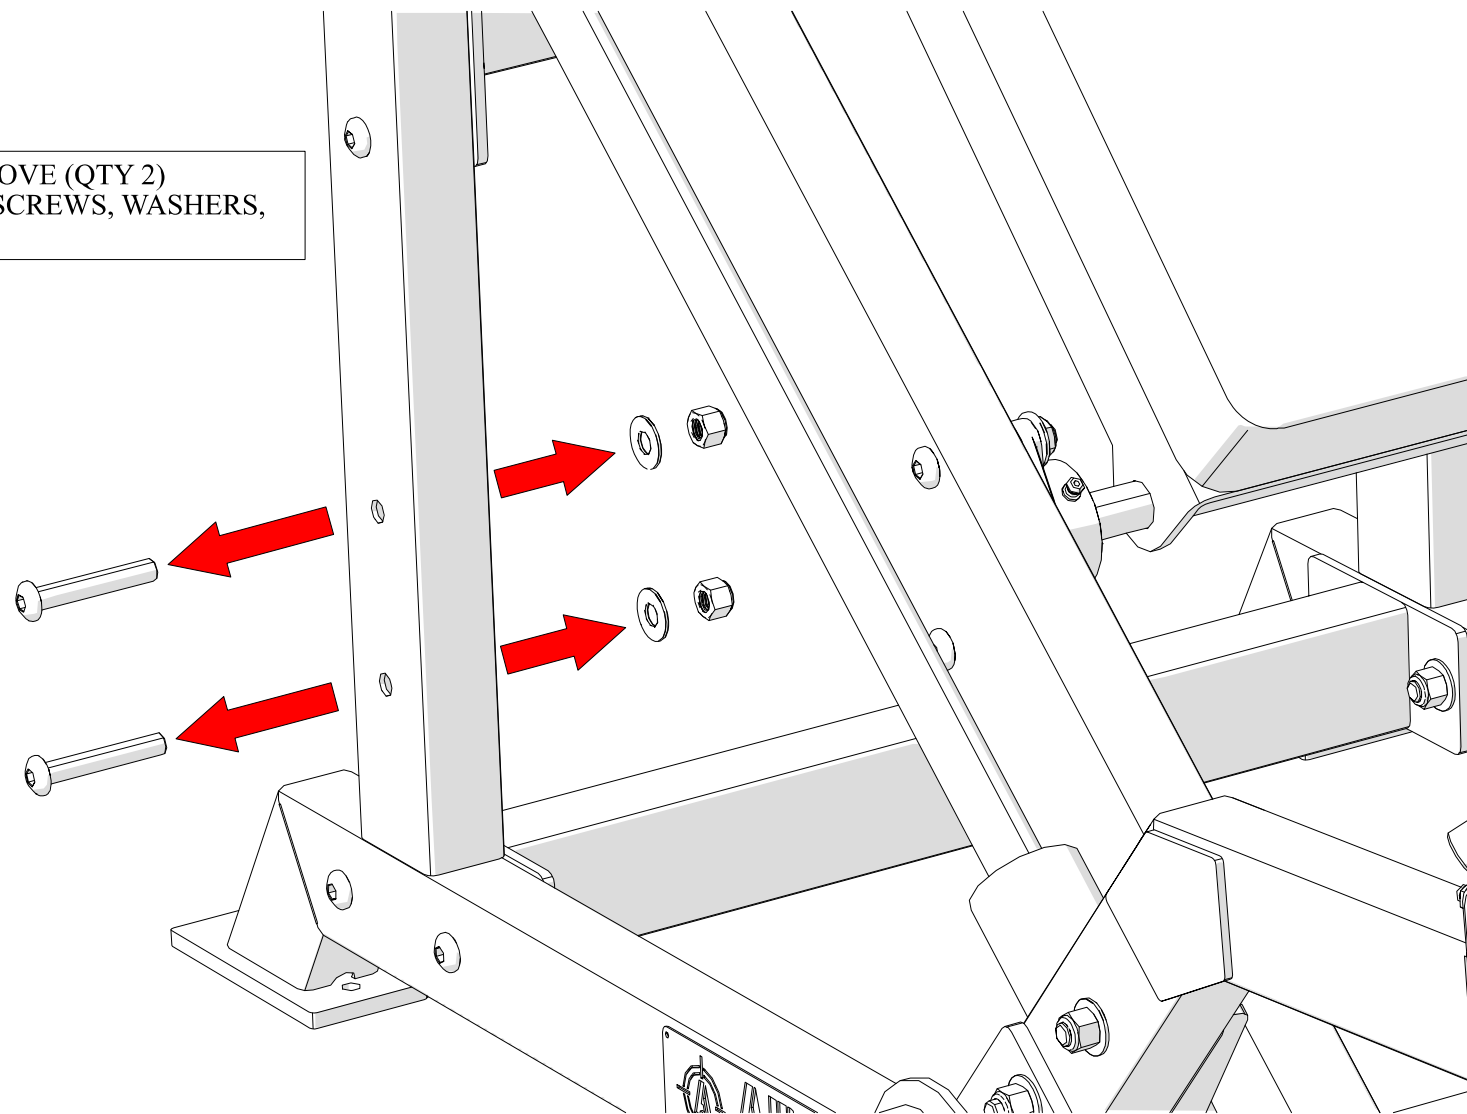

POSITION WEIGHT STORAGE HORN AS
SHOWN AND SECURE WITH SCREWS, NUTS,
AND WASHERS REMOVED IN PREVIOUS STEP.

NOTE: WEIGHT HORN SHOULD HAVE A SLIGHT
UPWARD ANGLE WHEN INSTALLED CORRECTLY

UPWARD ANGLE

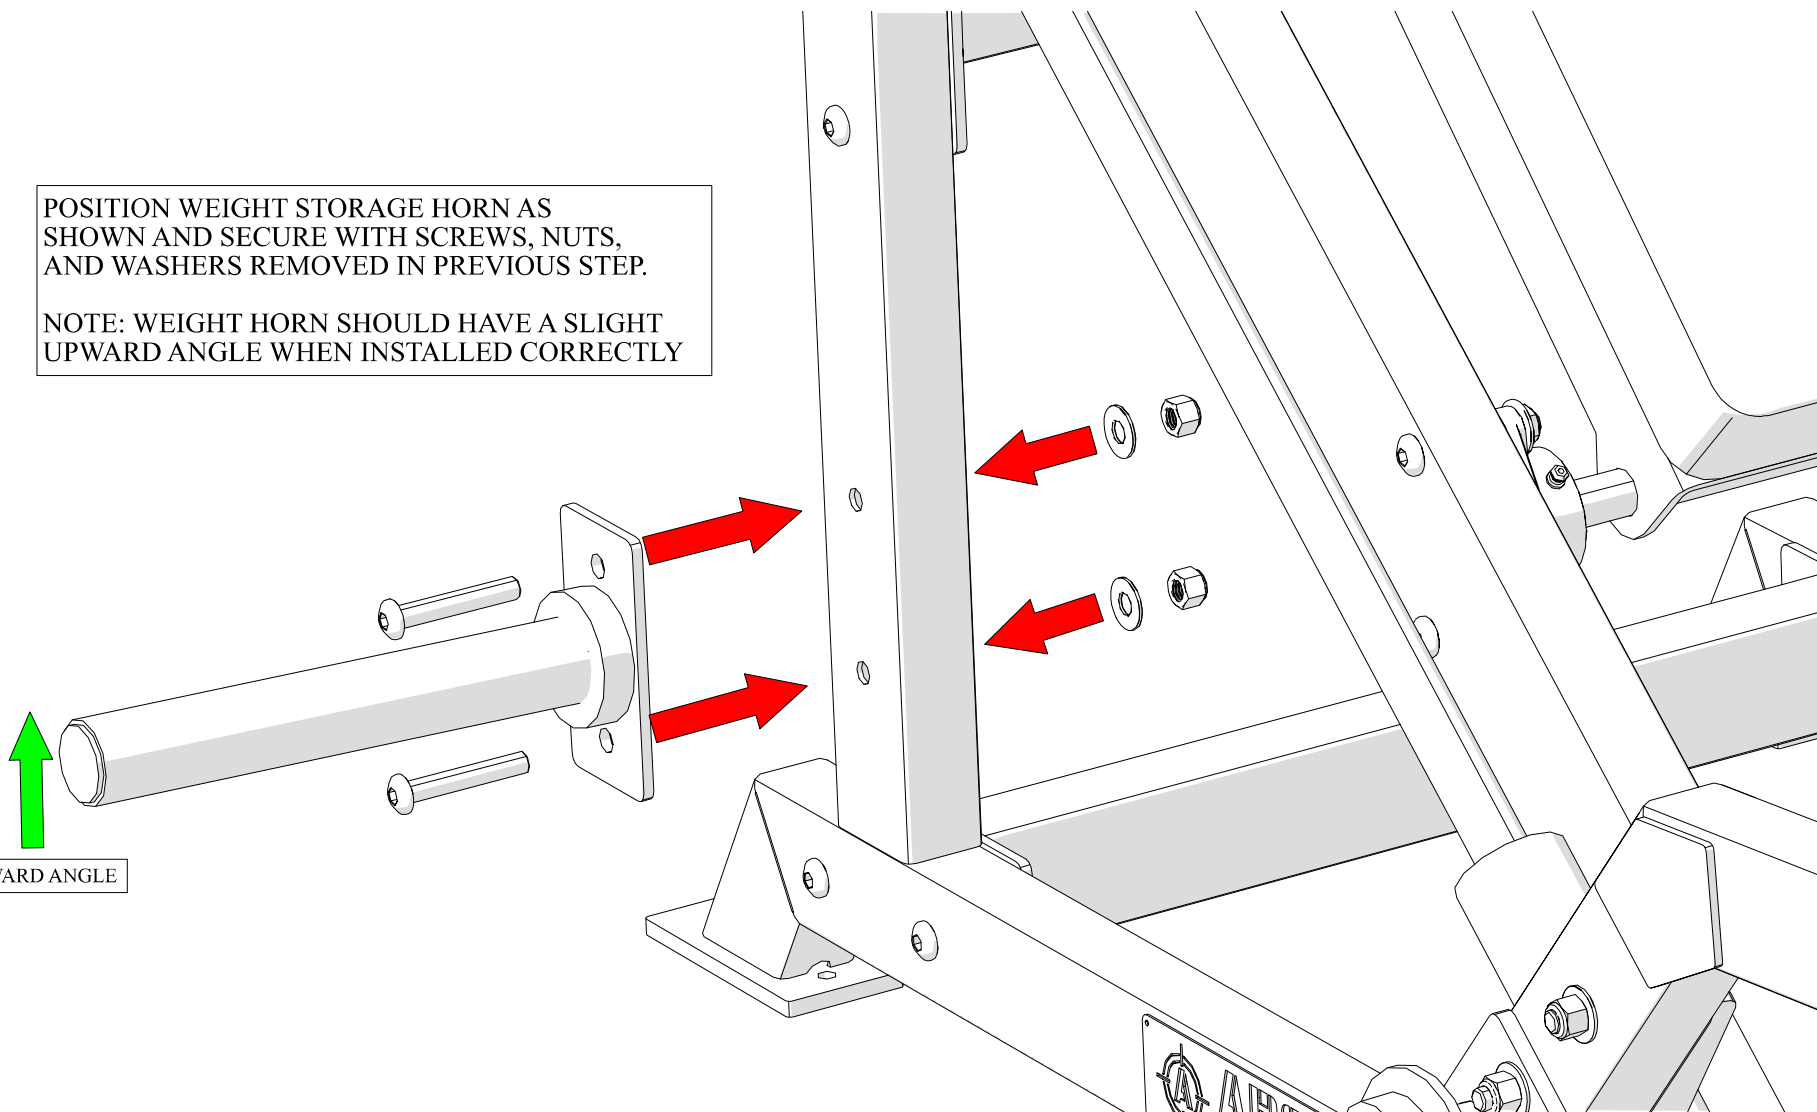

REPEAT ON OPPOSITE SIDE

