




9063 RELOADED MULTI-FLEX

FINAL ASSEMBLY GUIDE

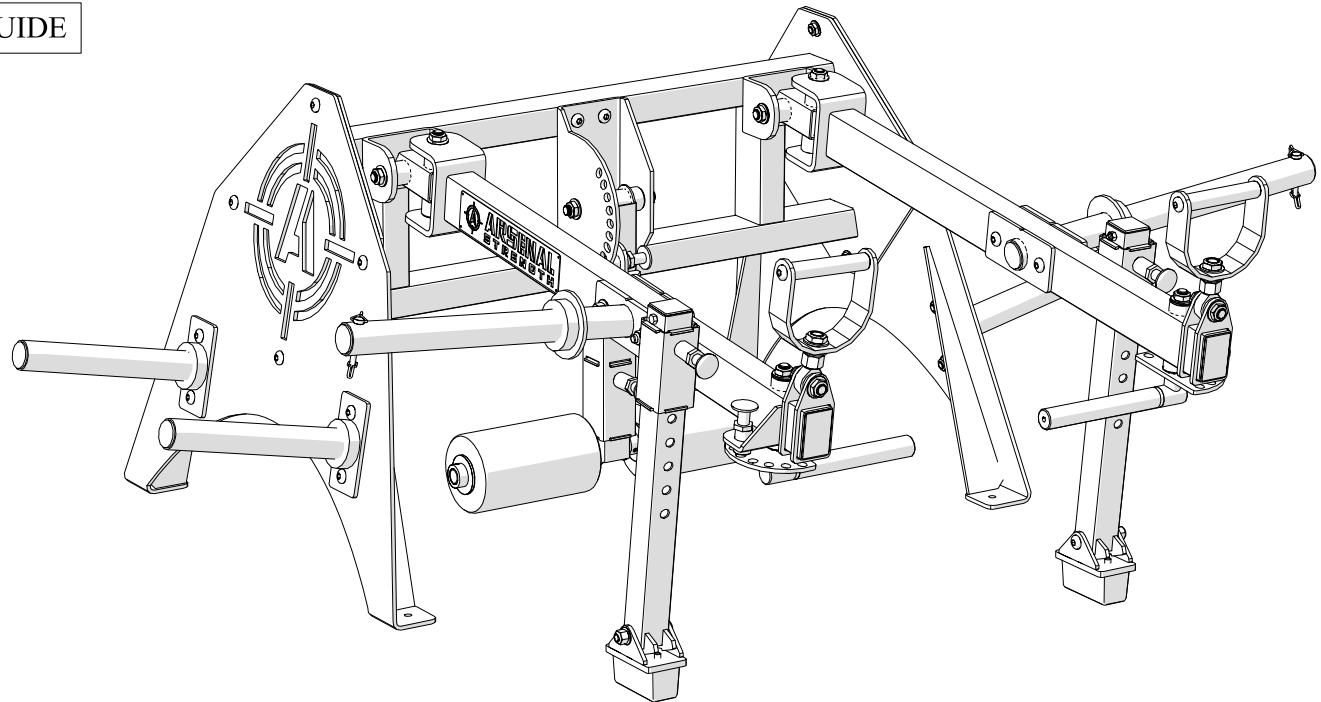

UNWRAP AND SET ASIDE
ALL LOOSE PARTS

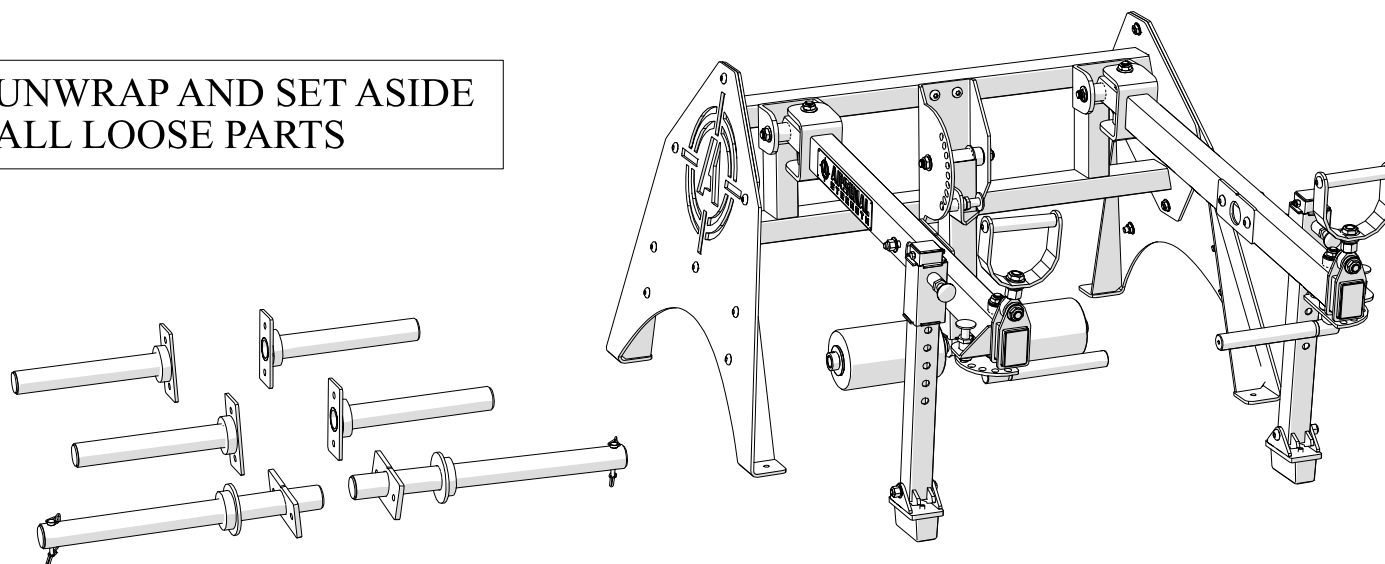


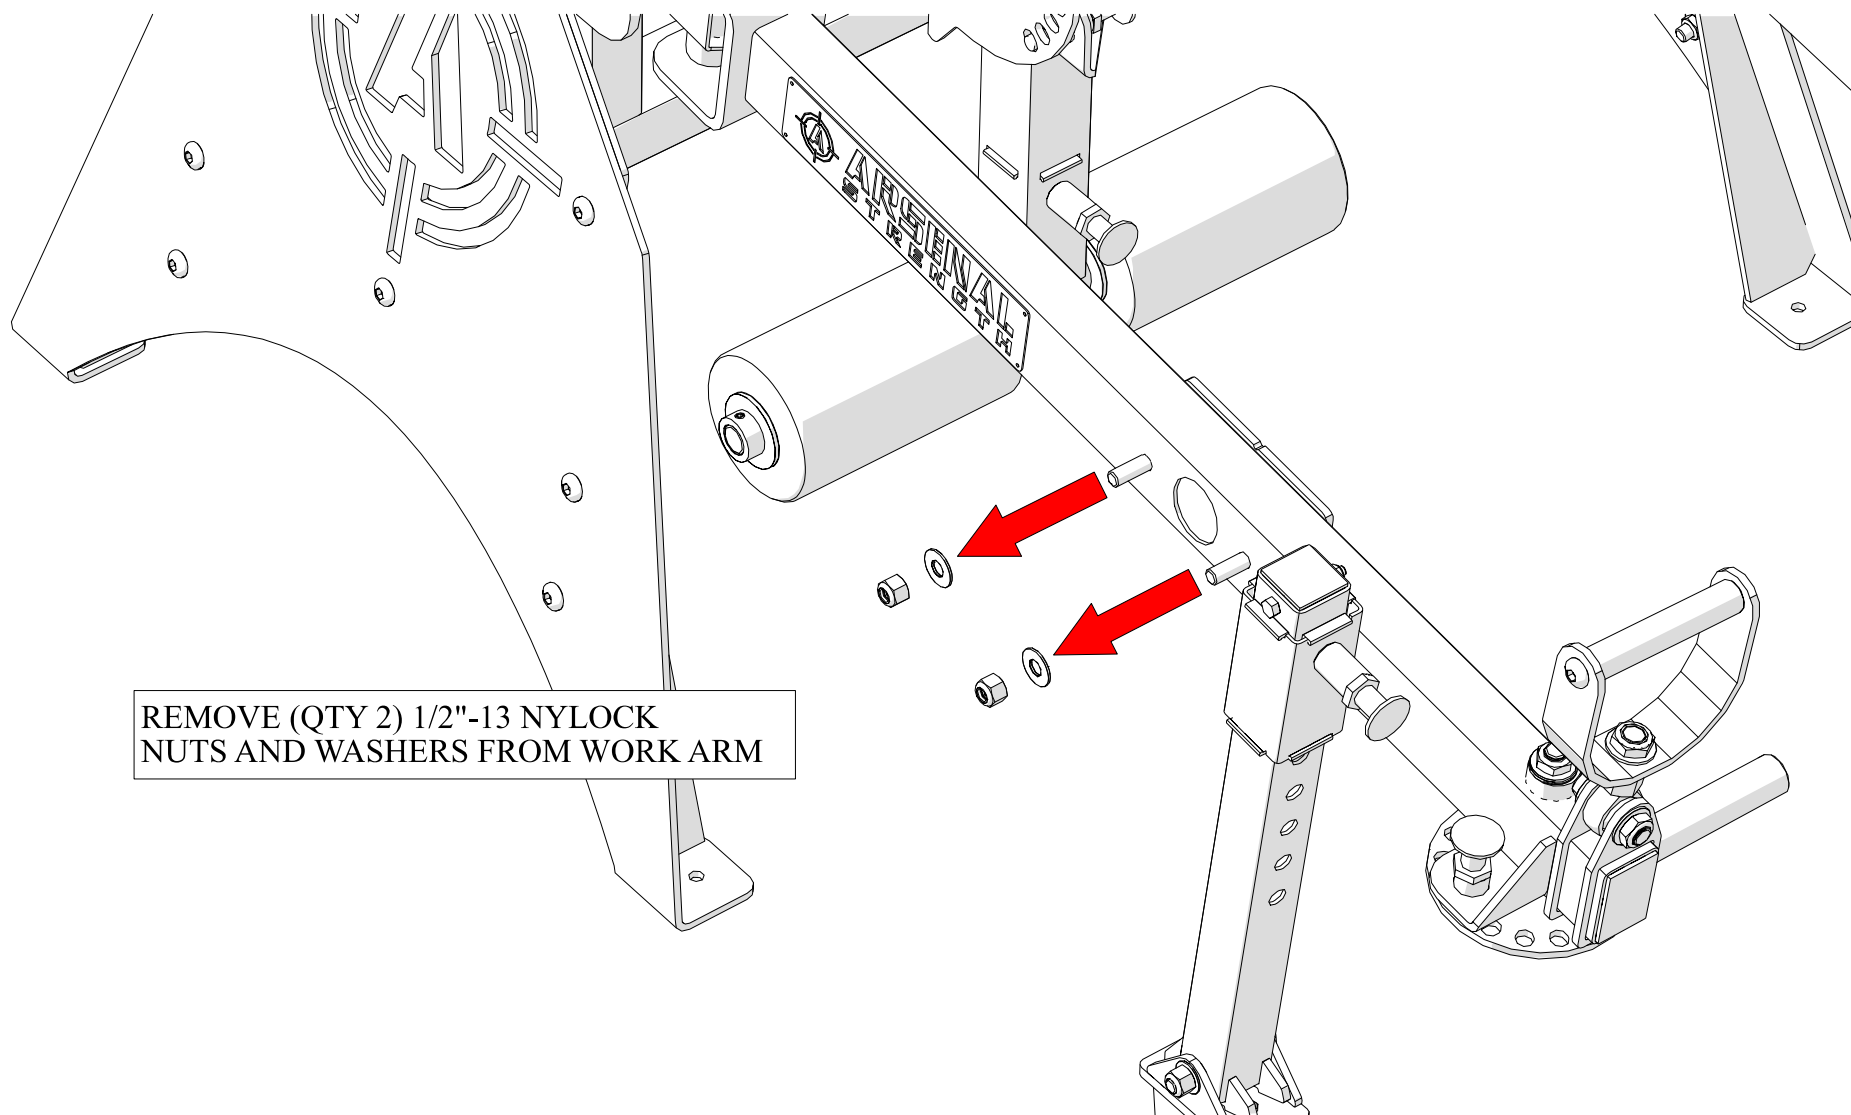


REMOVE (QTY 2) 1/2"-13 NYLOCK
NUTS AND WASHERS FROM WORK ARM

POSITION WEIGHT HORN AS SHOWN AND
SECURE WITH NYLOCK NUTS AND WASHERS
REMOVED IN PREVIOUS STEP


NOTCHES MUST FACE UP

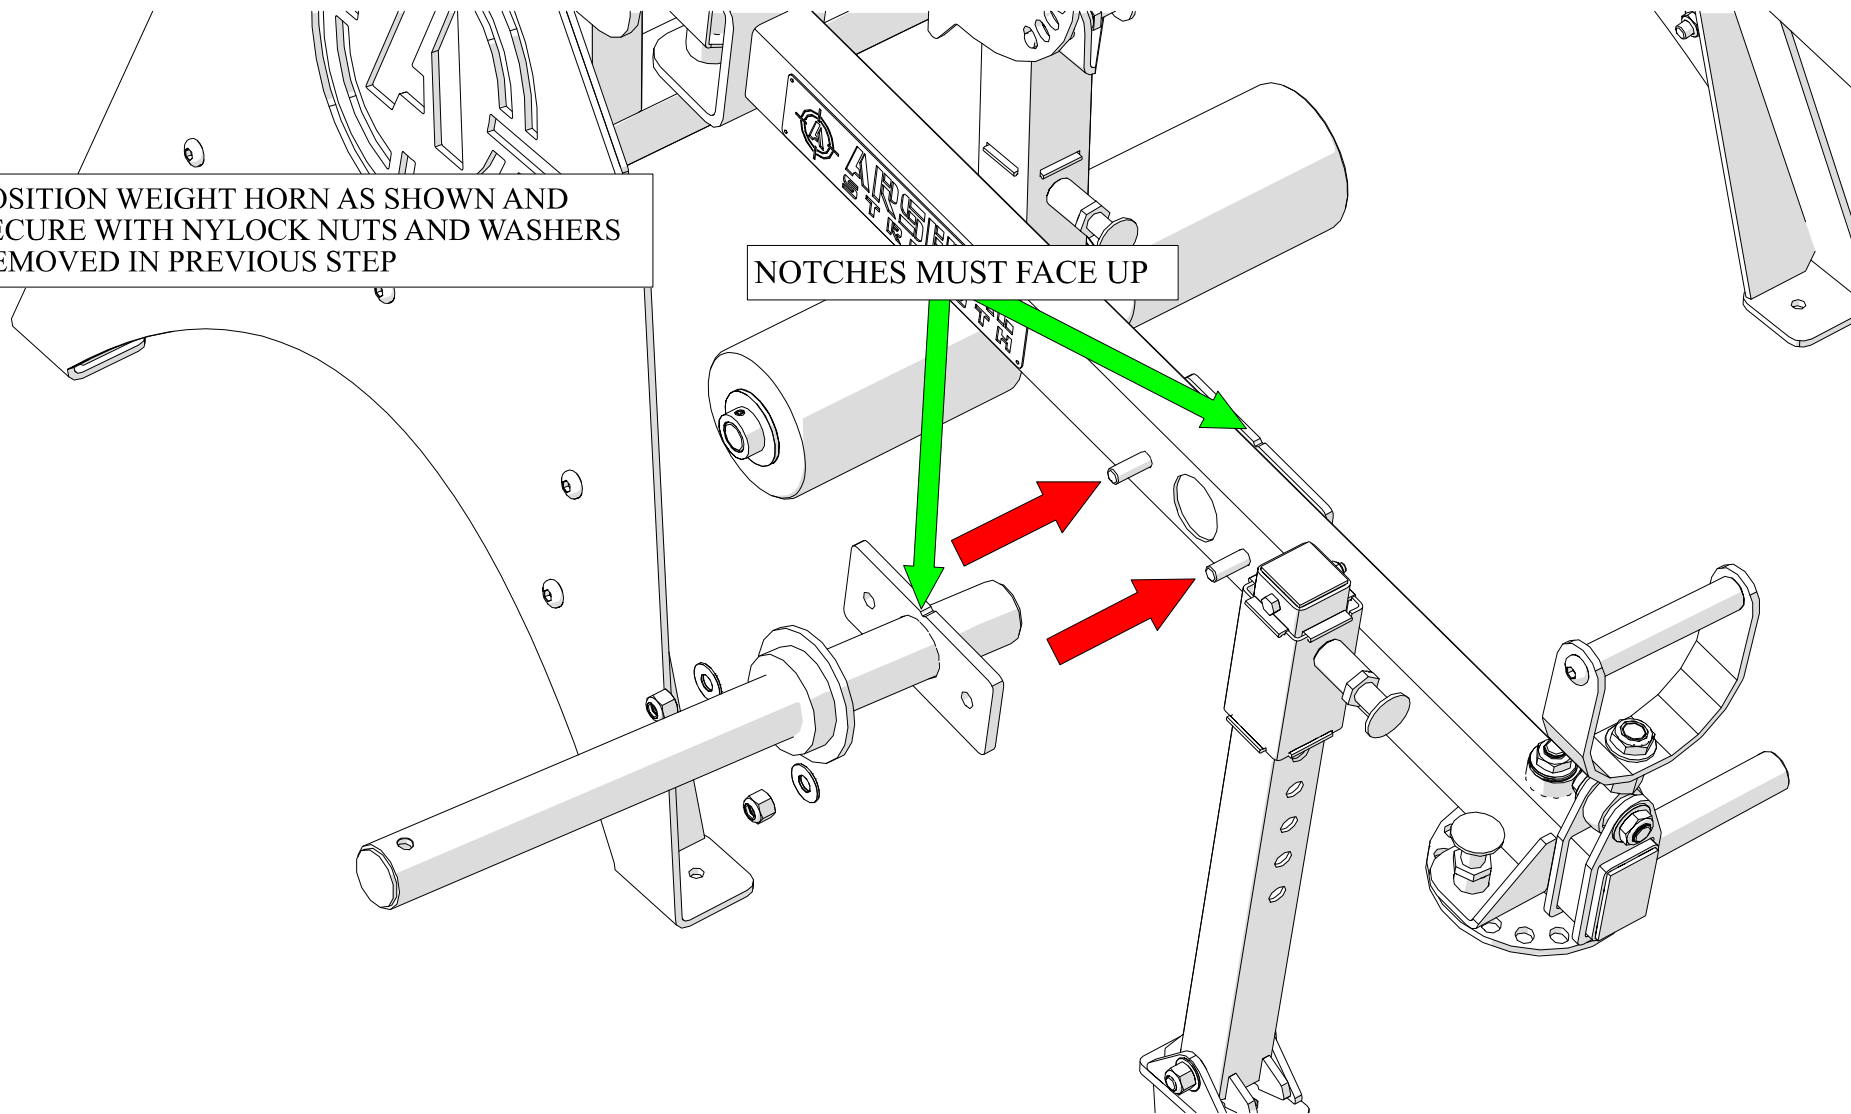

REPEAT WEIGHT HORN INSTALLATION
ON 2ND WORK ARM

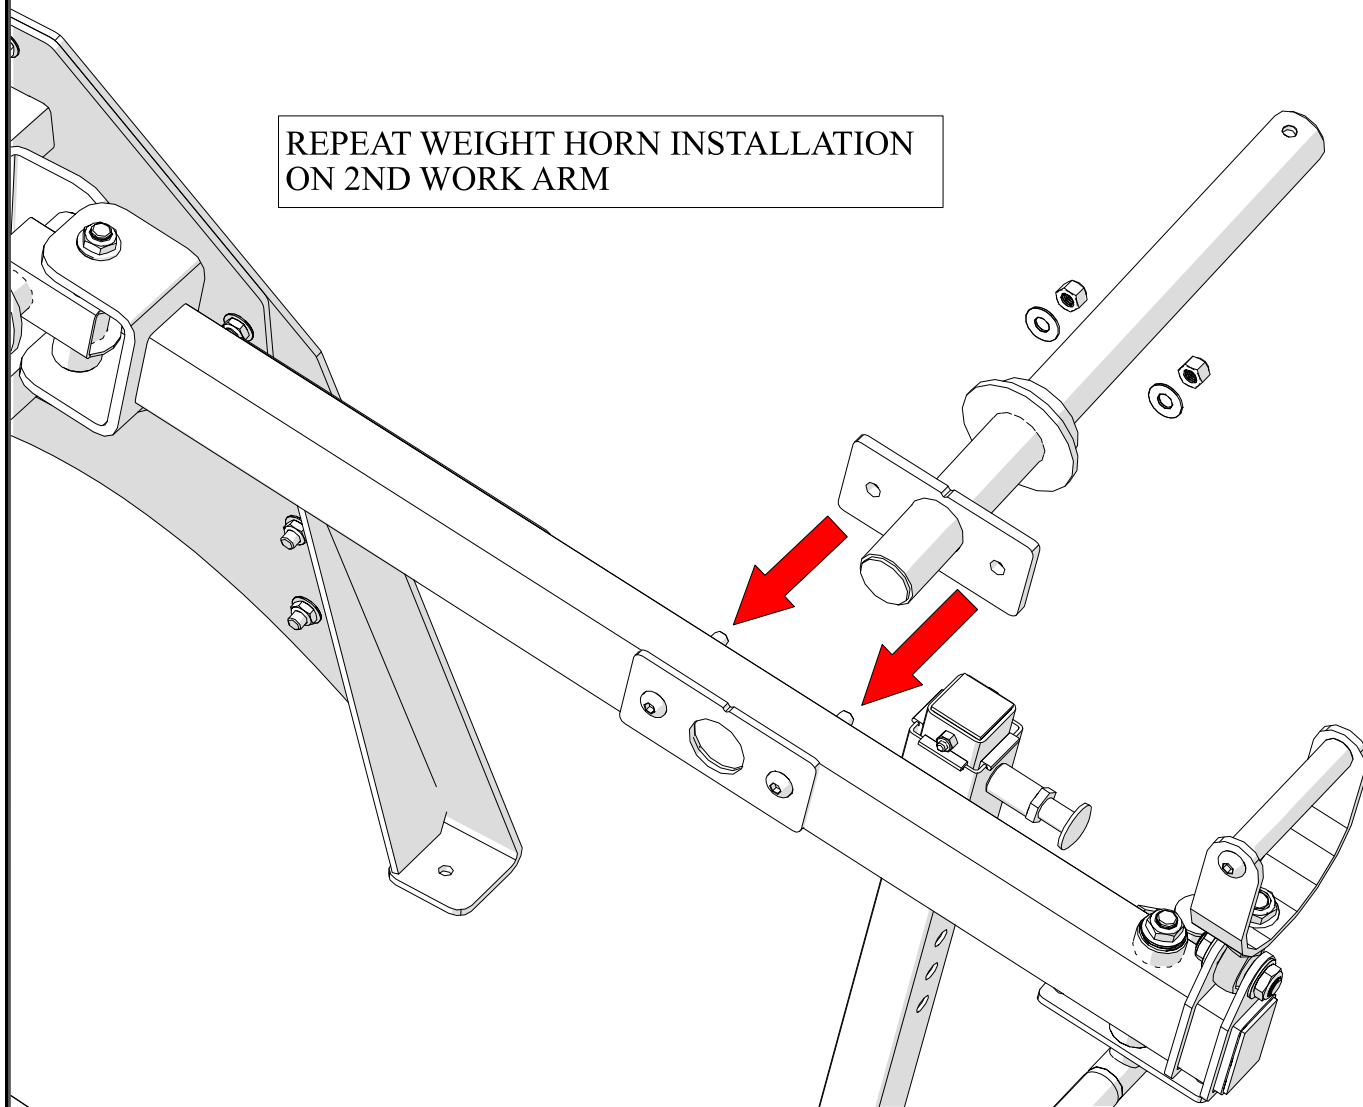



REMOVE (QTY 4) 1/2"-13 X 1"L BUTTON HEAD
SCREWS, WASHERS, AND NYLOCK NUTS

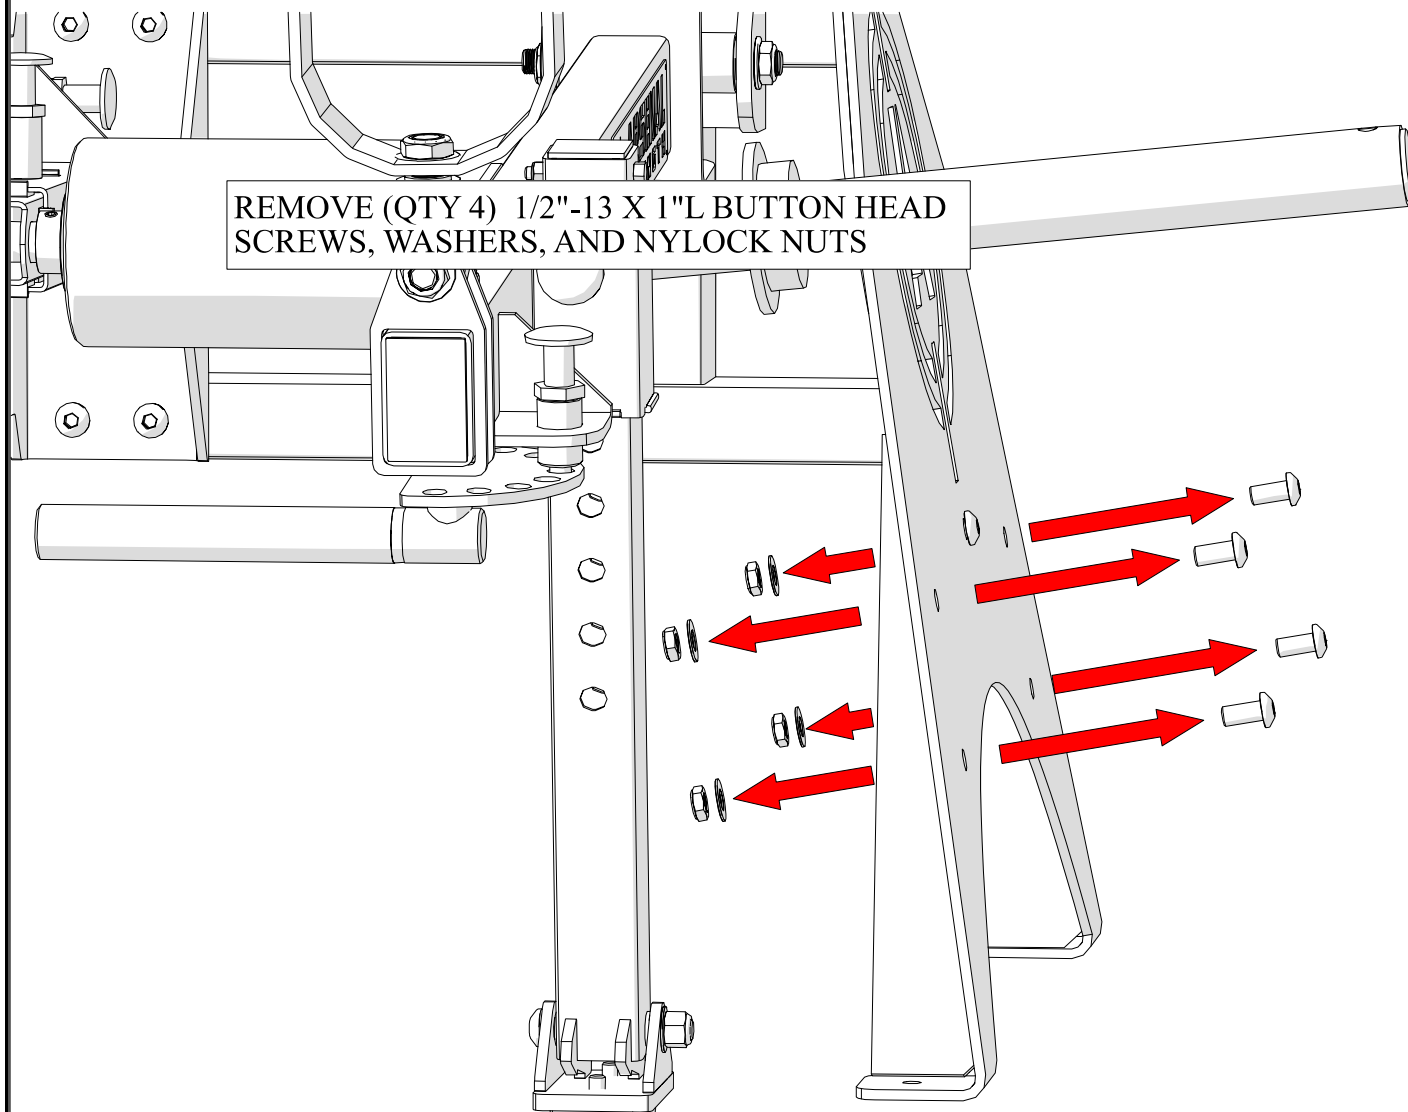

POSITION WEIGHT STORAGE HORNS AS SHOWN AND SECURE WITH HARDWARE REMOVED IN PREVIOUS STEP.

NOTE: WEIGHT HORNS HSVE A SLIGHT ANGLE BUILT IN- BE CAREFUL NOT TO INSTALL UPSIDE DOWN

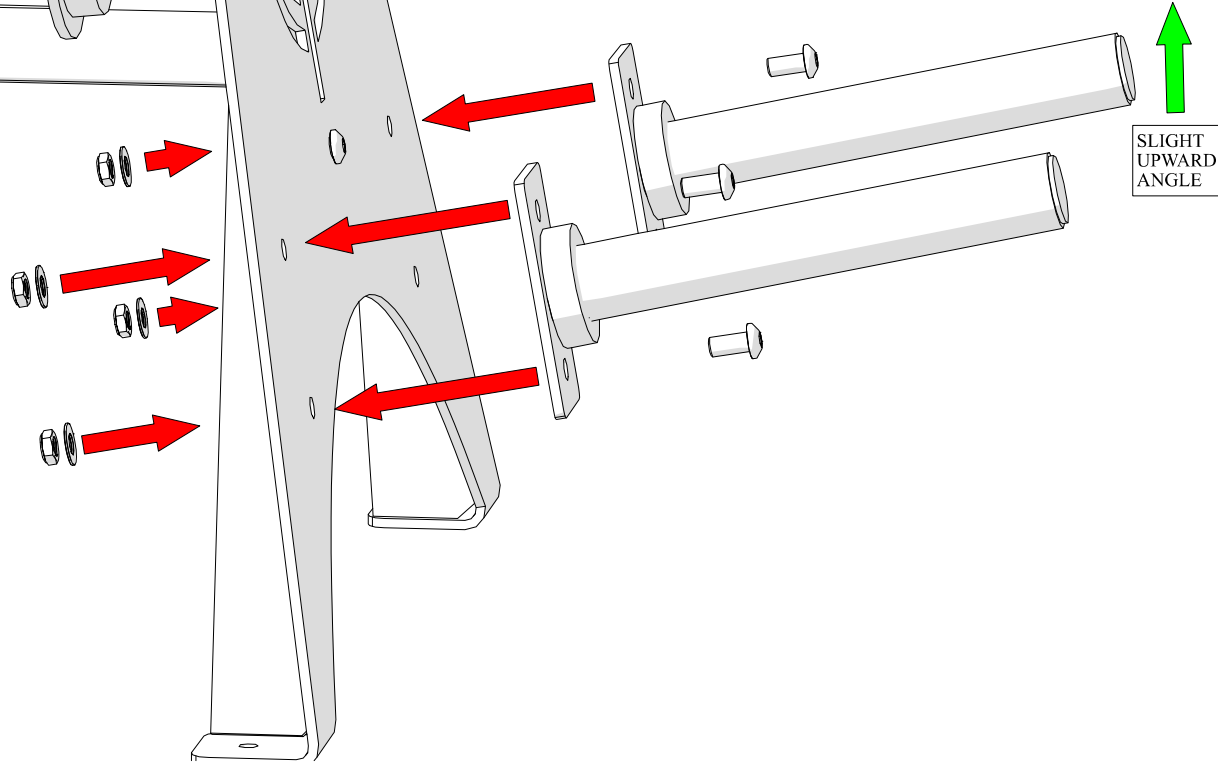

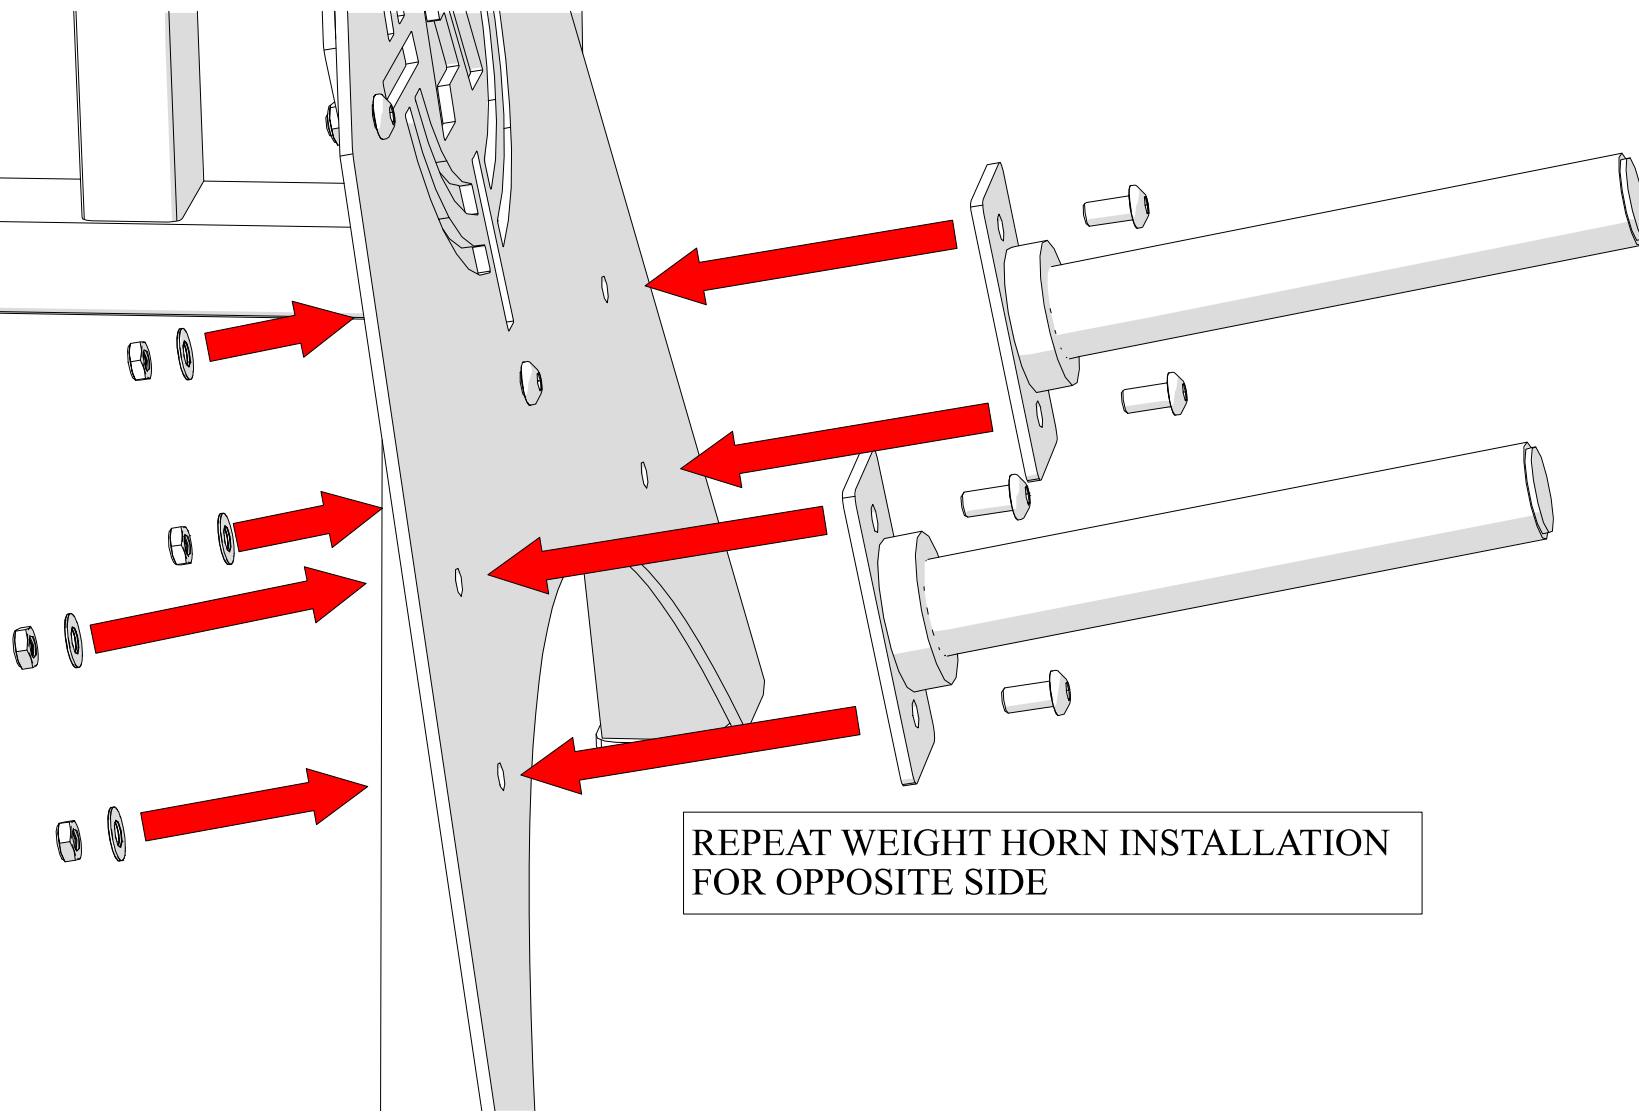

REPEAT WEIGHT HORN INSTALLATION
FOR OPPOSITE SIDE

MAKE SURE ALL HARDWARE IS TIGHT AND
TEST ALL FUNCTIONS BEFORE OPERATING
EQUIPMENT

