



9006 RELOADED VERTICAL ROW


FINAL ASSEMBLY GUIDE

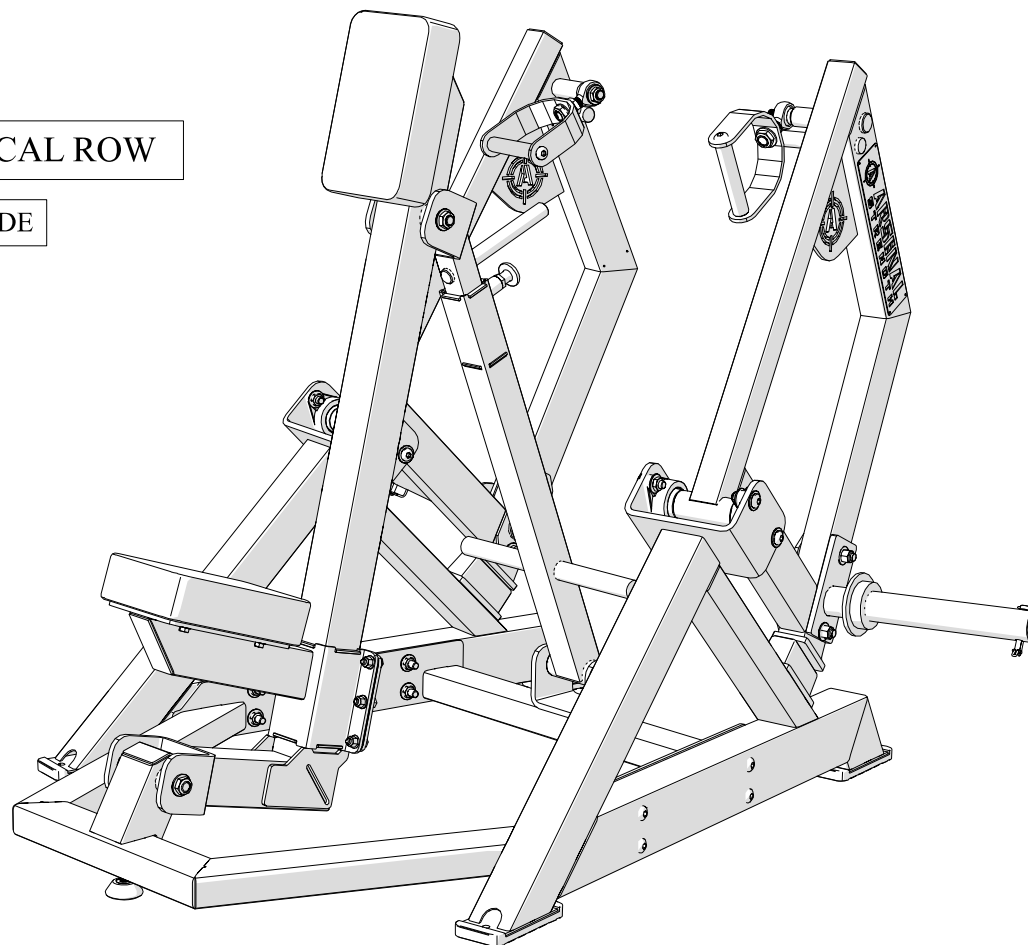


UNWRAP AND SET ASIDE ANY PARTS
NOT PERMANENTLY ATTACHED TO MACHINE

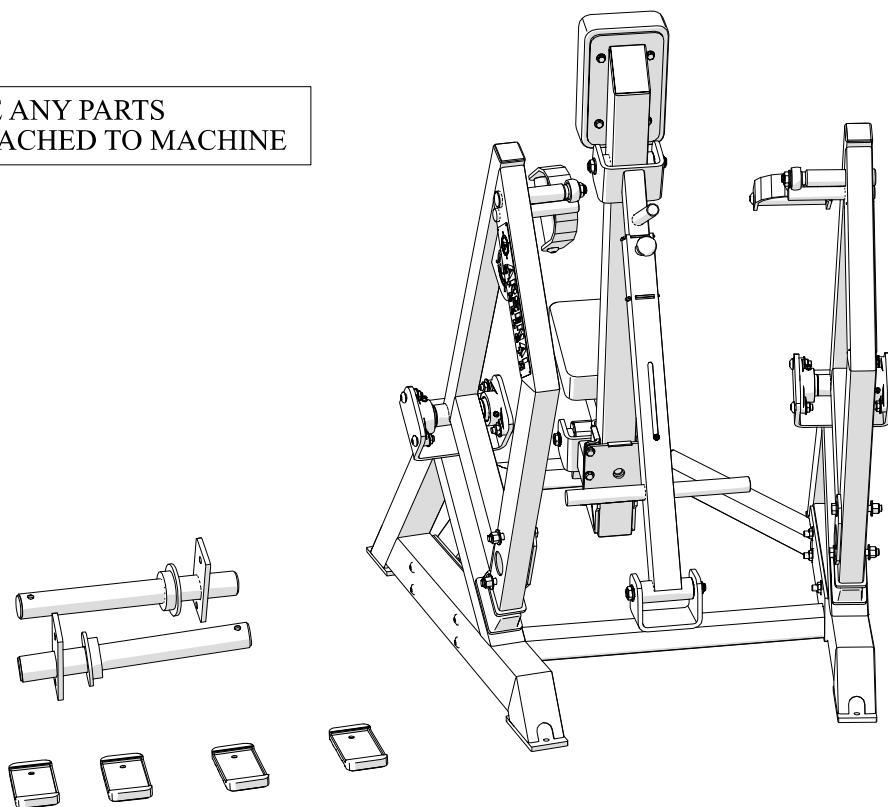


RUBBER FEET CAN BE PLACED ON
FRAME PADS IF DESIRED

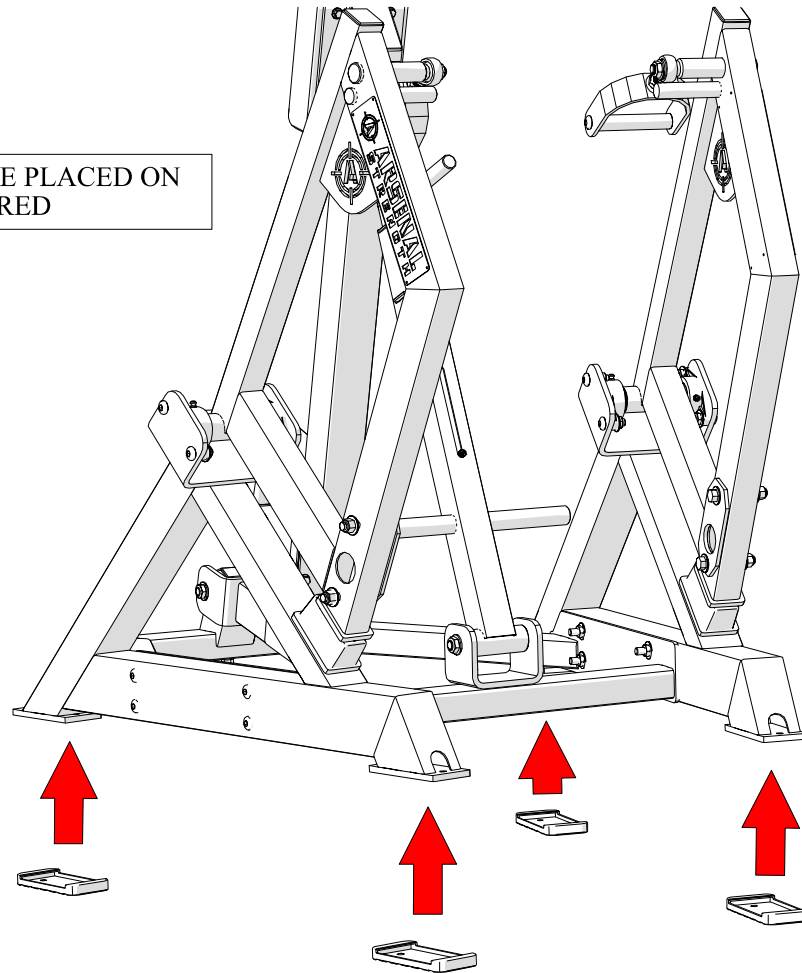


REMOVE (QTY 2) 1/2"-13 X 3.5" HEX
HEAD BOLTS, NUTS, AND WASHERS,
AND BACKING PLATE.

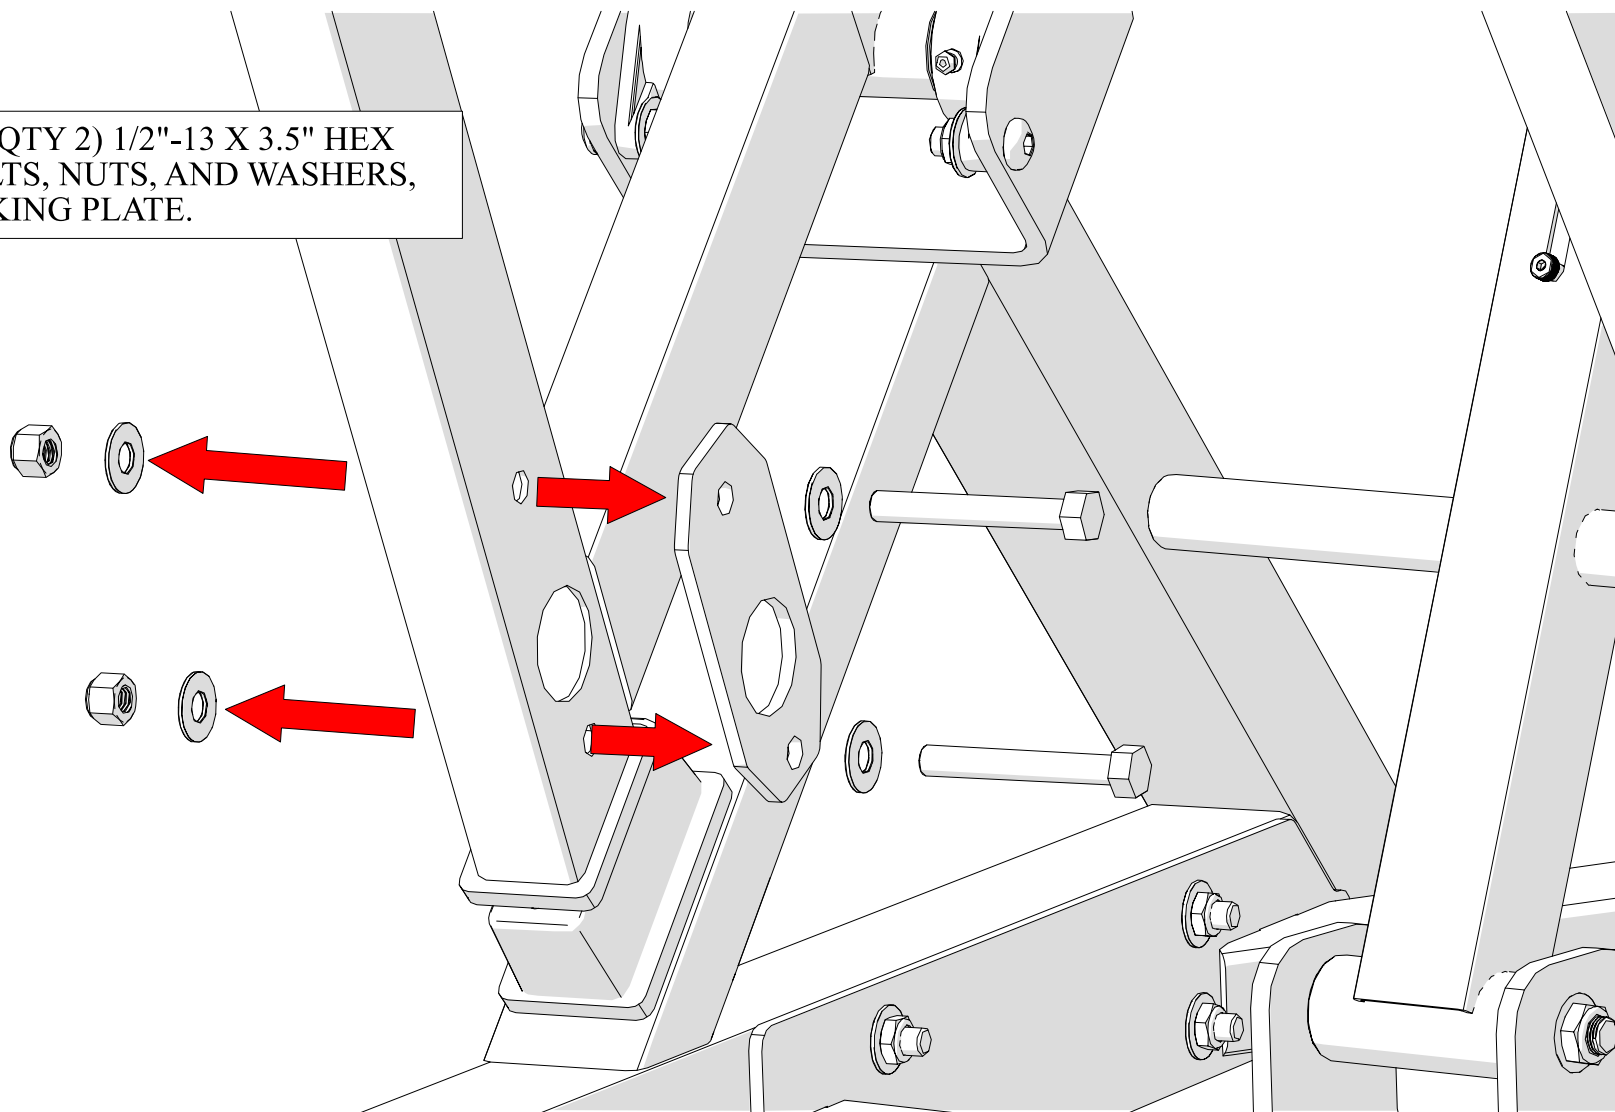


PLACE WEIGHT HORN AS SHOWN
AND SECURE WITH BOLTS REMOVED
IN PREVIOUS STEP

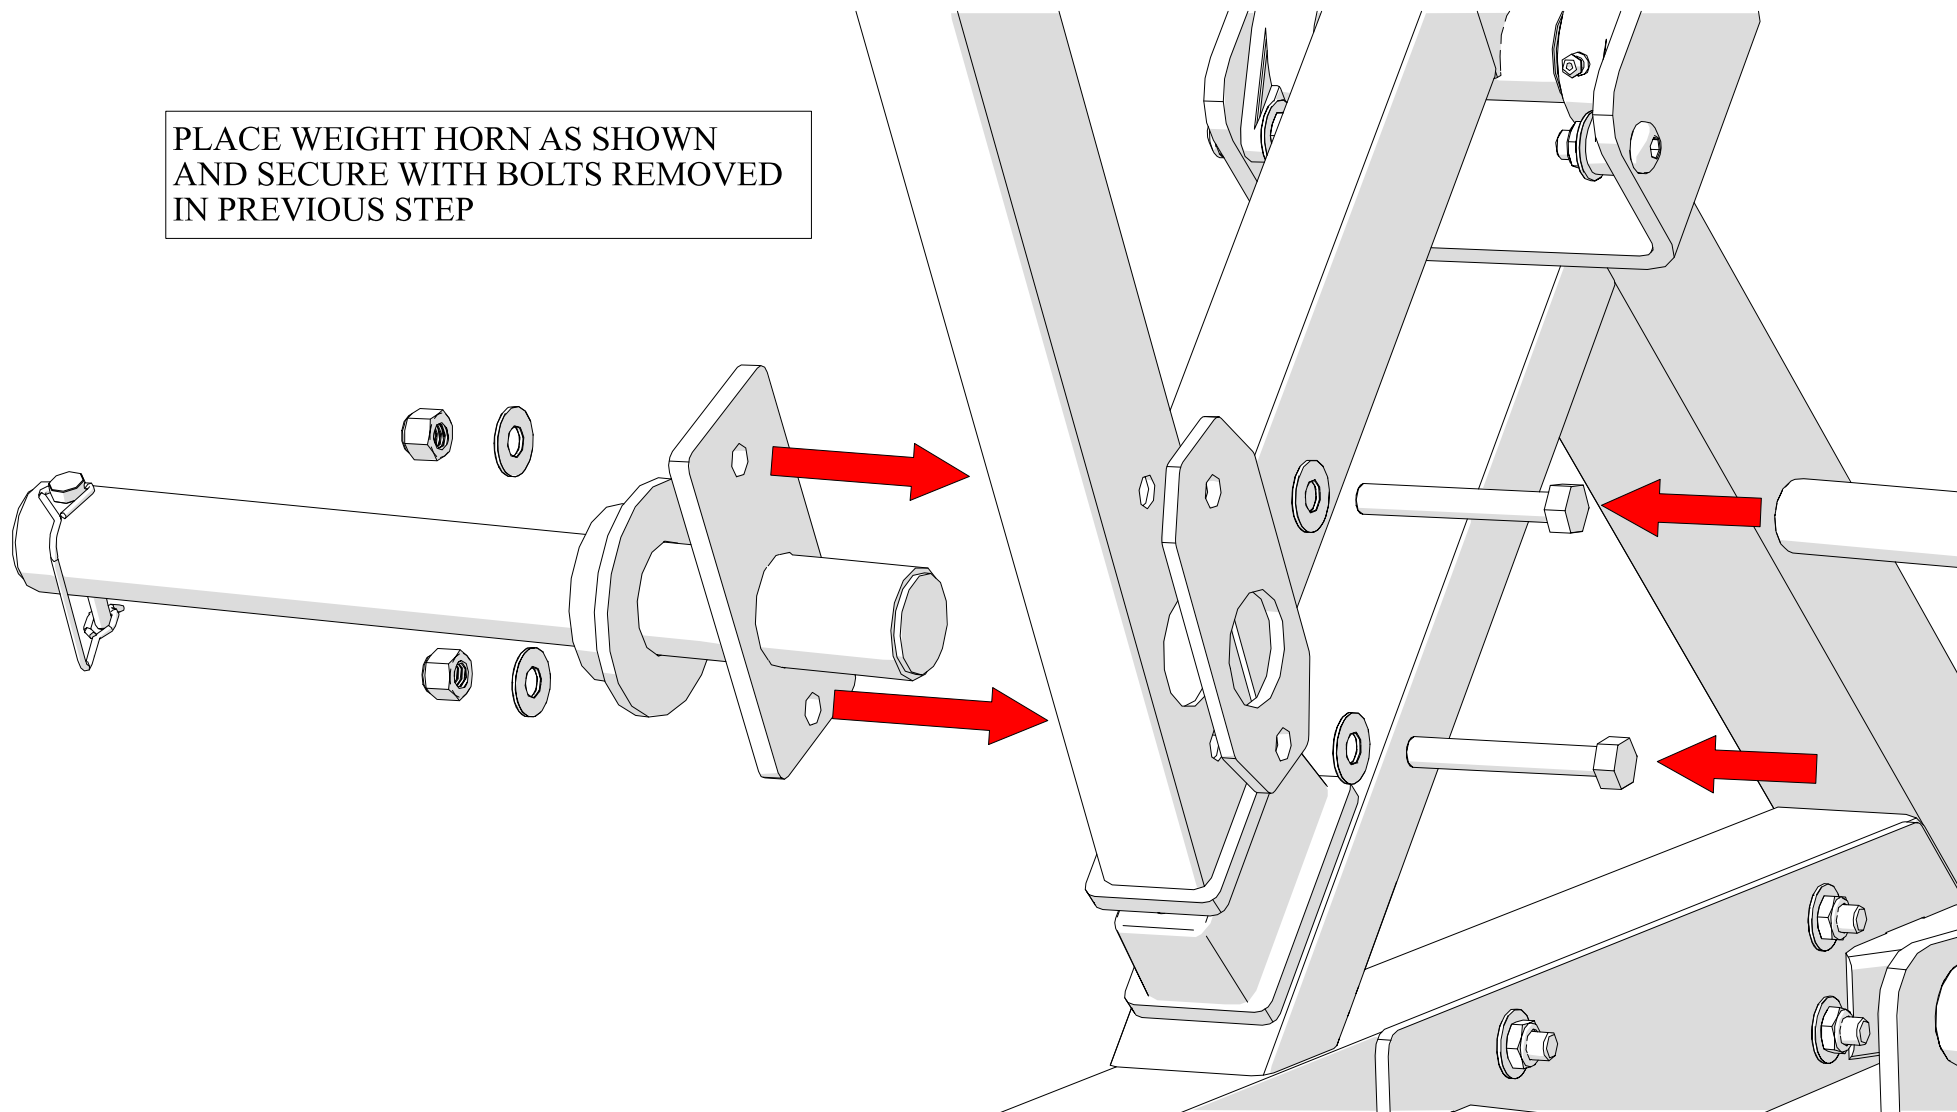

MOVE TO OPPOSITE SIDE OF MACHINE
AND REMOVE (QTY 2) 1/2"-13 X 3.5"
HEX HEAD BOLTS, NUTS, WASHERS,
AND BACKING PLATE

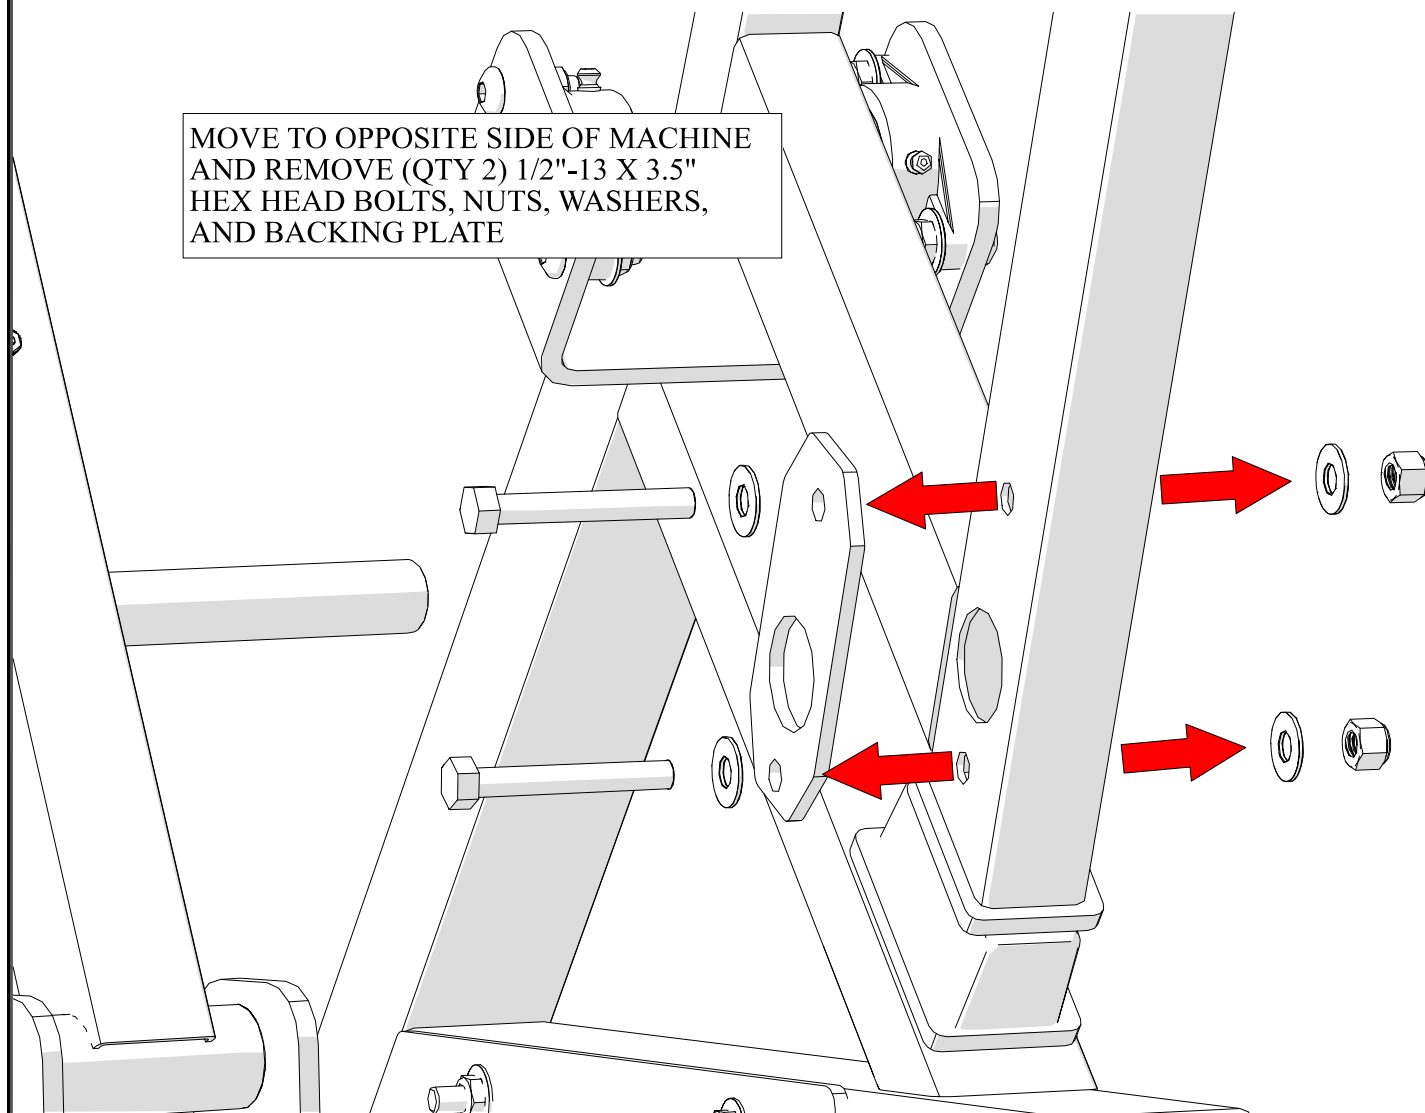

PLACE WEIGHT HORN AS SHOWN
AND SECURE WITH BOLTS, NUTS,
AND WASHER REMOVED IN PREVIOUS
STEP

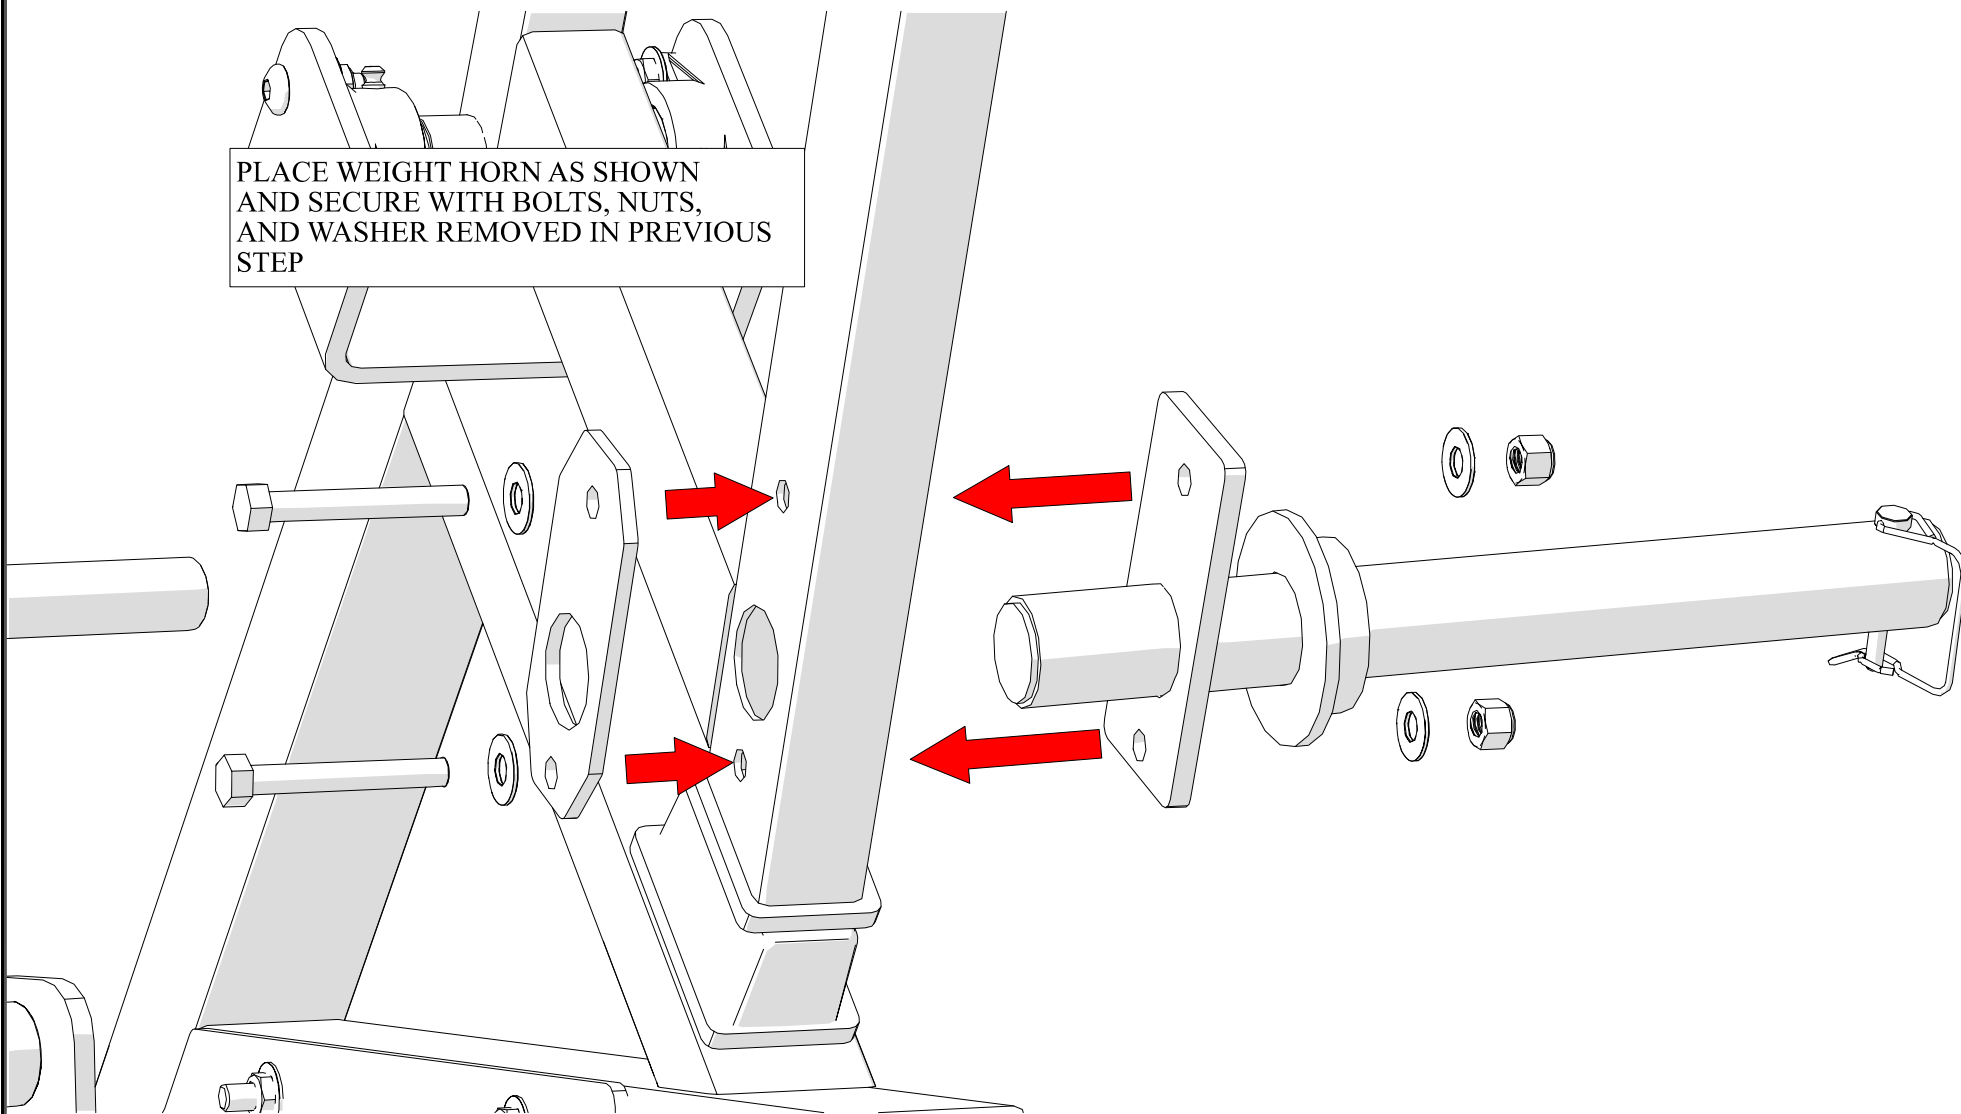

MAKE SURE ALL HARDWARE IS TIGHT
AND TEST ALL FUNCTIONS BEFORE
OPERATING EQUIPMENT

