



8010 SCORPION HIGH ROW


FINAL ASSEMBLY GUIDE

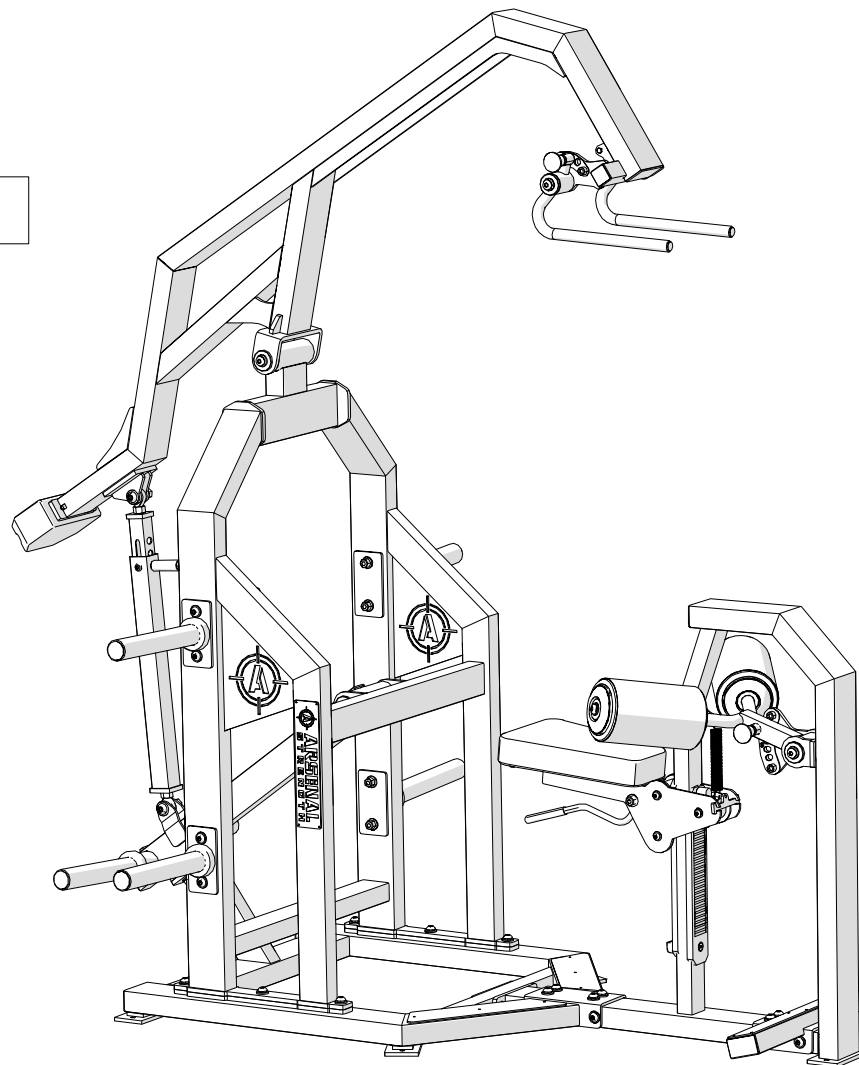


INSTALL RUBBER FEET ON
METAL FRAME PADS
(OPTIONAL)

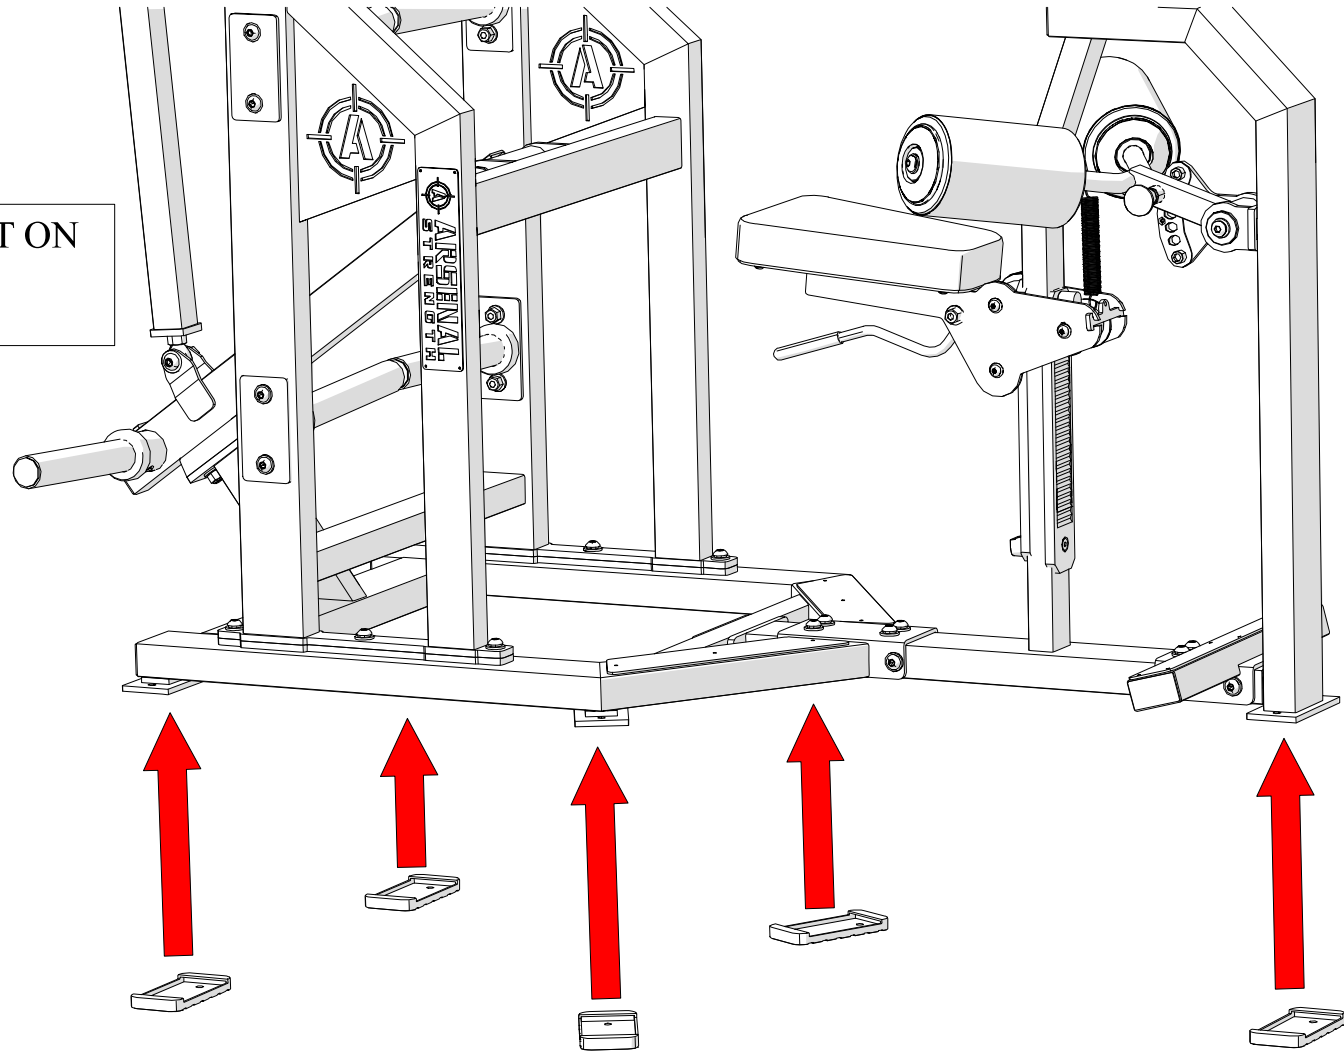


REMOVE (QTY 2) 1/2"-13 X 3.25" BUTTON
HEAD SCREWS, WASHERS, NYLOCK NUTS,
AND BACKING PLATED FROM WEIGHT
STORAGE HORN

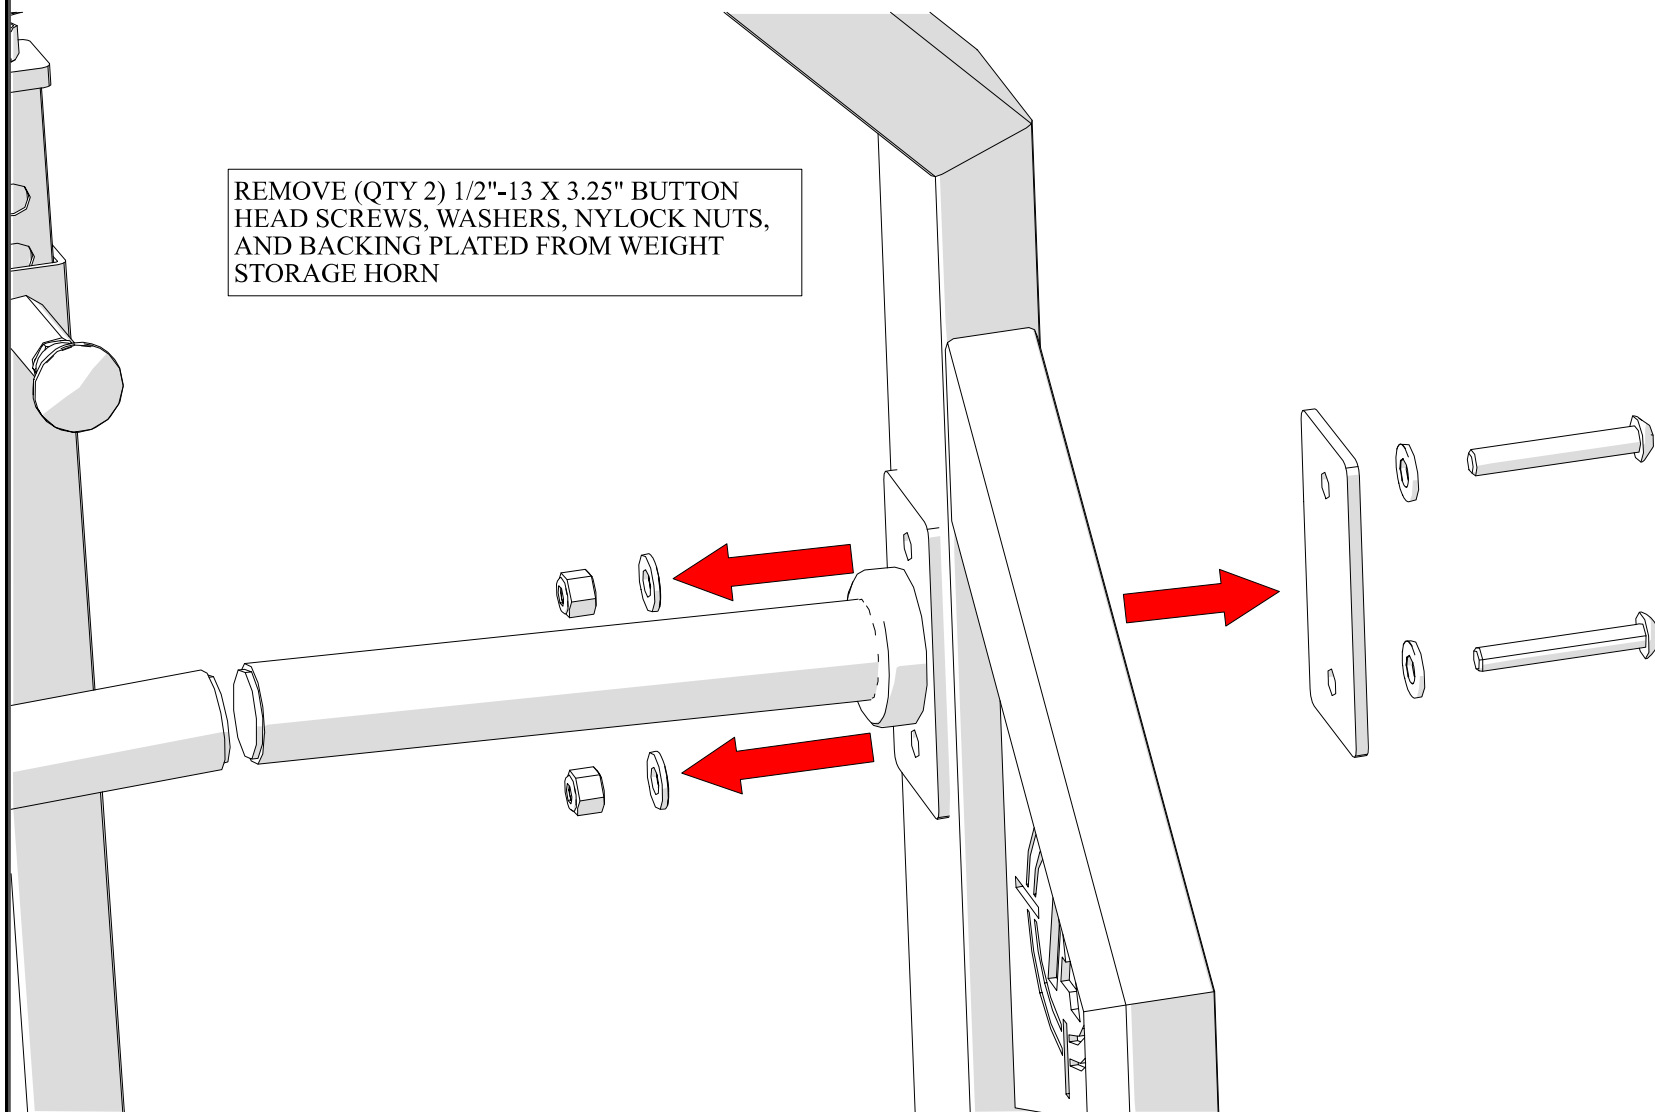

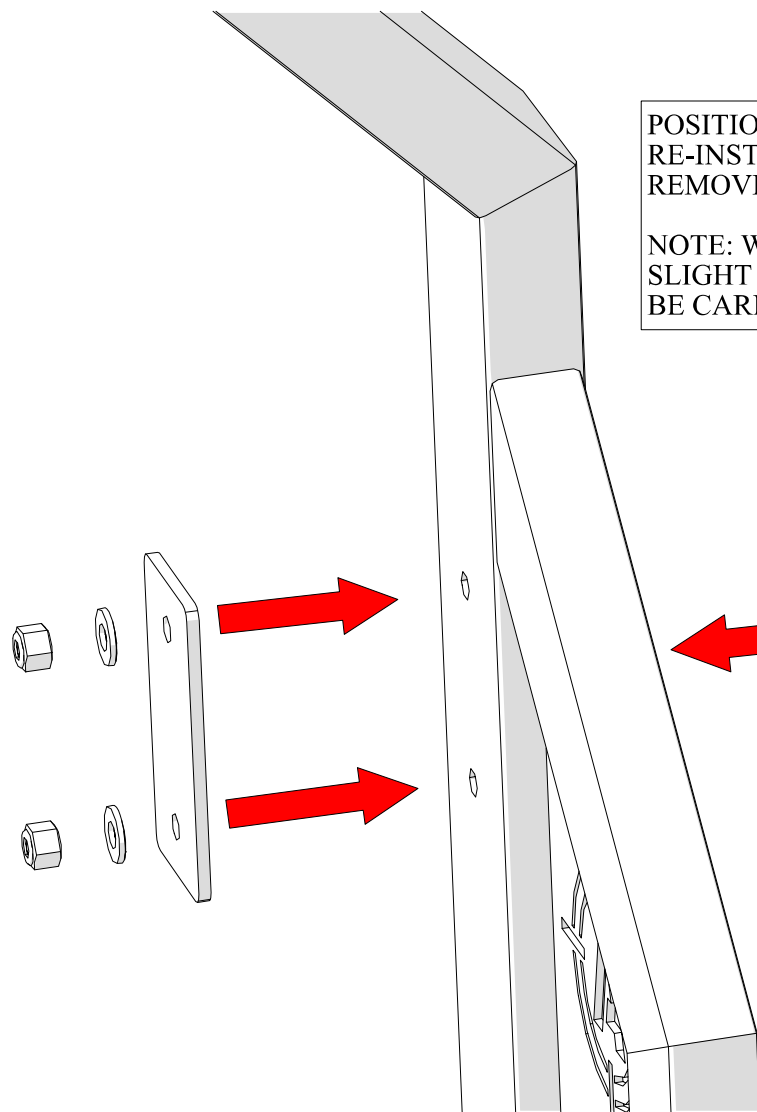


POSITION WEIGHT HORN AS SHOWN AND
RE-INSTALL WITH HARDWARE PREVIOUSLY
REMOVED.

NOTE: WEIGHT HORN SHOULD HAVE A
SLIGHT UPWARD ANGLE WHEN INSTALLED-
BE CAREFUL NOT TO INSTALL UPSIDE-DOWN

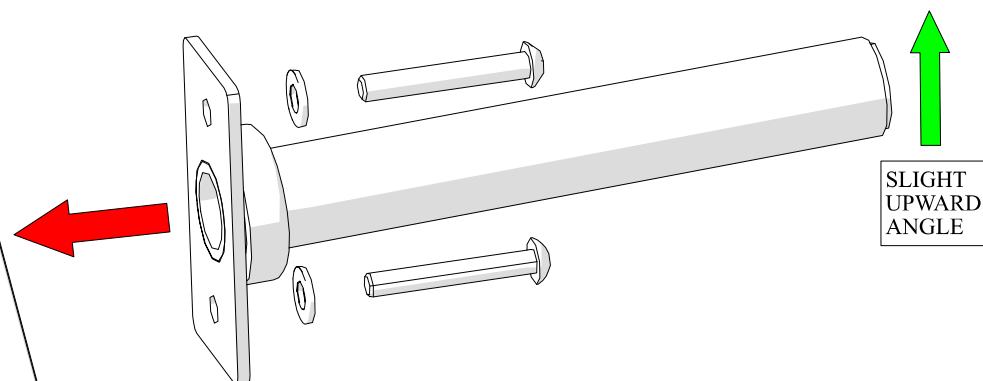

SLIGHT
UPWARD
ANGLE

REPEAT PROCESS ON 3 REMAINING
WEIGHT STORAGE HORNS

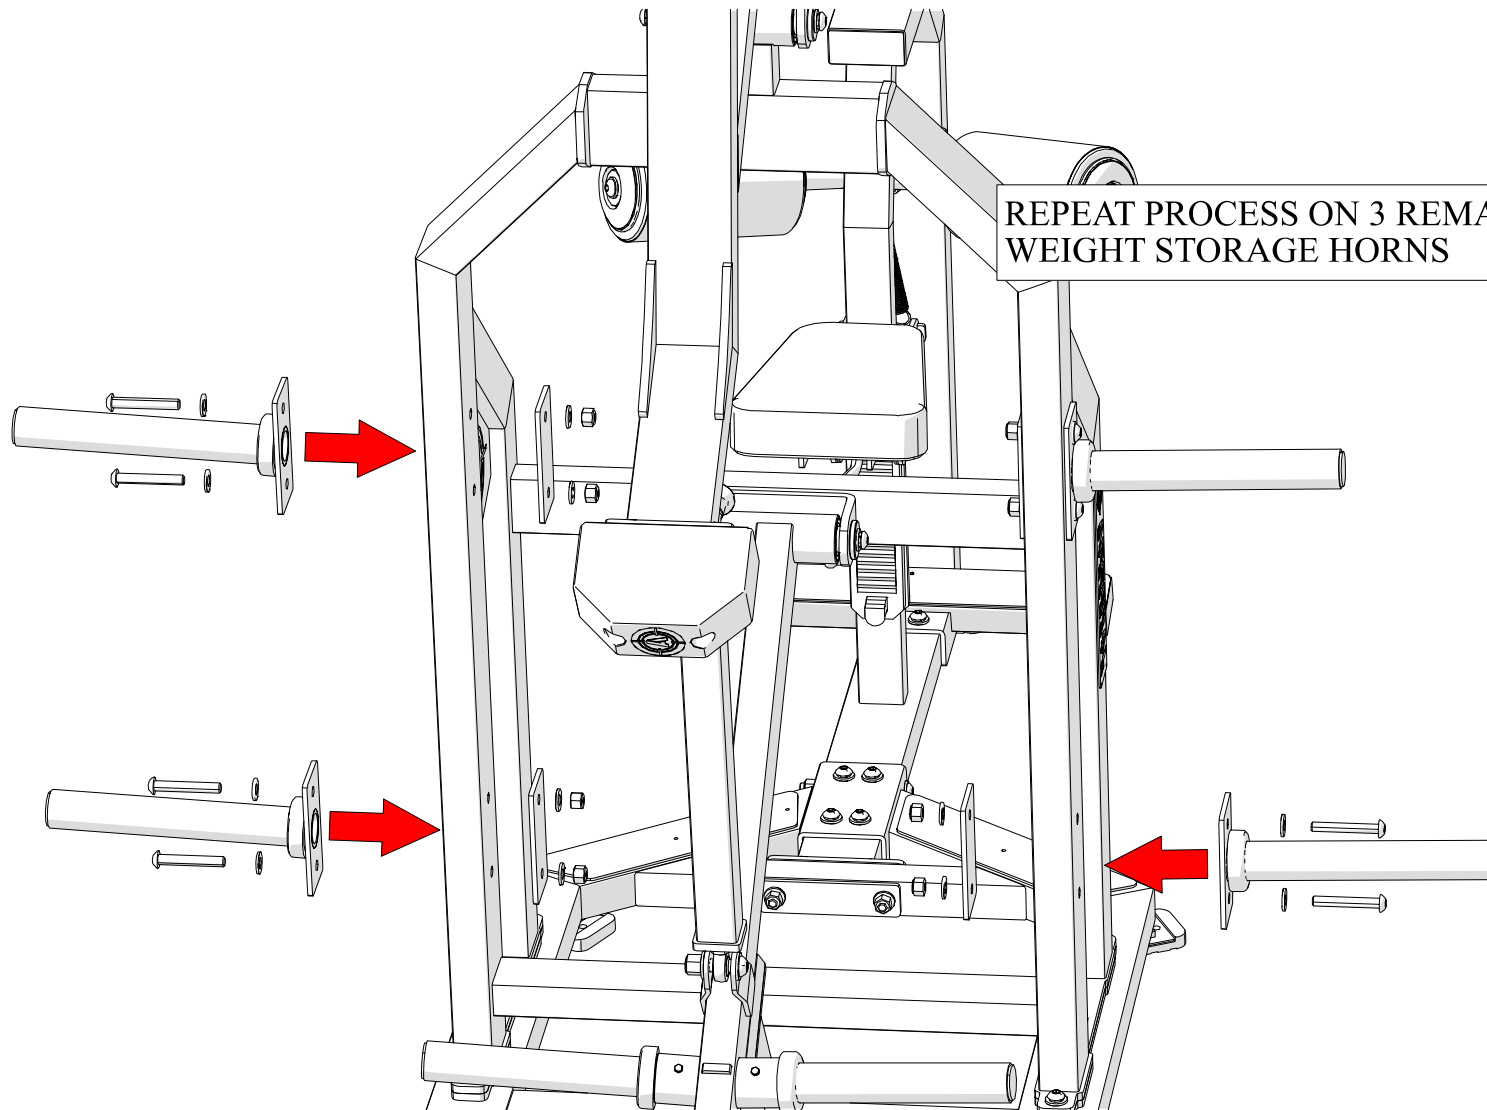

MAKE SURE ALL HARDWARE IS TIGHT
AND TEST ALL FUNCTIONS BEFORE
OPERATING EQUIPMENT

