




9065 RELOADED BELT SQUAT

FINAL ASSEMBLY GUIDE

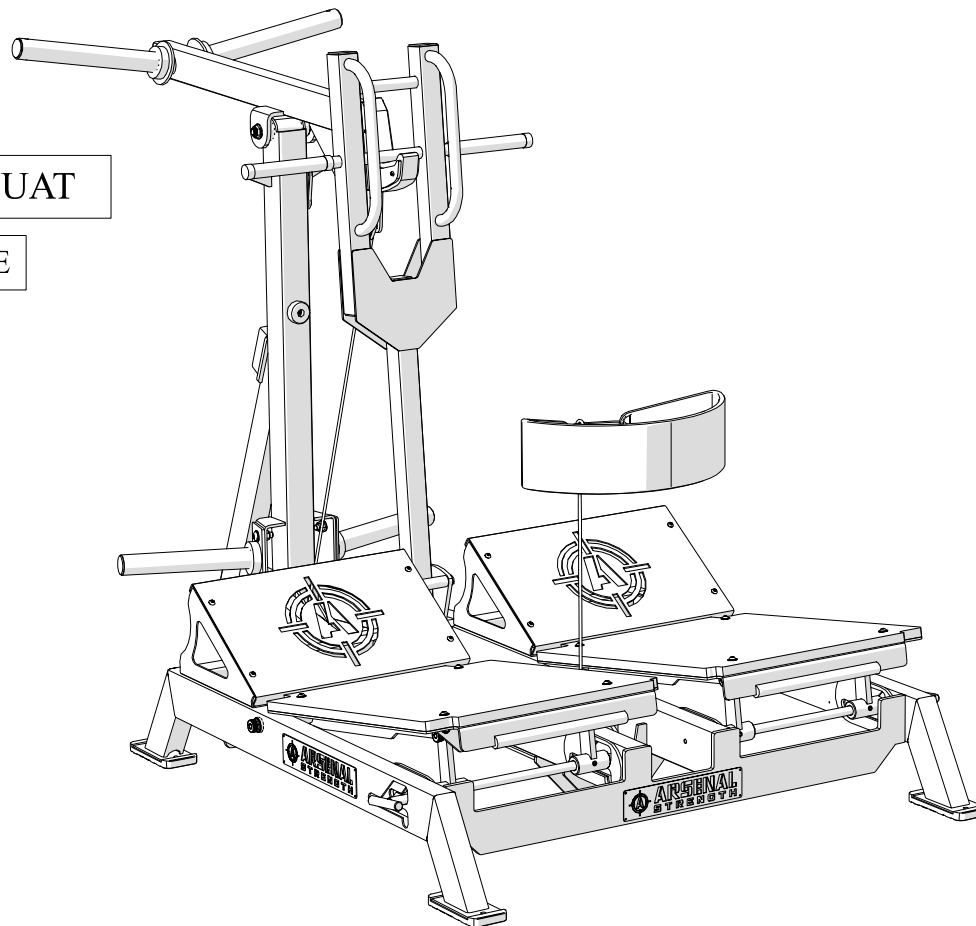


UNWRAP AND SET ASIDE ALL
PARTS NOT ATTACHED TO
MACHINE

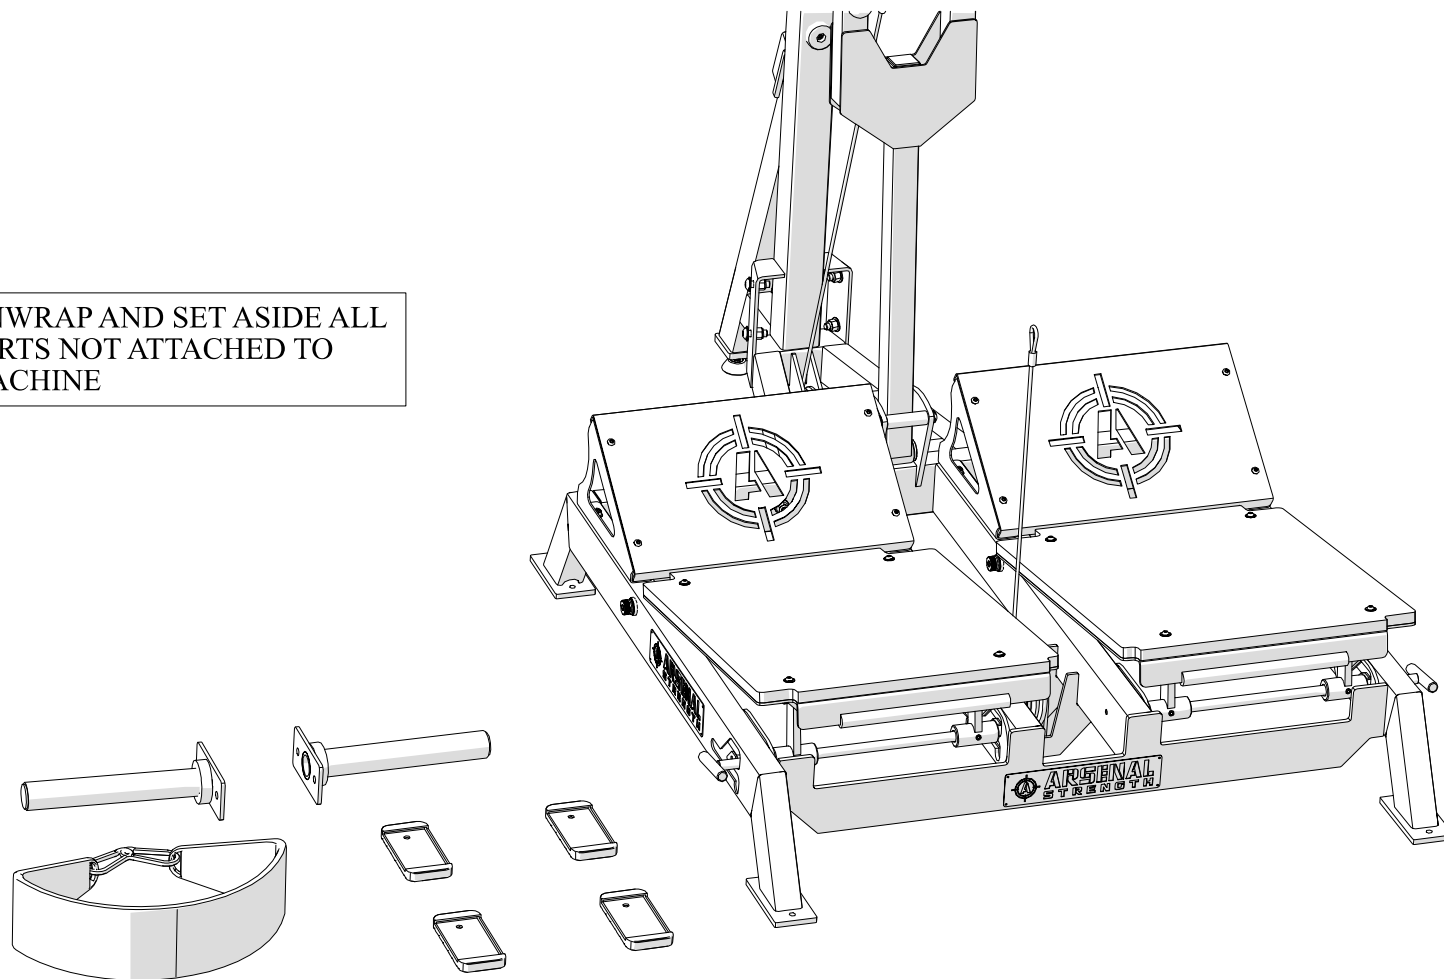


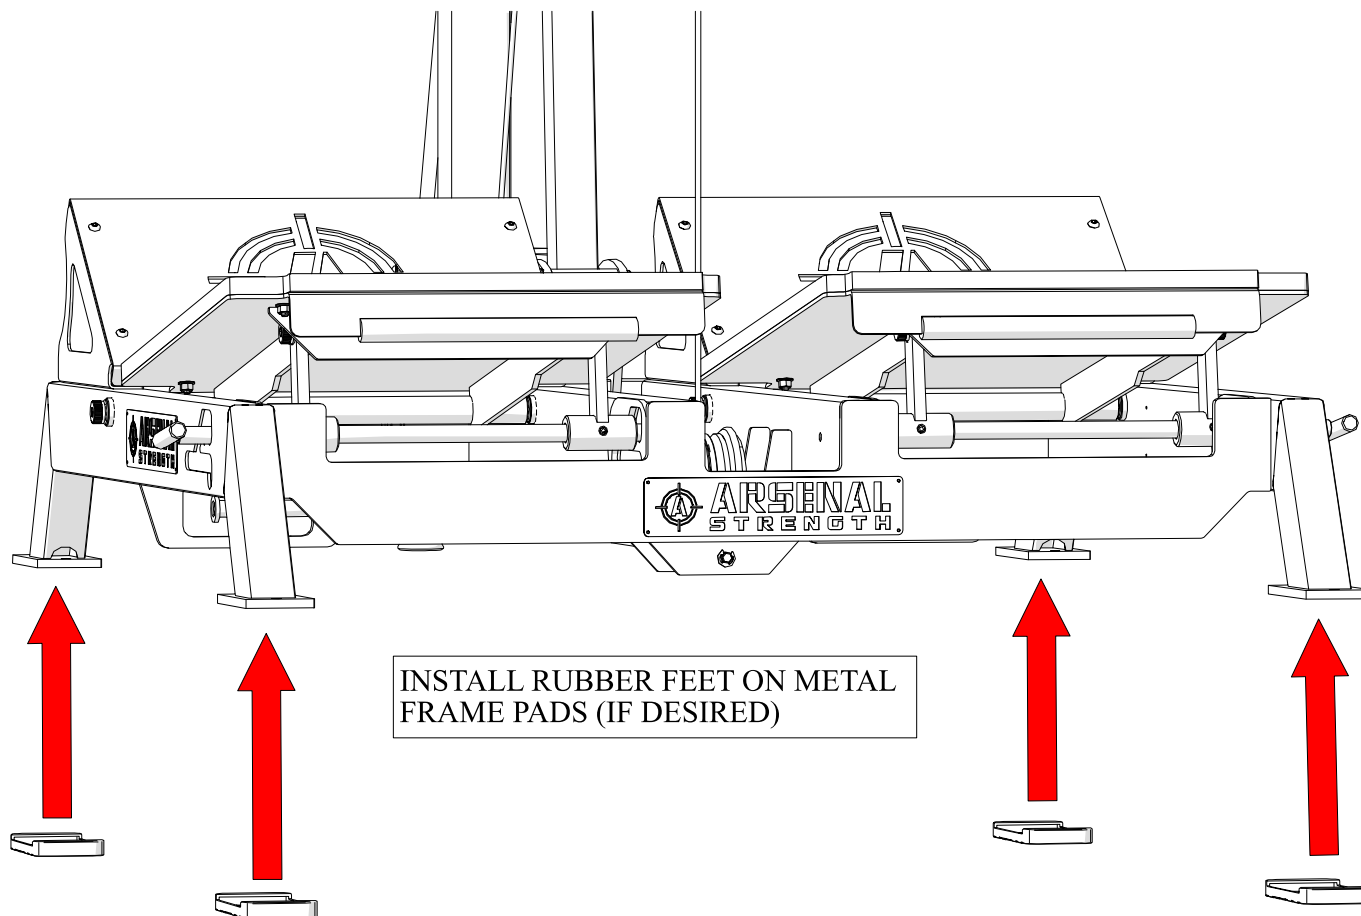

INSTALL RUBBER FEET ON METAL
FRAME PADS (IF DESIRED)

REMOVE (QTY 2) 1/2"-13 X 1.5" BUTTON HEAD
SCREWS, WASHERS, AND NYLOCK NUTS

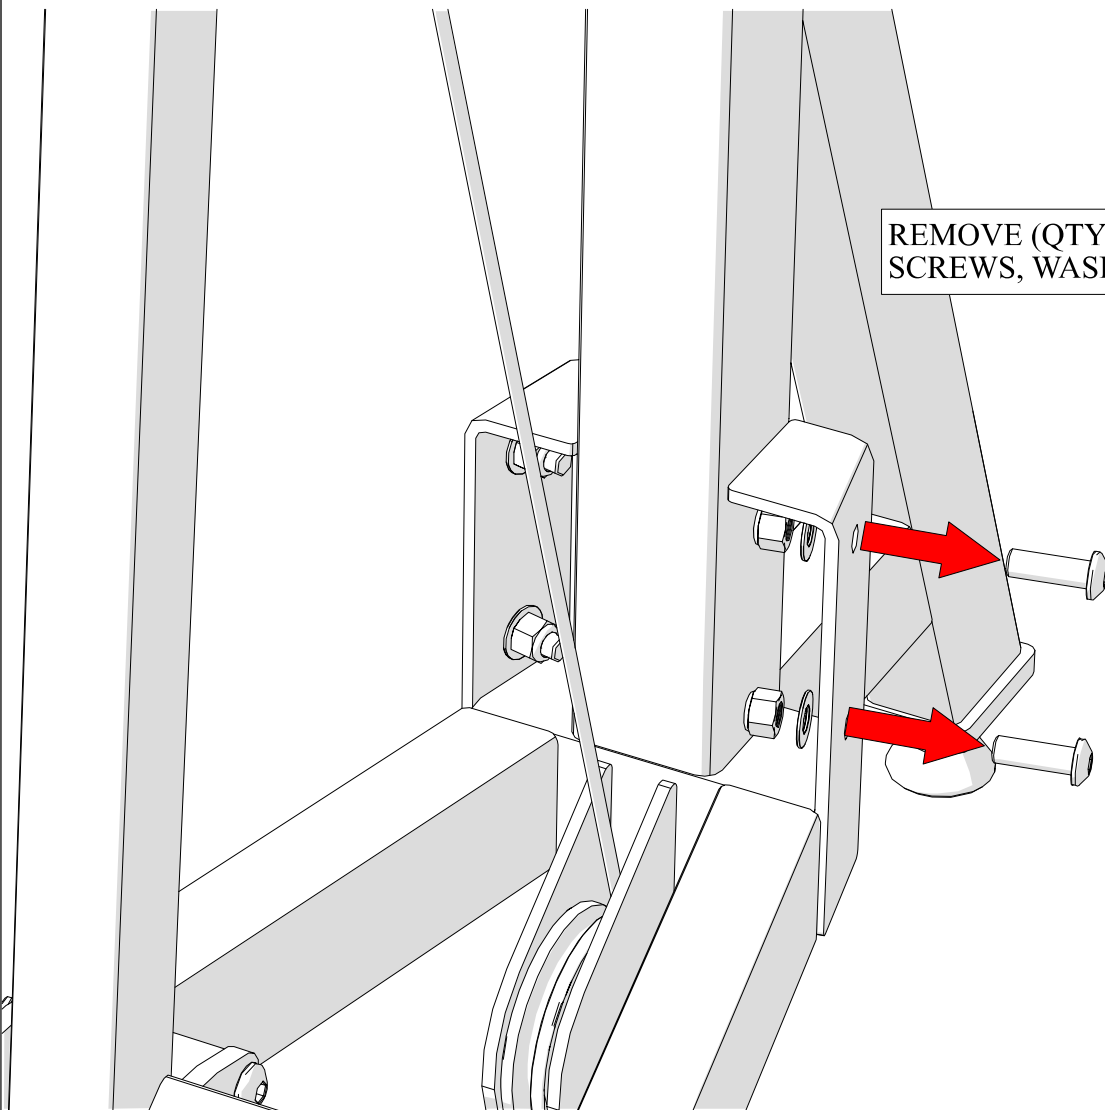

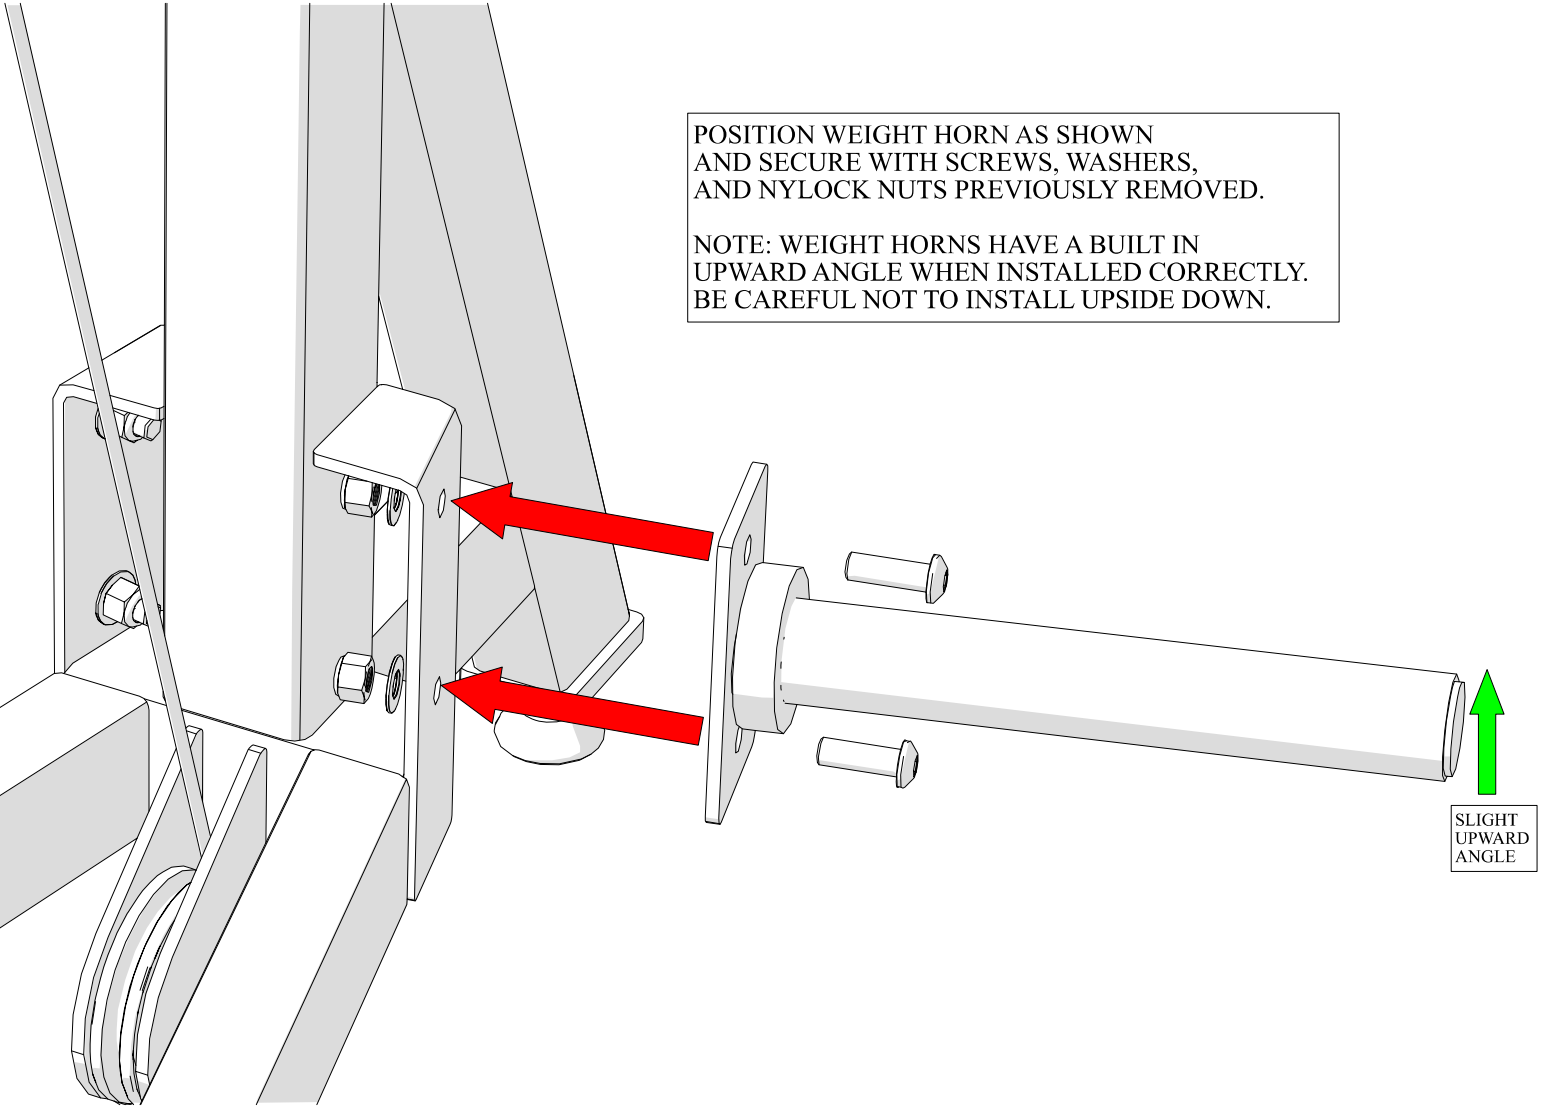


POSITION WEIGHT HORN AS SHOWN
AND SECURE WITH SCREWS, WASHERS,
AND NYLOCK NUTS PREVIOUSLY REMOVED.


NOTE: WEIGHT HORNS HAVE A BUILT IN
UPWARD ANGLE WHEN INSTALLED CORRECTLY.
BE CAREFUL NOT TO INSTALL UPSIDE DOWN.

SLIGHT
UPWARD
ANGLE

REPEAT INSTALLATION ON OPPOSITE SIDE

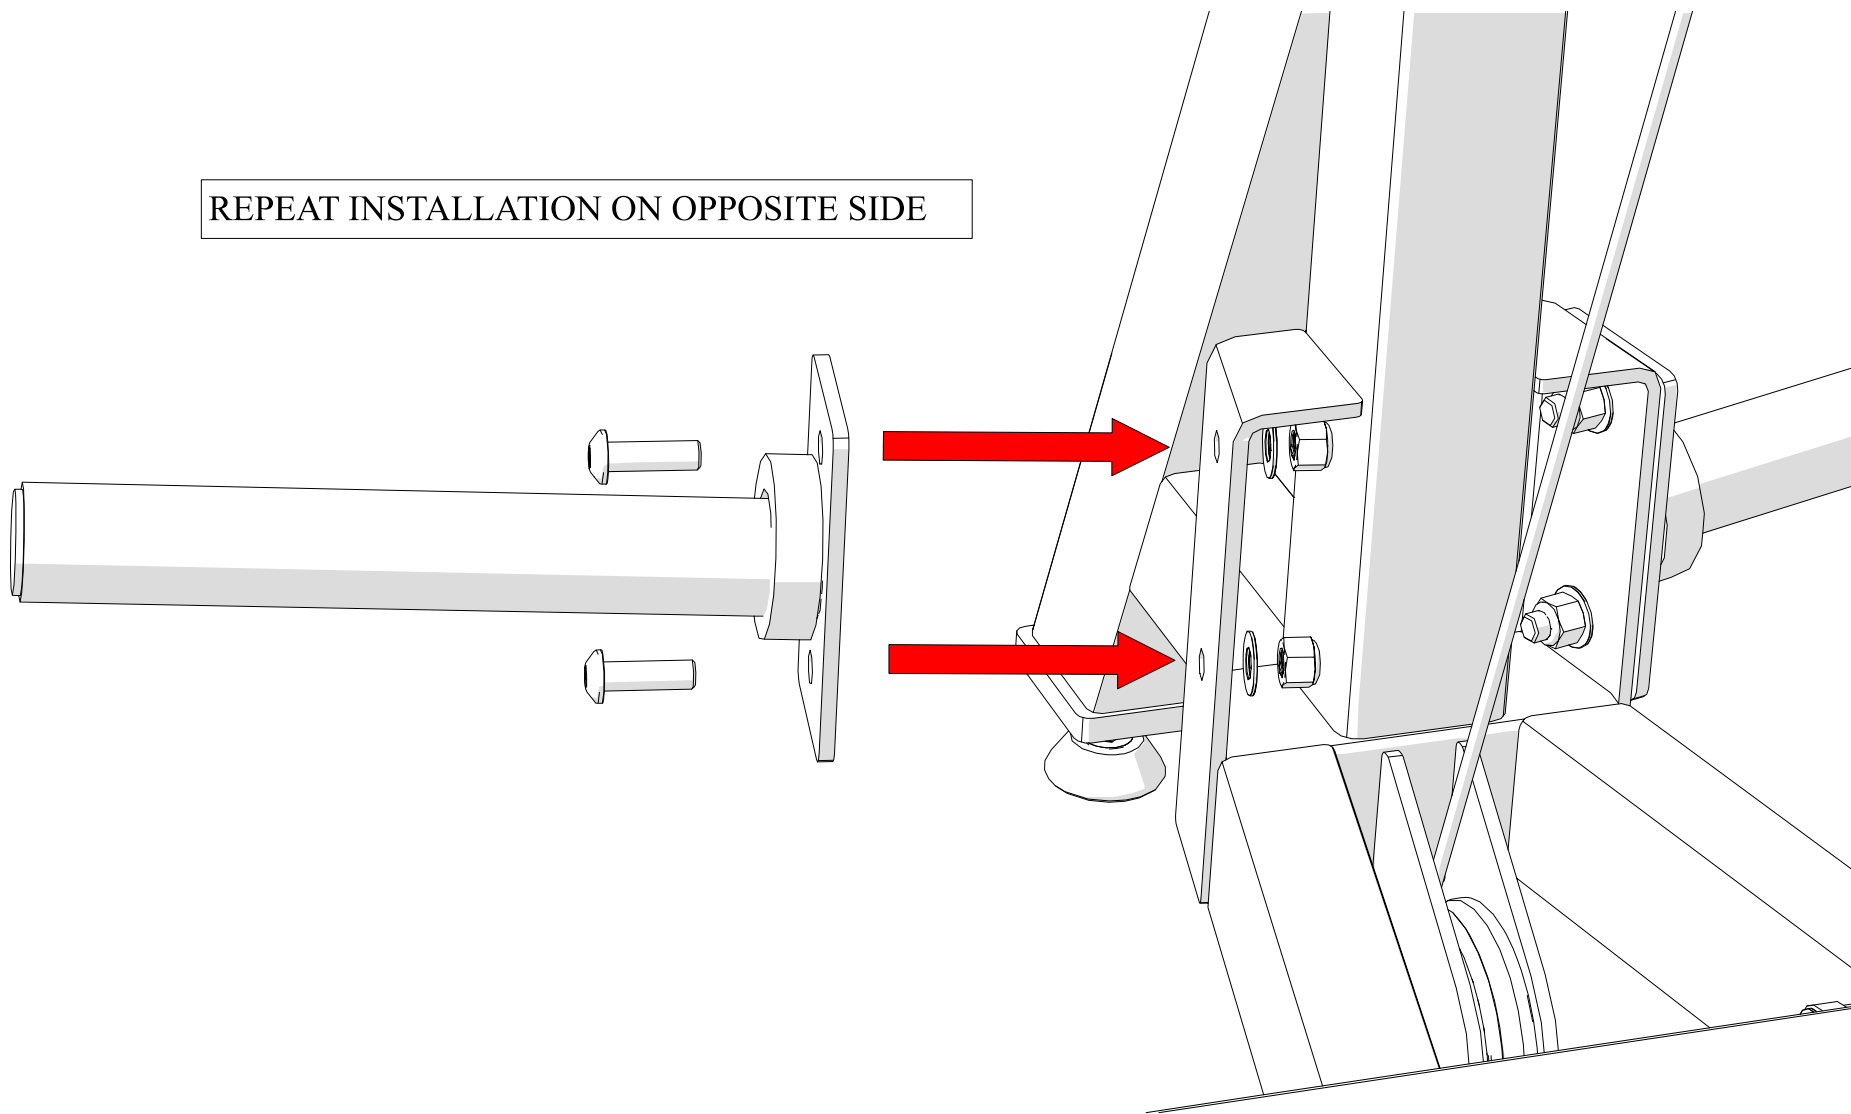

INSTALL SPUD BELT USING
(QTY 2) 10MM CARABINERS

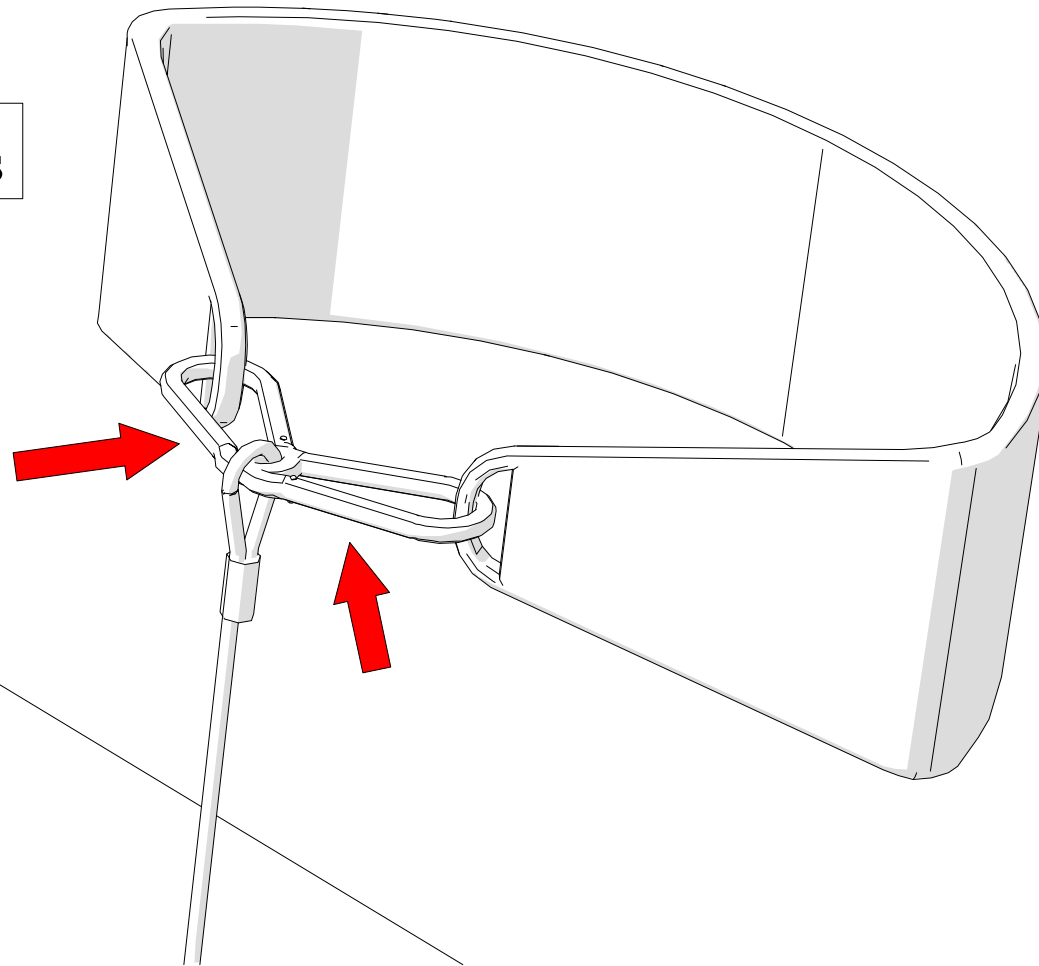

MAKE SURE ALL HARDWARE IS TIGHT AND
CHECK ALL FUNCTIONS BEFORE OPERATING
EQUIPMENT.

