



8012 ISO BICEP CURL


FINAL ASSEMBLY GUIDE

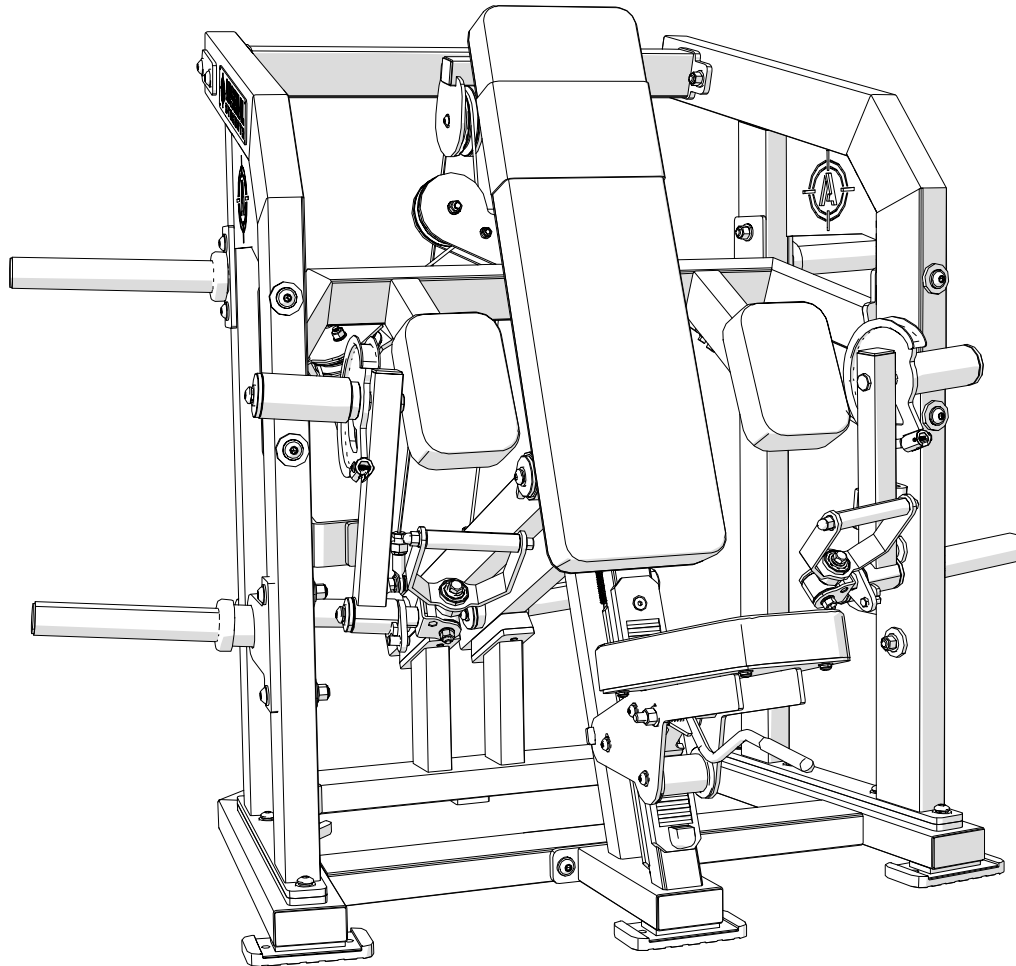


INSTALL RUBBER FEET ON METAL
FRAME PADS (OPTIONAL)

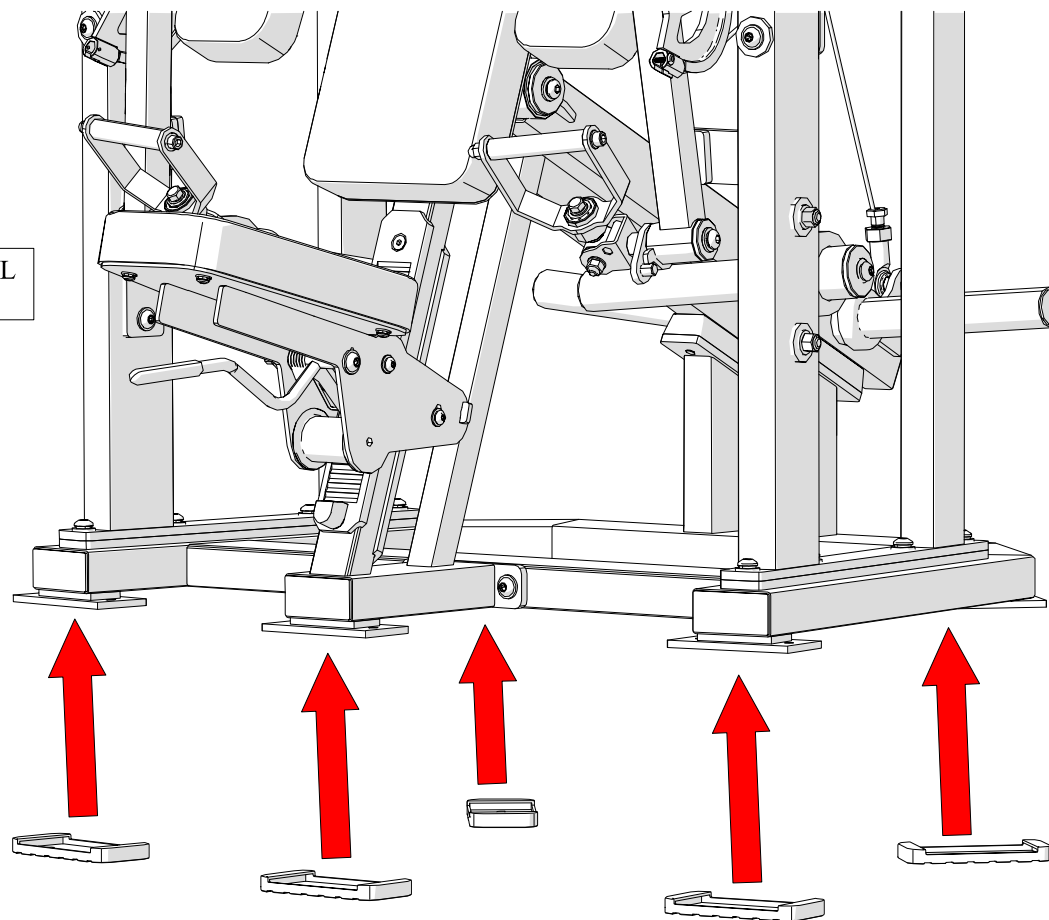


AT REAR OF MACHINE, REMOVE (QTY 2) 1/2"-13 X 3.25"
BUTTON HEAD SCREWS, WASHERS, NYLOCK NUTS, WEIGHT
STORAGE HORN, AND BACKING PLATE.

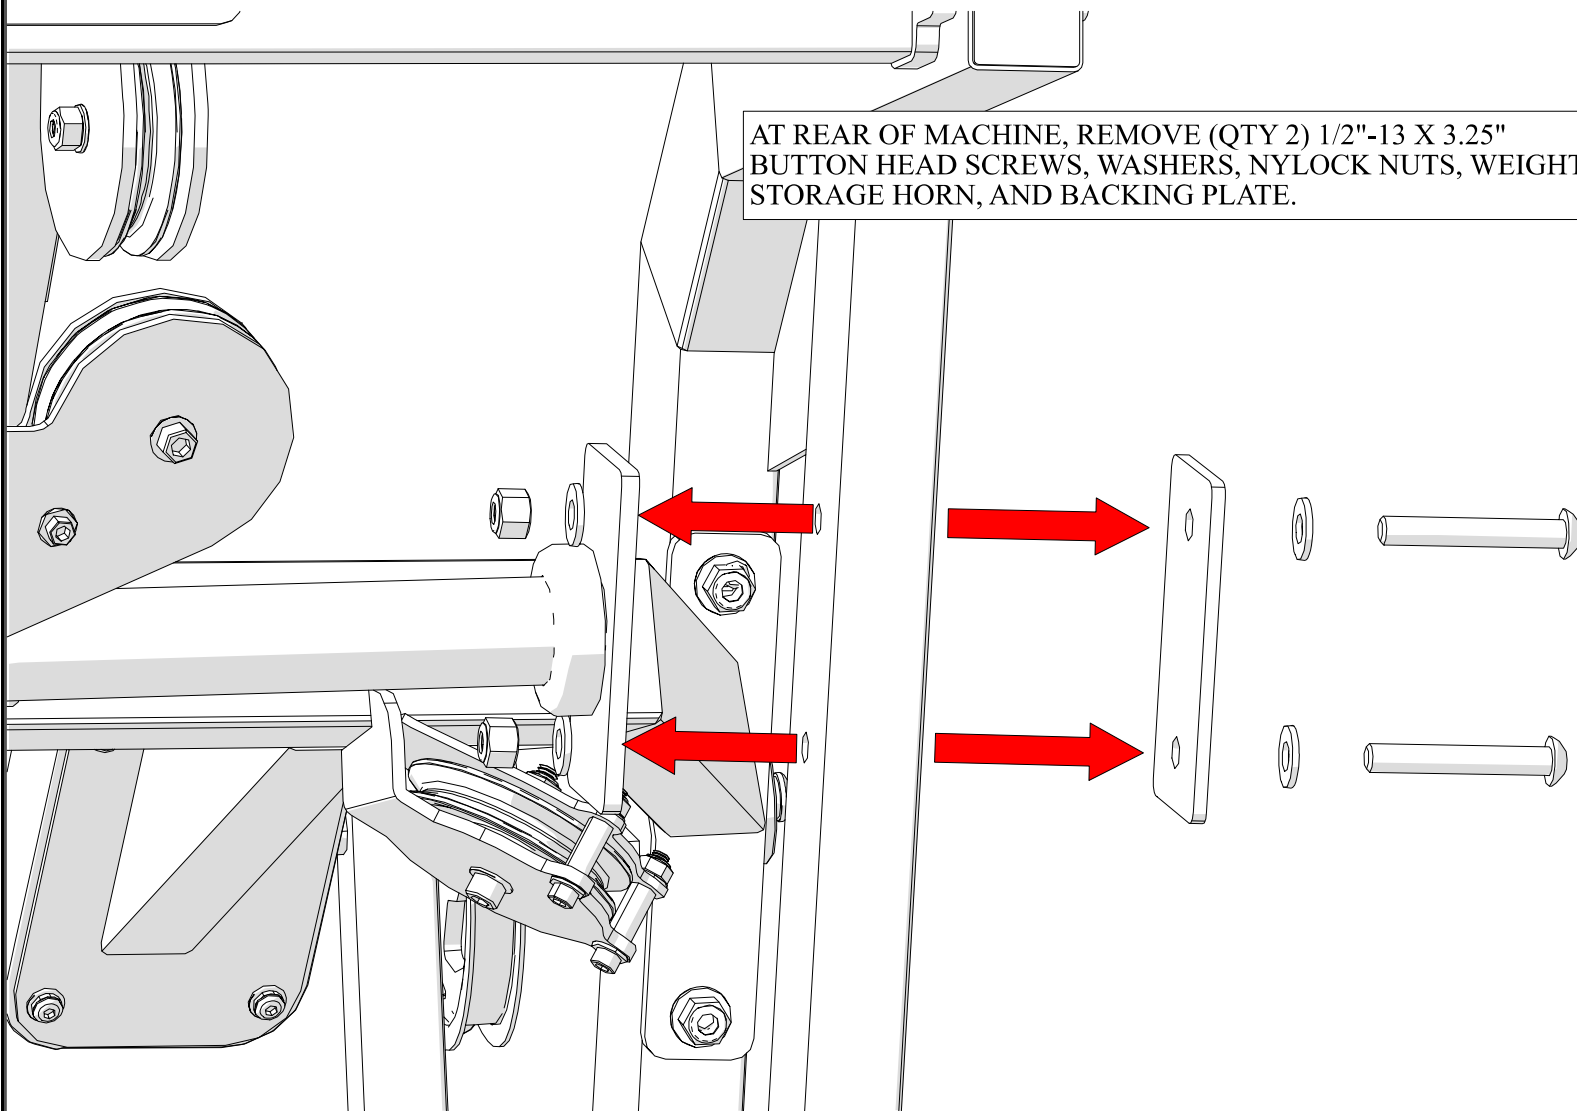

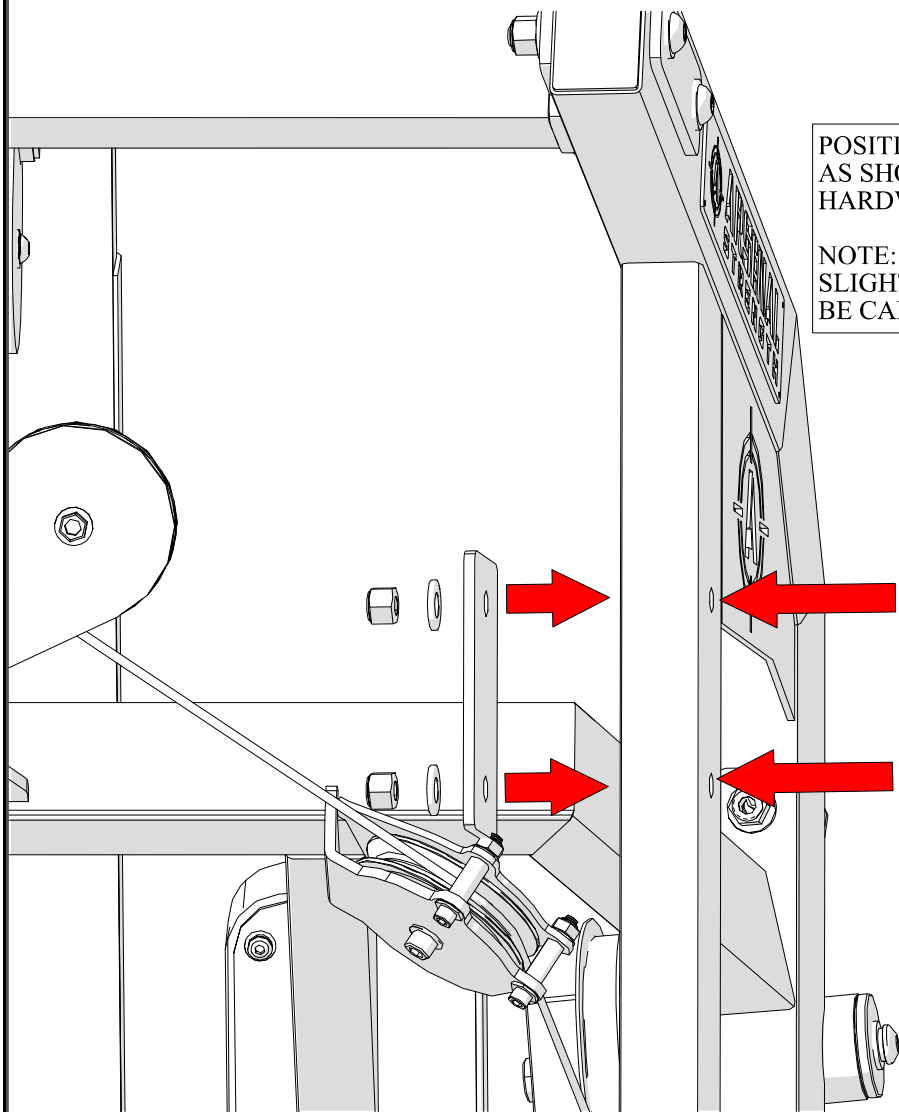


POSITION WEIGHT STORAGE HORN
AS SHOWN AND RE-INSTALL USING
HARDWARE PREVIOUSLY REMOVED

NOTE: WEIGHT HORN SHOULD HAVE A
SLIGHT UPWARD ANGLE WHEN INSTALLED,
BE CAREFUL NOT TO INSTALL UPSIDE-DOWN



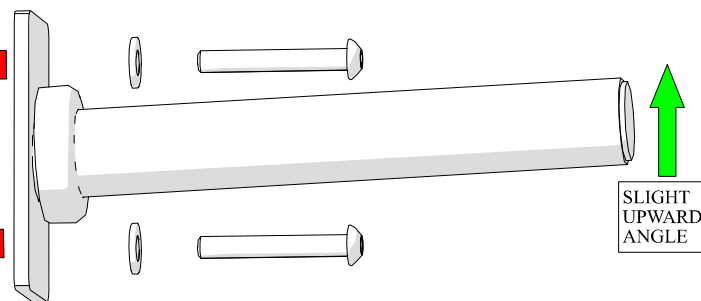



SLIGHT
UPWARD
ANGLE

REPEAT ON OPPOSITE SIDE

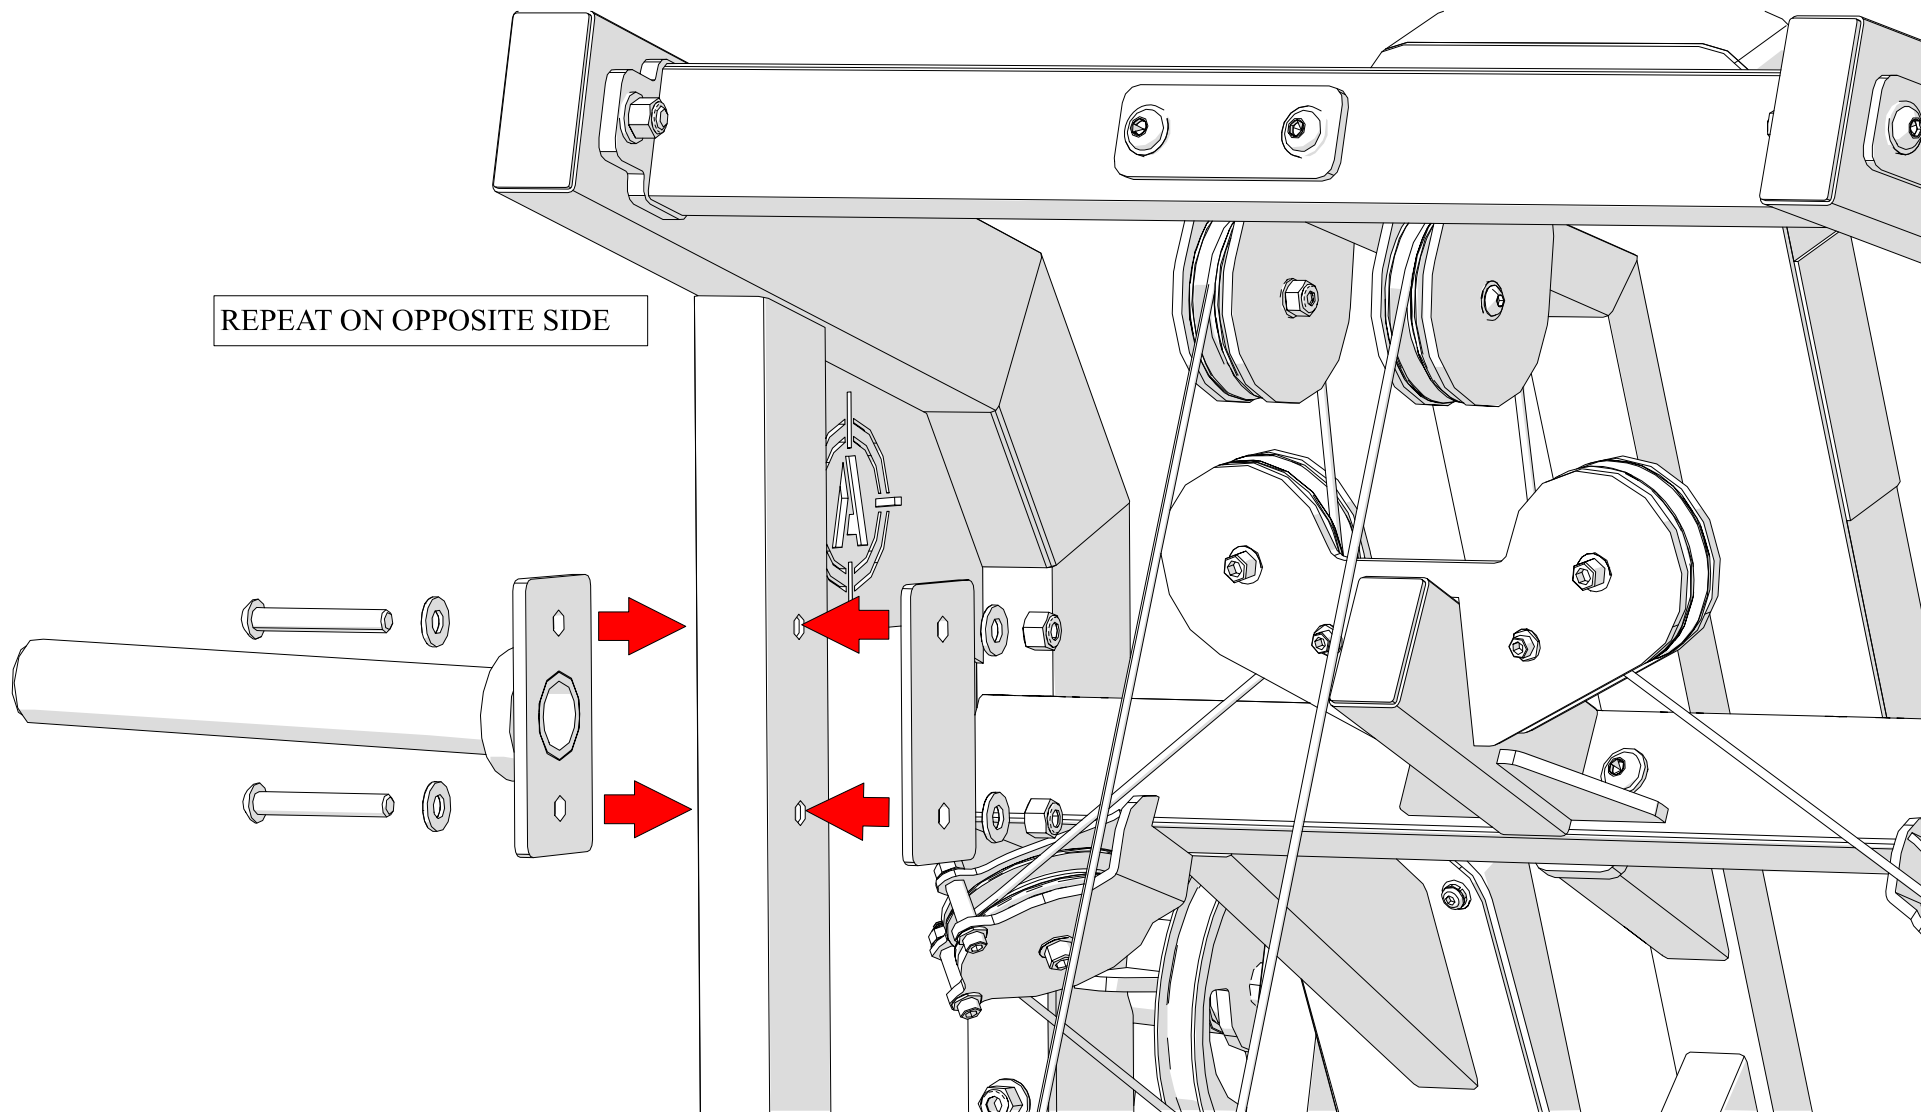

AT FRONT OF MACHINE, REMOVE (QTY 2)
1/2-13 X 3.25" BUTTON HEAD SCREWS,
WASHERS, BACKING PATES, AND WEIGHT
STORAGE HORN ASSEMBLIES

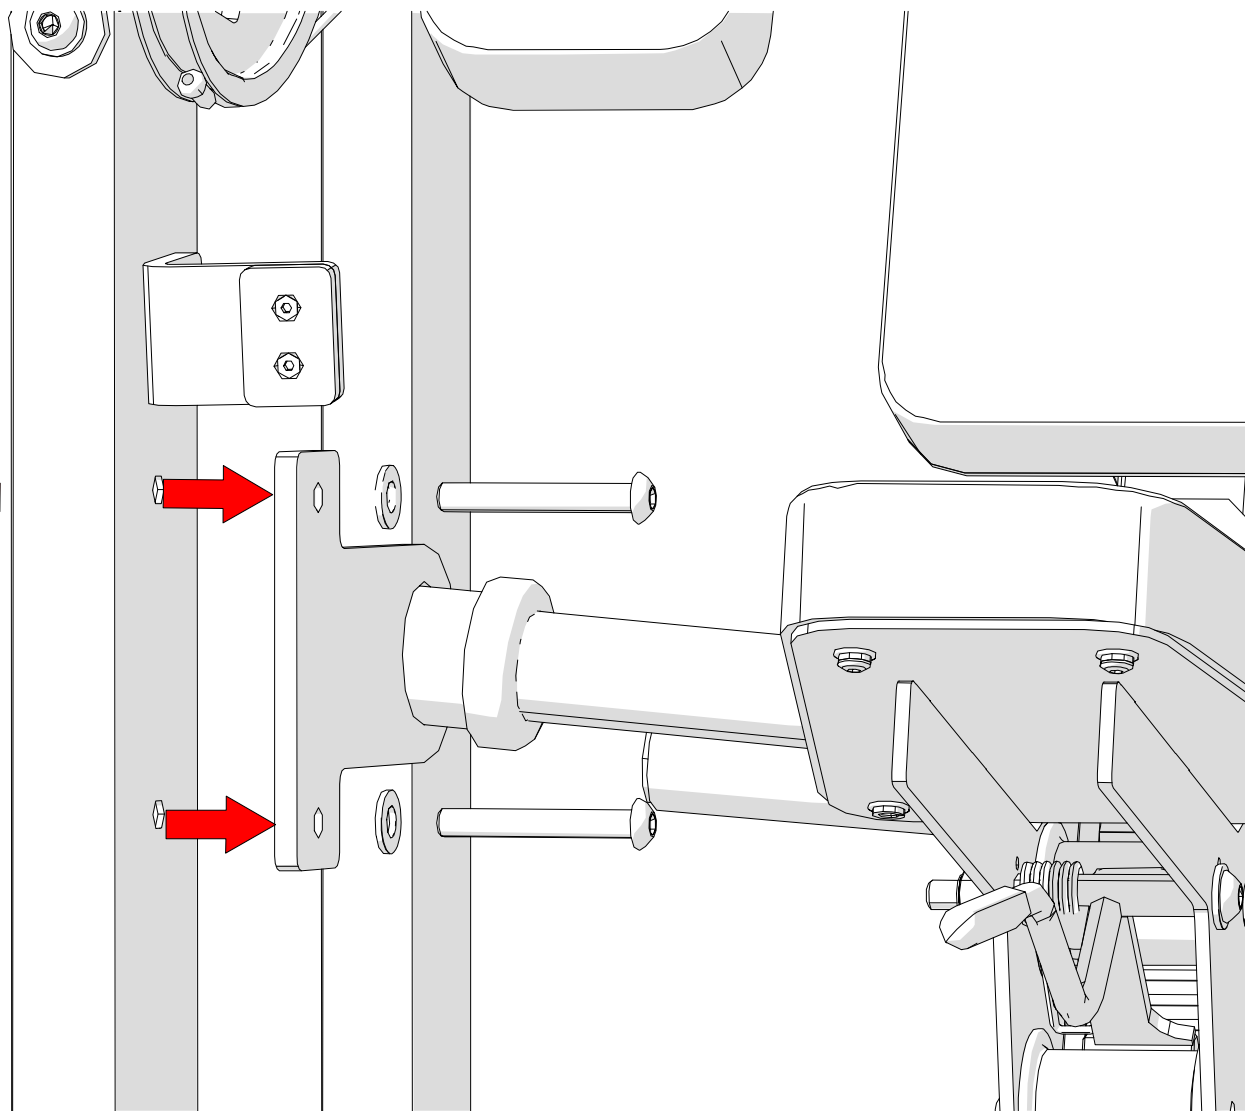


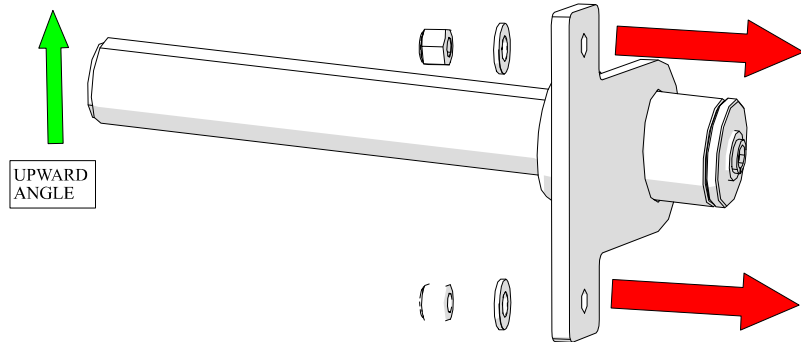


UPWARD
ANGLE

POSITION WEIGHT HORN ASSEMBLY AS
SHOWN AND RE-INSTALL USING HARDWARE
PREVIOUSLY REMOVED.

MAKE SURE WEIGHT HORN ANGLES UPWARD
AFTER INSTALLATION. IF IT DOES NOT, SWAP
ASSEMBLY WITH WEIGHT HORN ON OPPOSITE
SIDE OF MACHINE

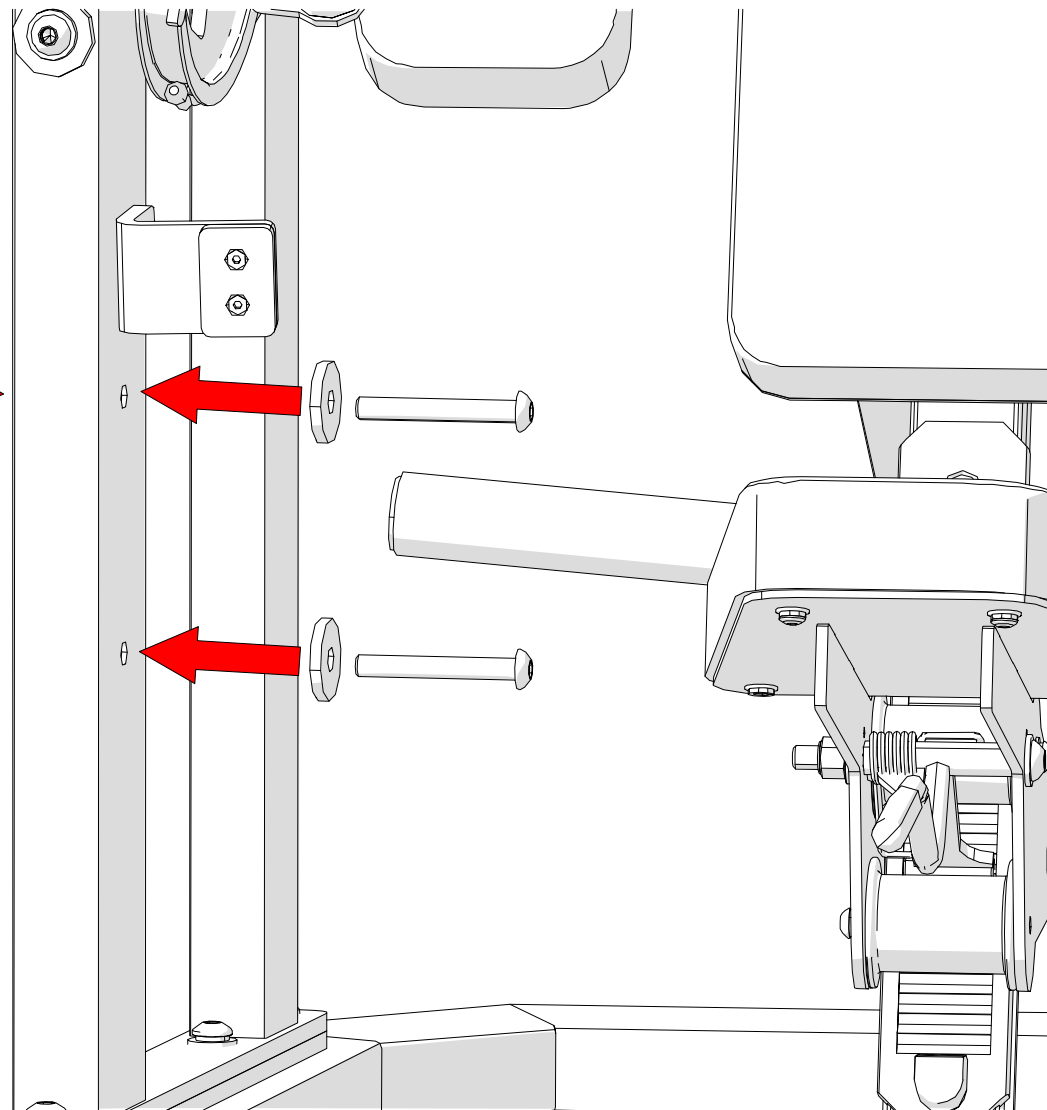

REPEAT PROCESS ON OPPOSITE SIDE

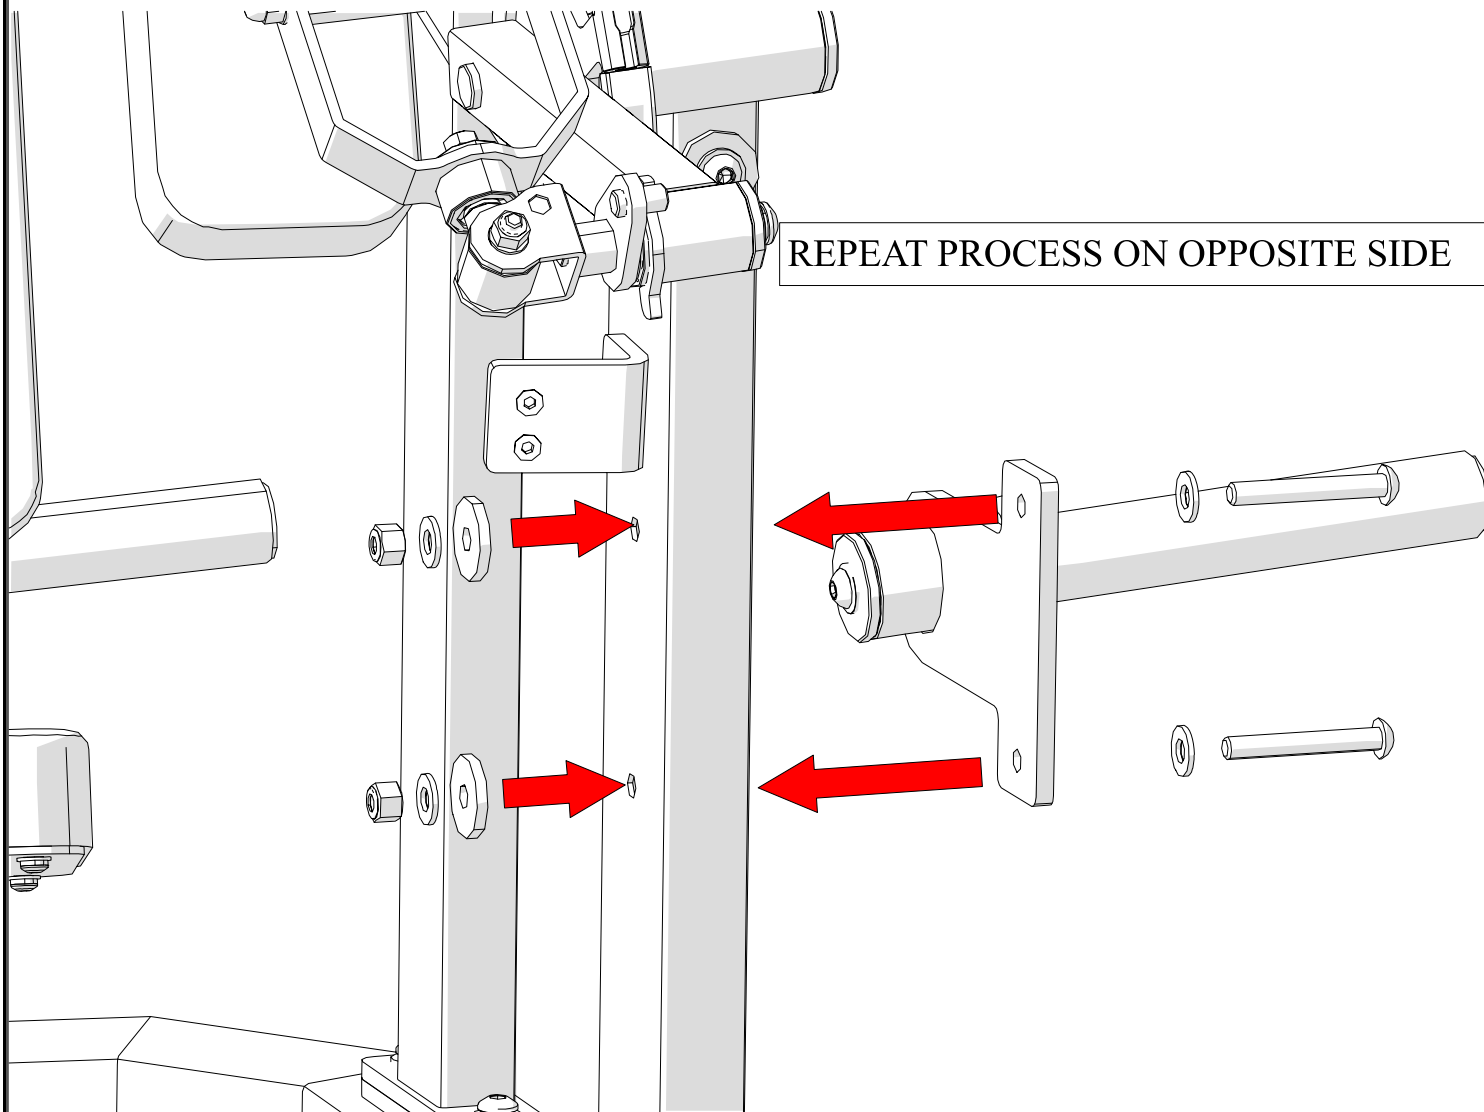

MAKE SURE ALL HARDWARE IS TIGHT
AND TEST ALL FUNCTIONS BEFORE
OPERATING EQUIPMENT

