



9018 RELOADED ISO FLAT PRESS


FINAL ASSEMBLY GUIDE

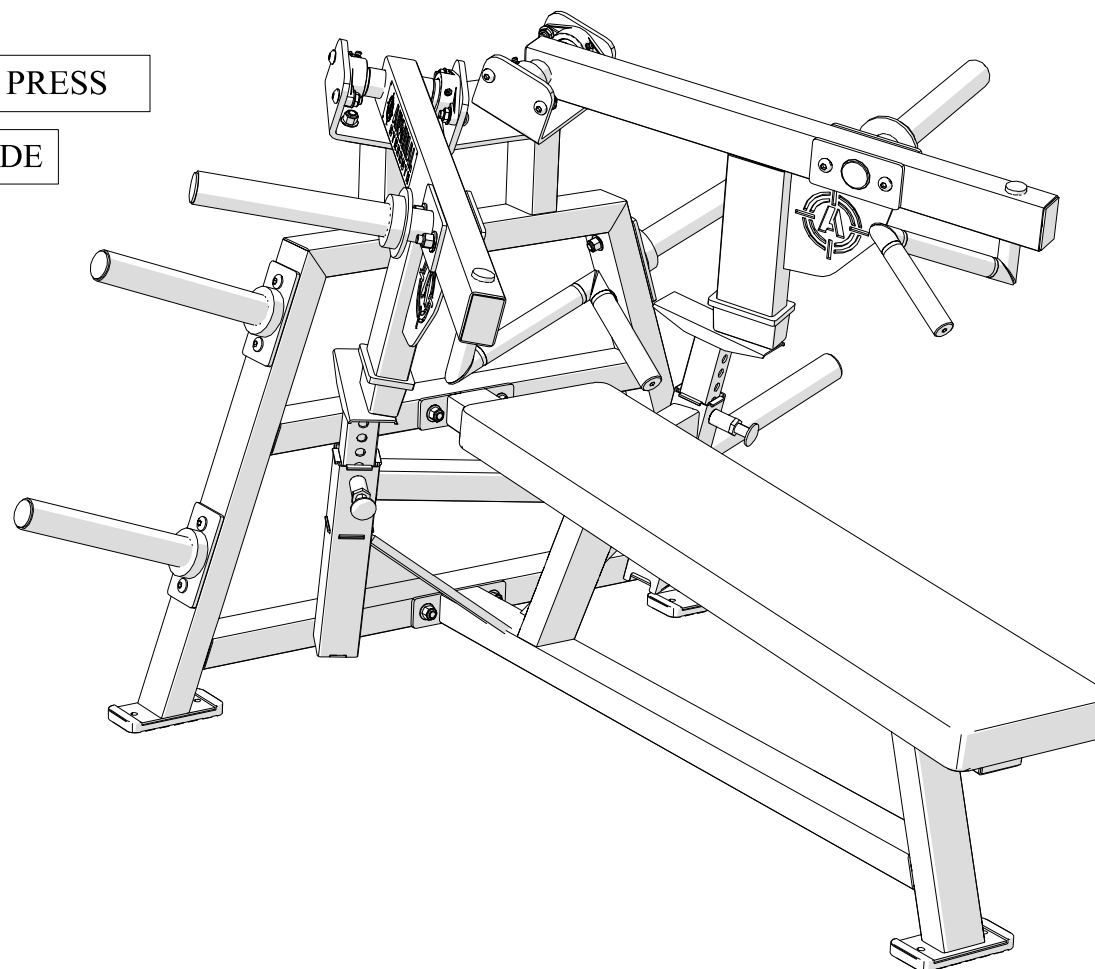


UNWRAP AND SET ASIDE ALL LOOSE PARTS

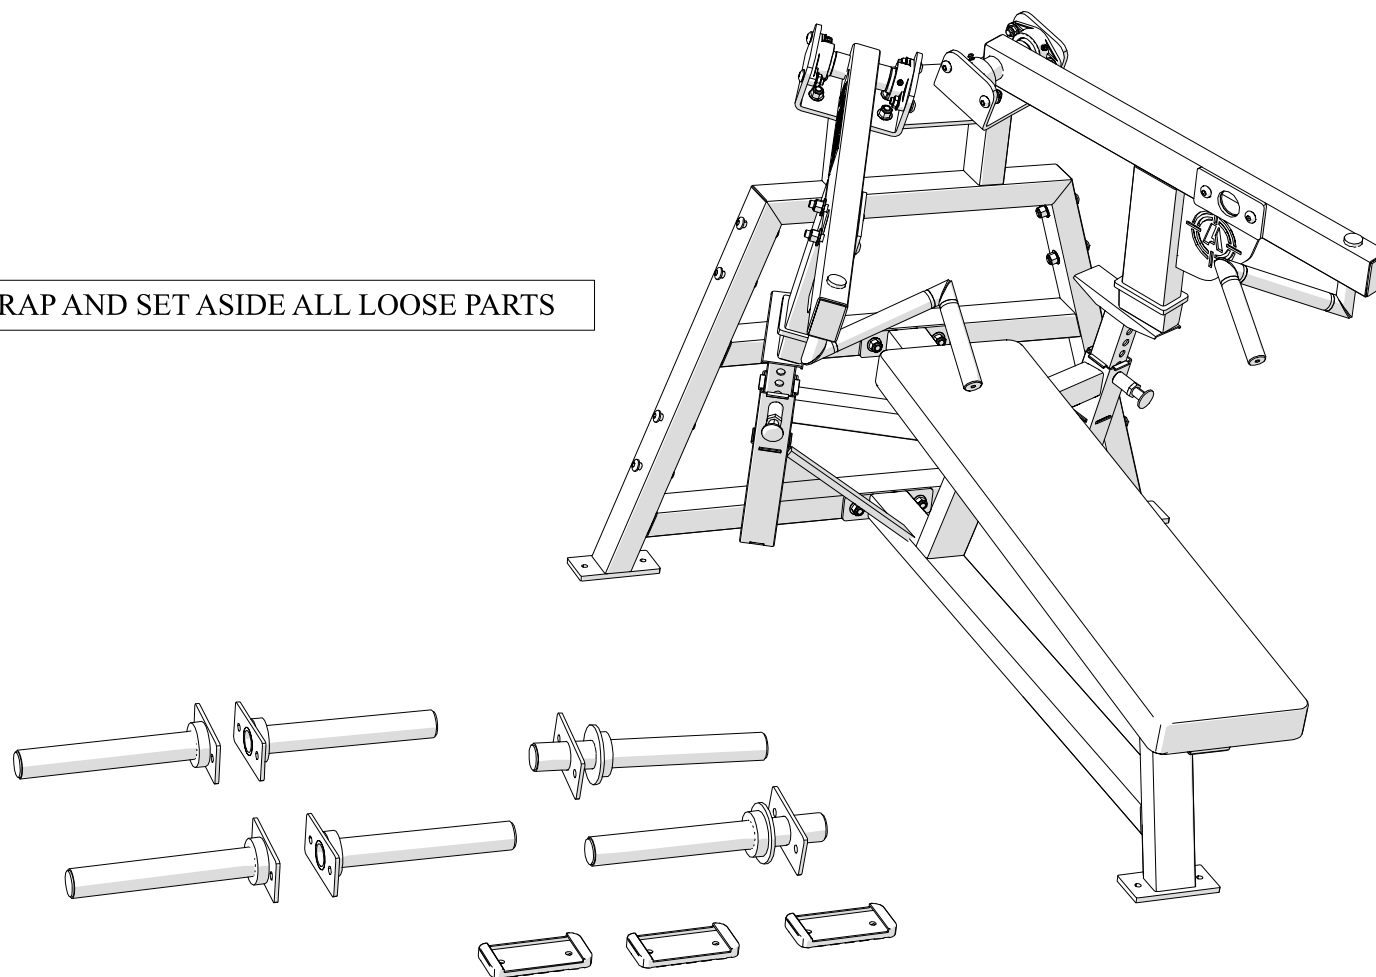


INSTALL RUBBER FEET ON FRAME
PADS (IF DESIRED)

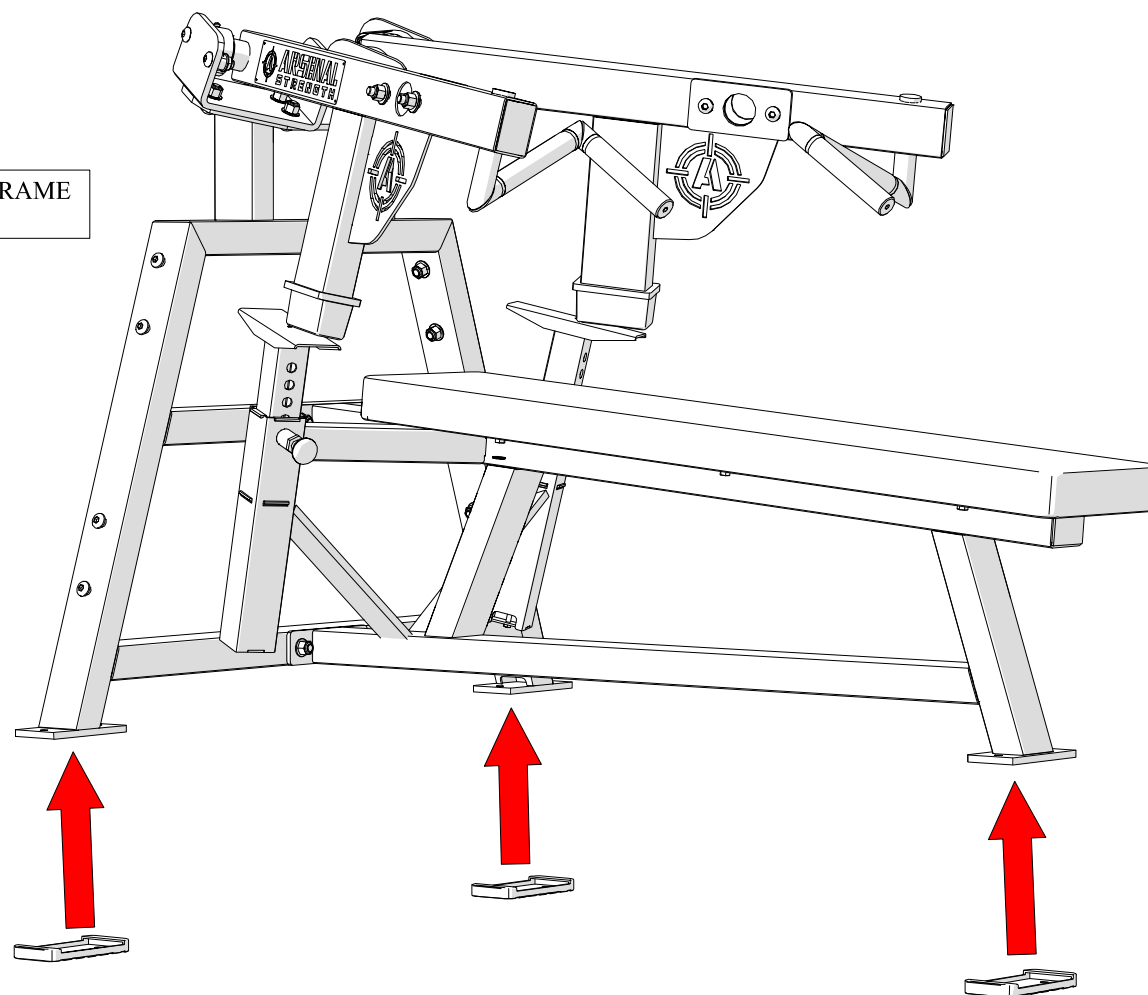


REMOVE (QTY 2) 1/2"-13 NYLOCK NUTS AND
WASHERS FROM WORK ARM

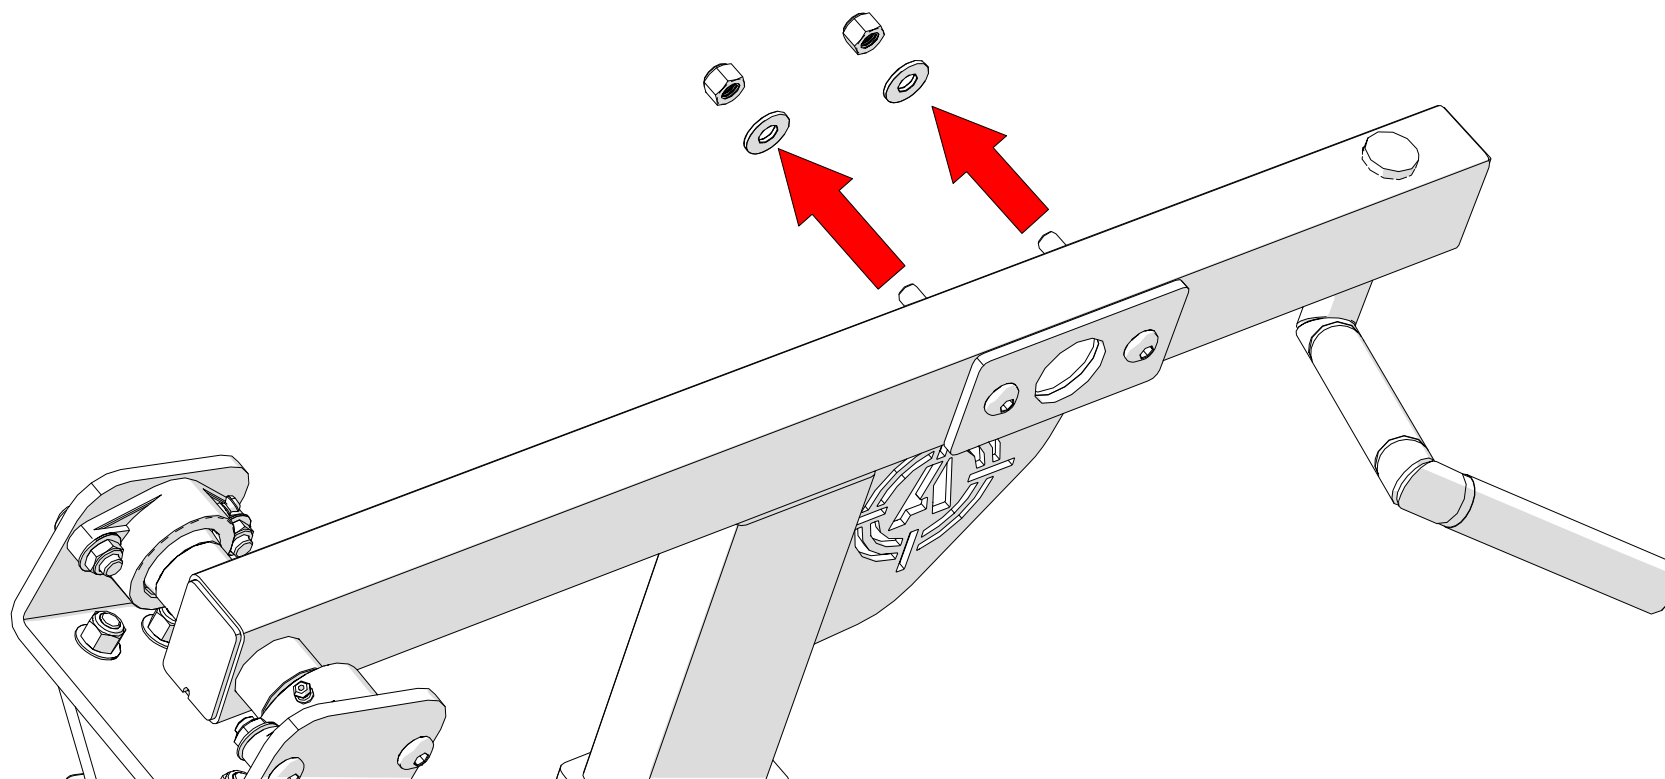


POSITION WEIGHT HORN AS SHOWN
AND SECURE WITH NYLOCK NUTS
AND WASHERS REMOVED IN
PREVIOUS STEP.

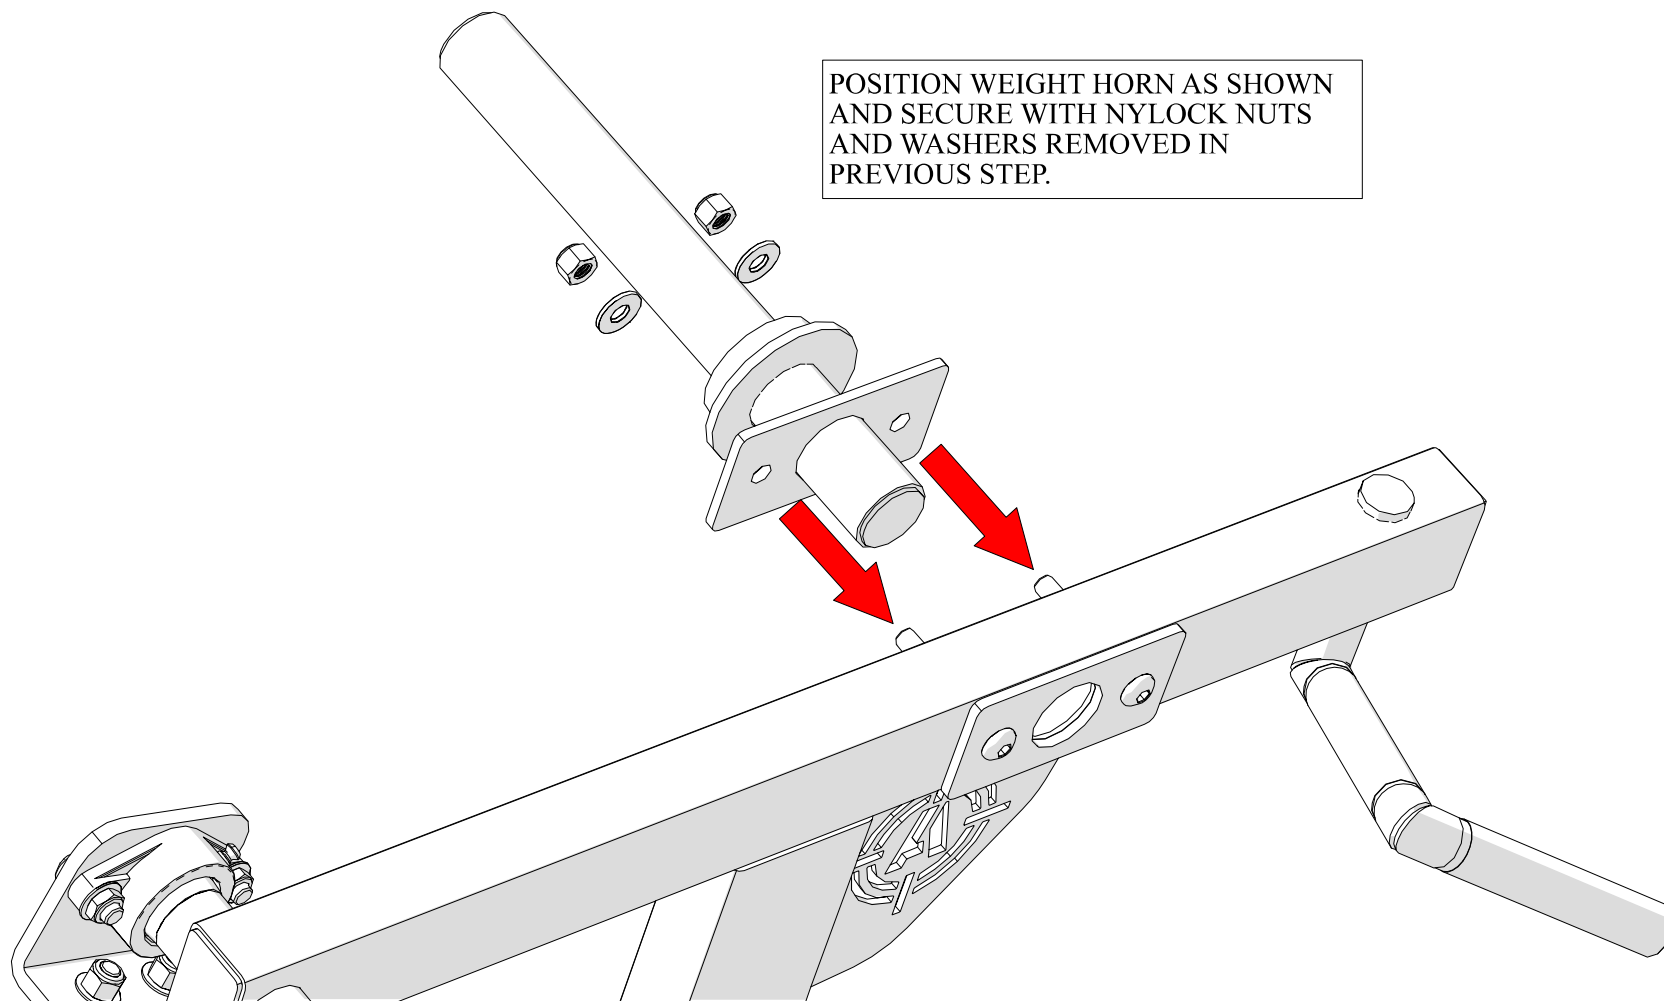

REPEAT WEIGHT HORN INSTALLATION
ON OPPOSITE WORK ARM

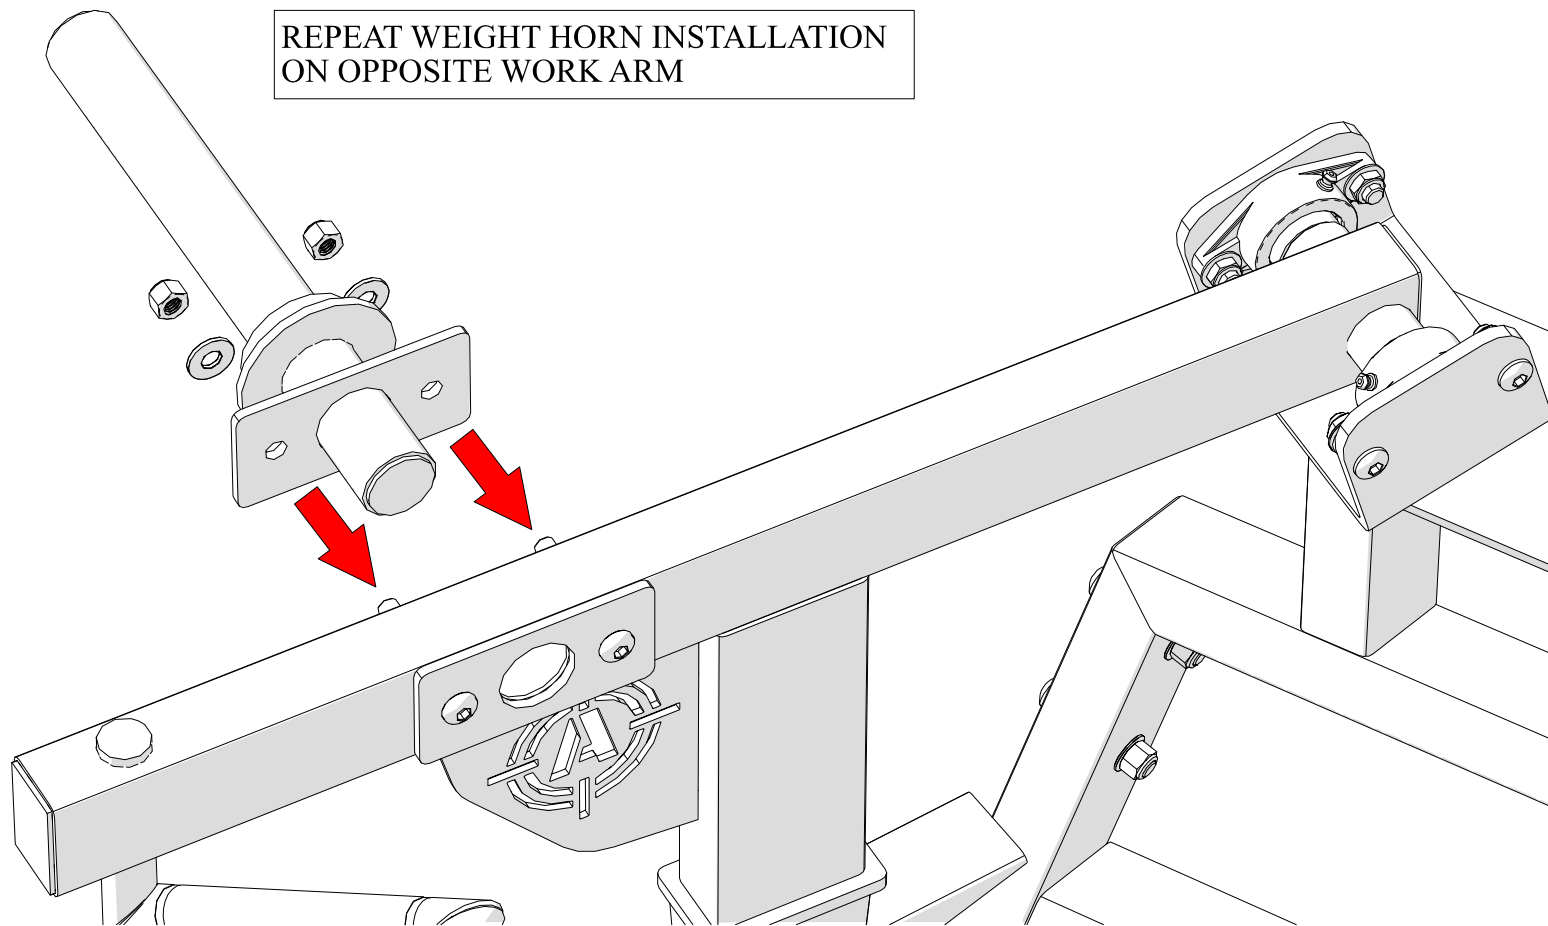



ON REAR FRAME TUBE, REMOVE
(QTY 4) 1/2"-13 X 2.5" BUTTON HEAD
SCREWS, WASHERS, AND NYLOCK NUTS

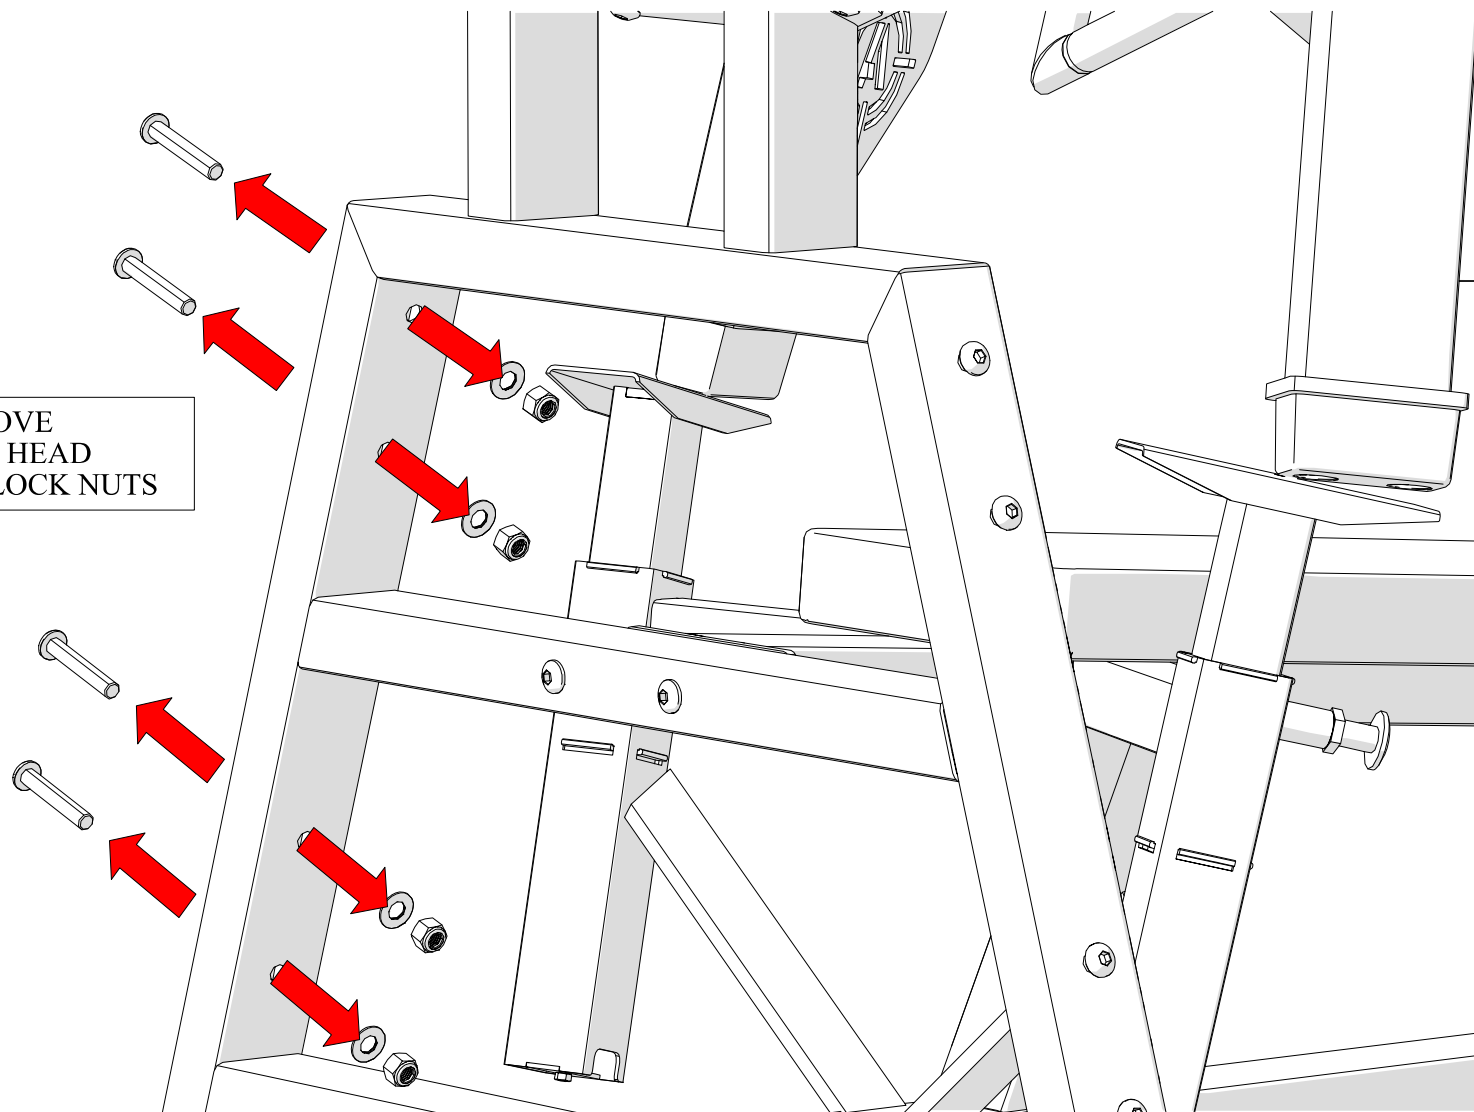

POSITION WEIGHT STORAGE HORNS
AS SHOWN AND SECURE WITH HARDWARE
REMOVED IN PREVIOUS STEP.

NOTE- WEIGHT HORNS HAVE A BUILT-IN
ANGLE. BE CAREFUL NOT TO INSTALL
UPSIDE-DOWN

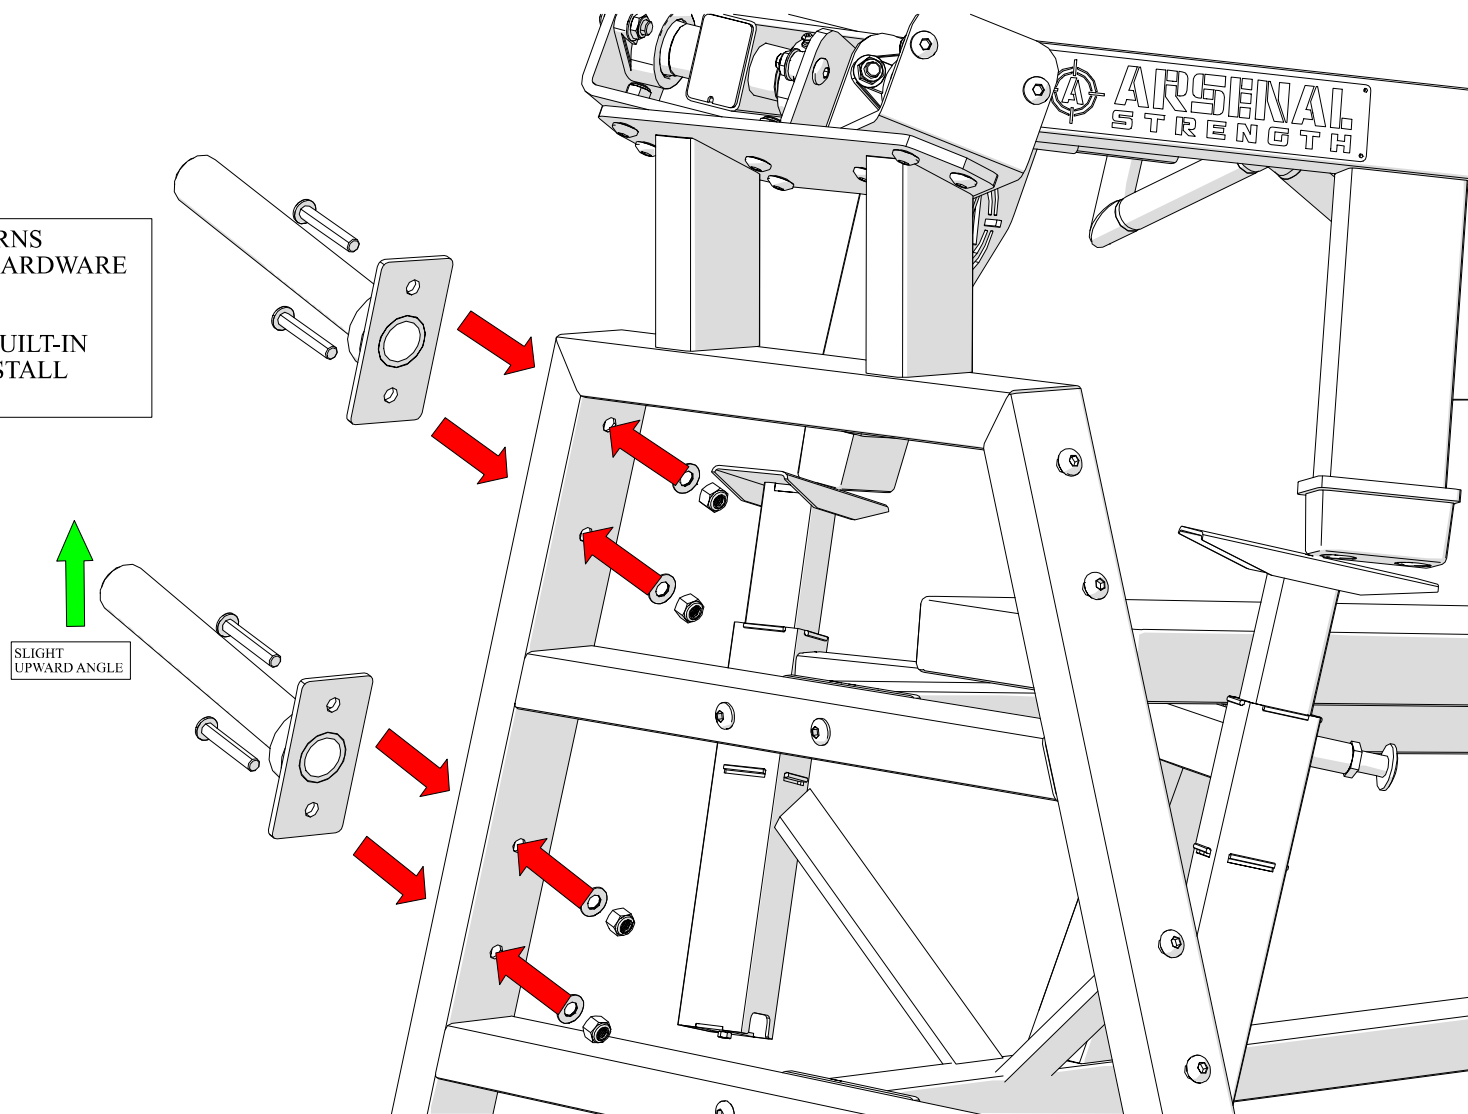

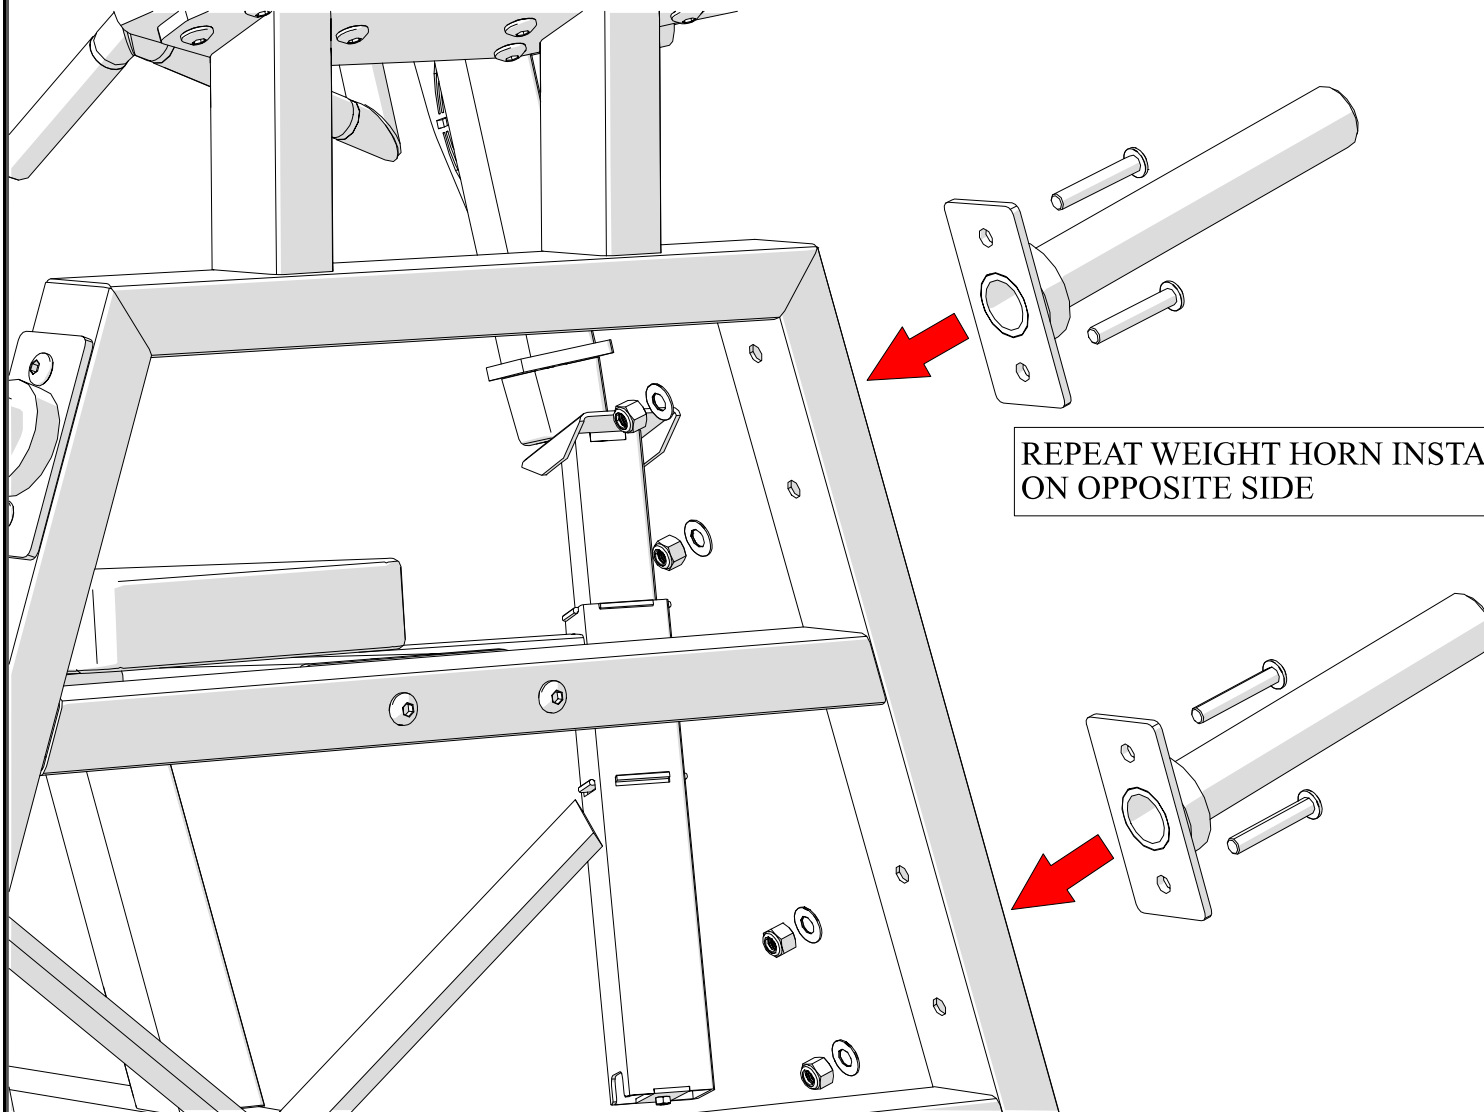

REPEAT WEIGHT HORN INSTALLATION
ON OPPOSITE SIDE

MAKE SURE ALL HARDWARE IS TIGHT
AND TEST ALL FINCTIONS BEFORE
OPERATING EQUIPMENT

