



8007 WIDE CHEST PRESS


FINAL ASSEMBLY GUIDE

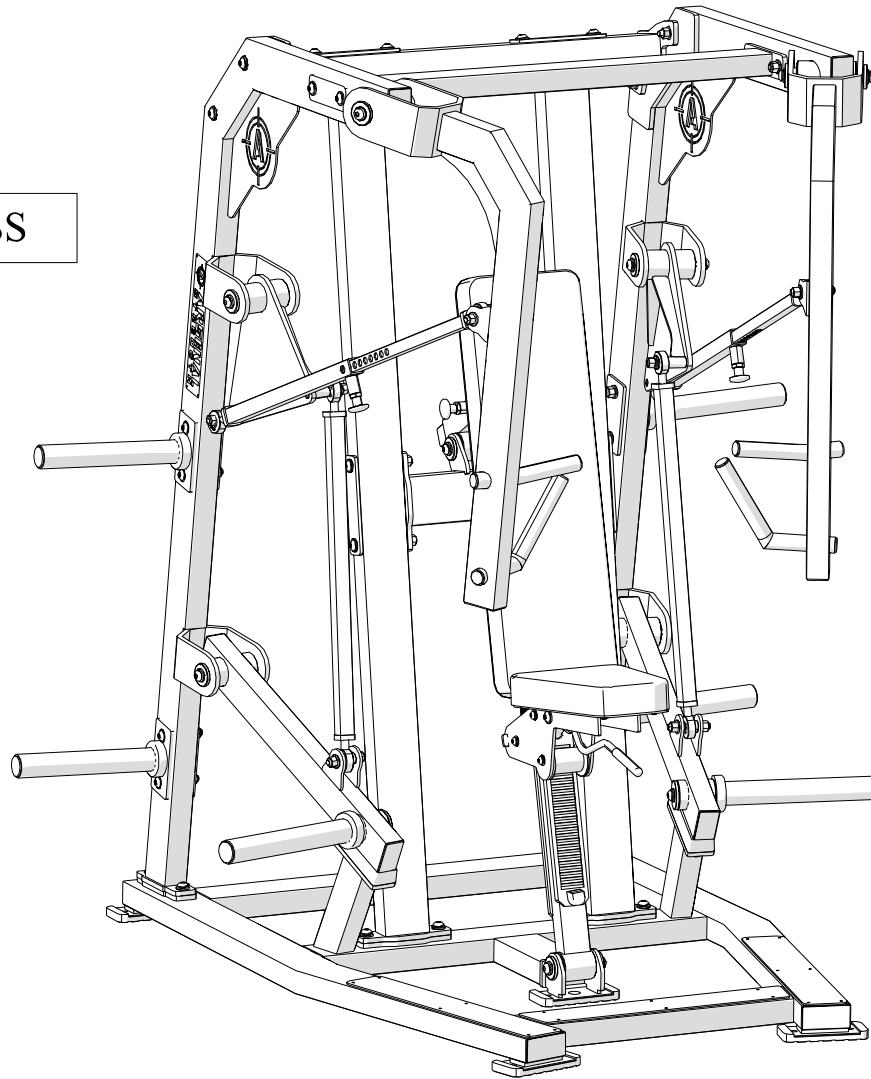


INSTALL RUBBER FEET
ON FRAME PADS
(OPTIONAL)

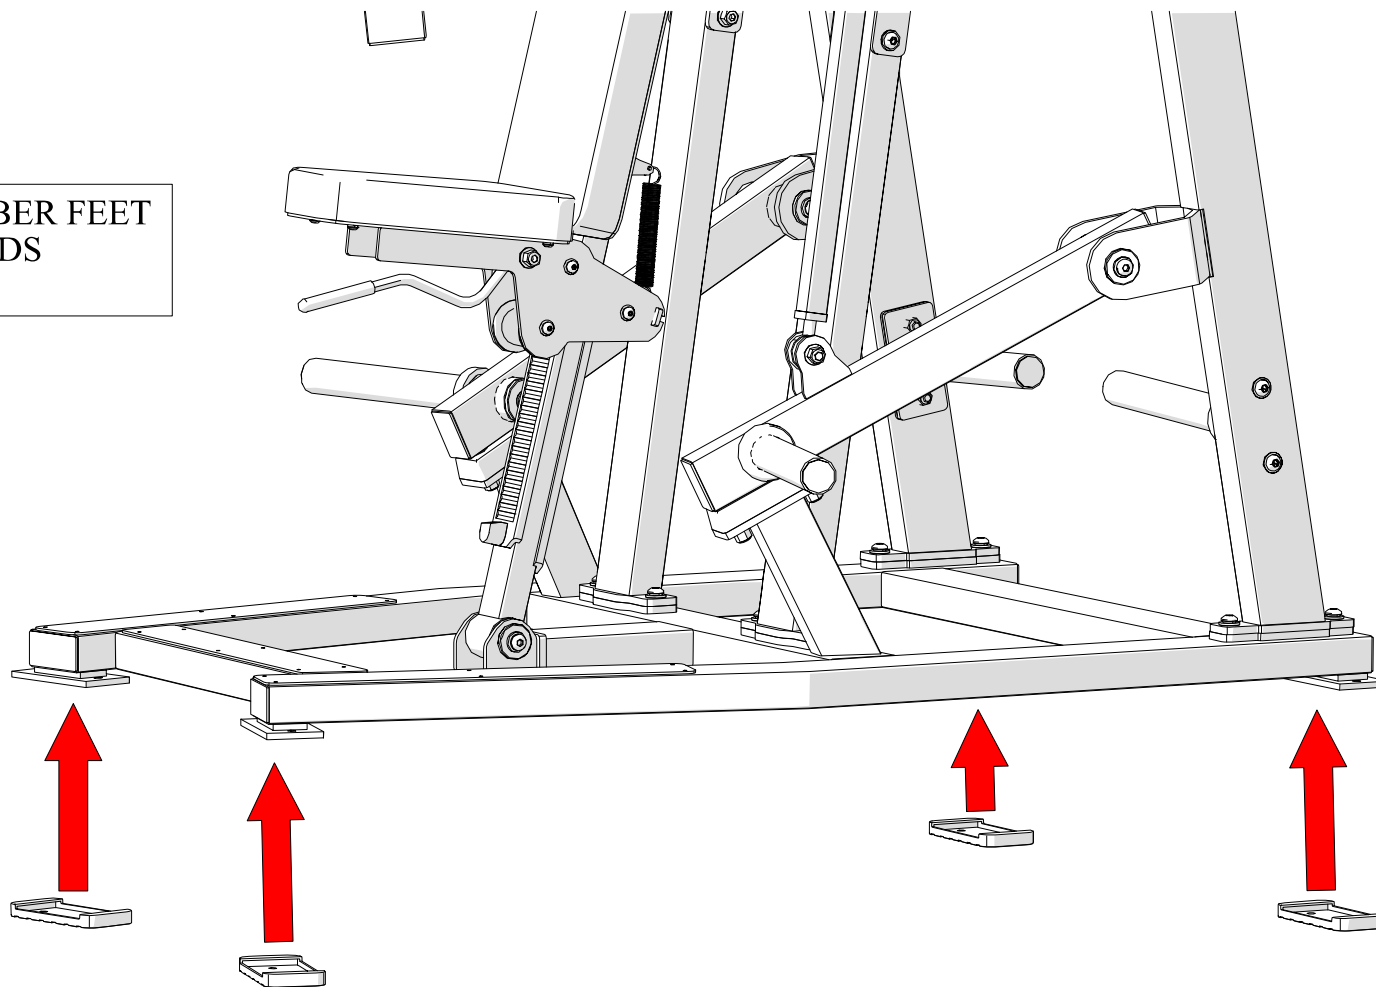


POSITION WORK ARM WEIGHT HORNS AS SHOWN
AND SECURE WITH 1/2"-13 X 1.75" BUTTON HEAD
SCREWS, WASHERS, LOCKNUTS, AND BACKING
PLATE

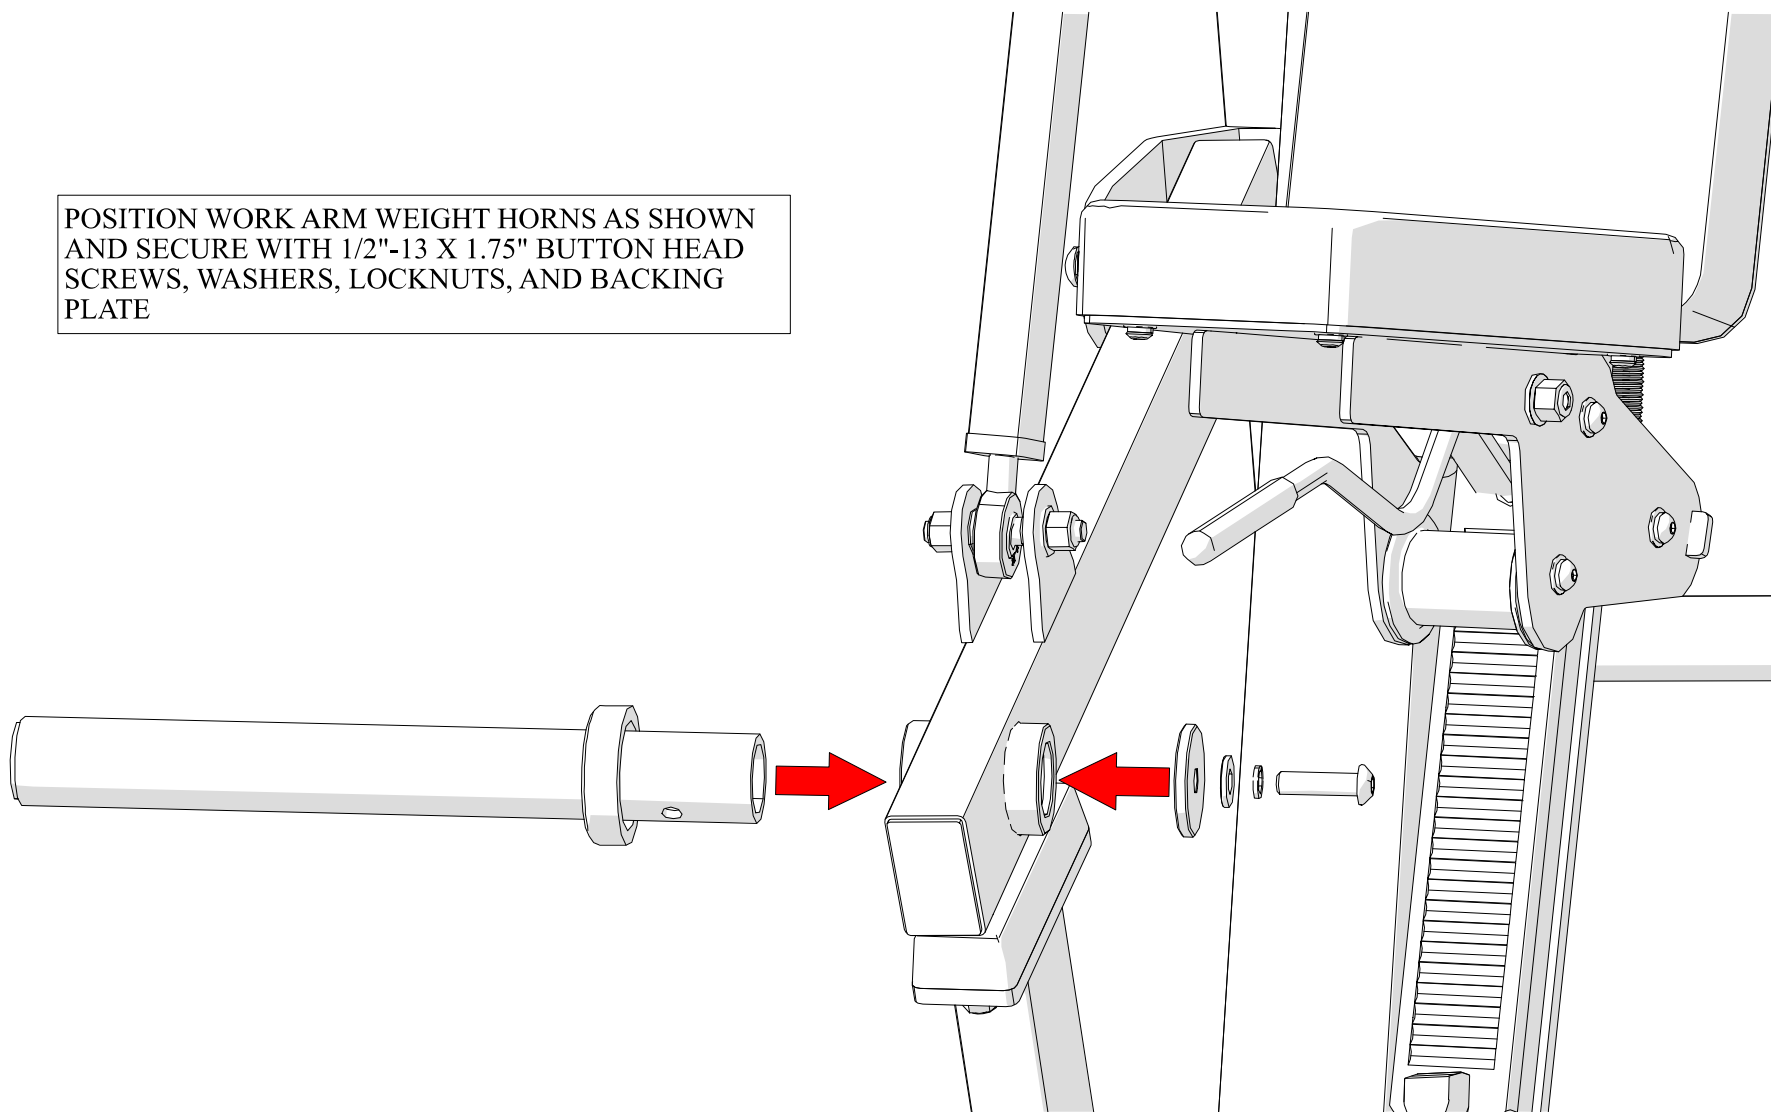

REPEAT WEIGHT HORN INSTALLATION
ON SECOND WORK ARM


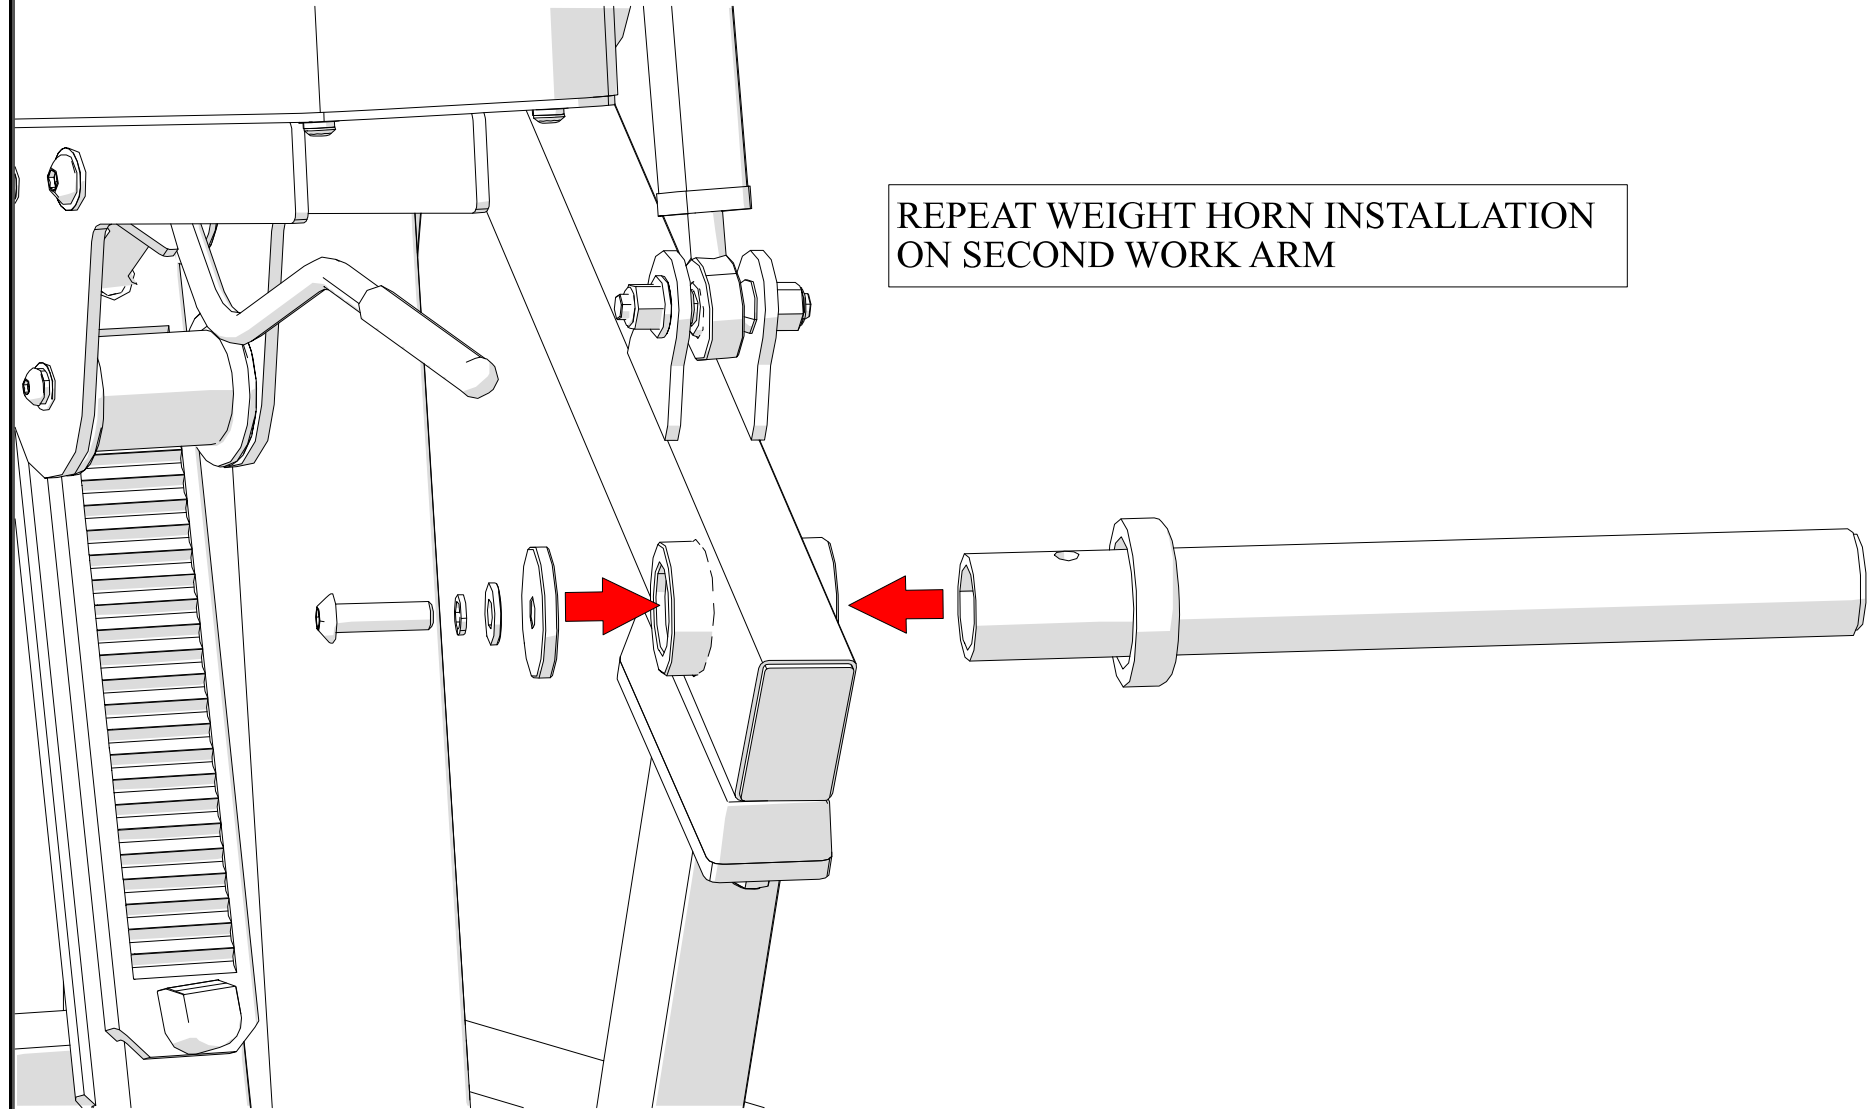


REMOVE (QTY 2) 1/2"-13 BUTTON HEAD SCREWS,
WASHERS, NYLOCK NUTS, BACKING PLATE, AND
WEIGHT STORAGE HORN FROM REAR FRAME TUBE

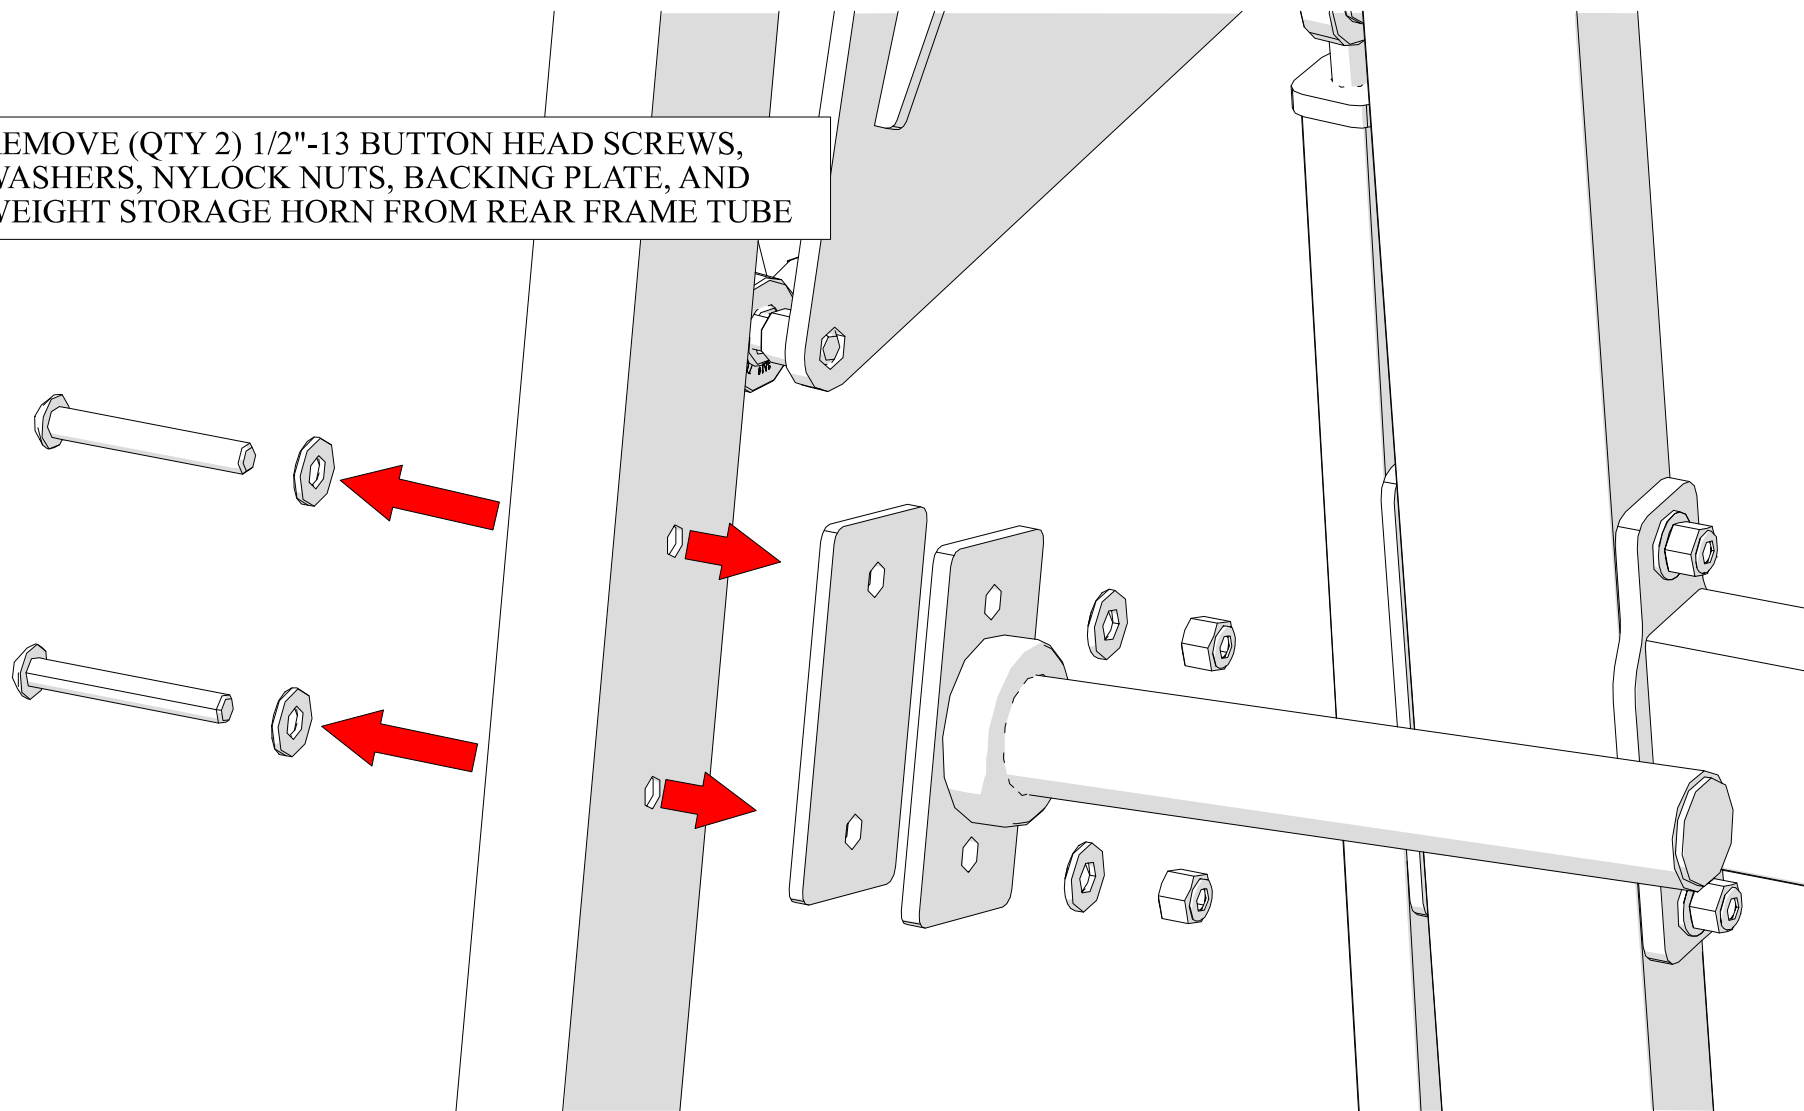


MOVE WEIGHT HORN TO OPPOSITE SIDE
OF FRAME TUBE AND RE-INSTALL AS SHOWN.

NOTE: WEIGHT HORNS HAVE A SLIGHT UPWARD
ANGLE BUILT IN. BE CAREFUL NOT TO INSTALL
UPSIDE-DOWN

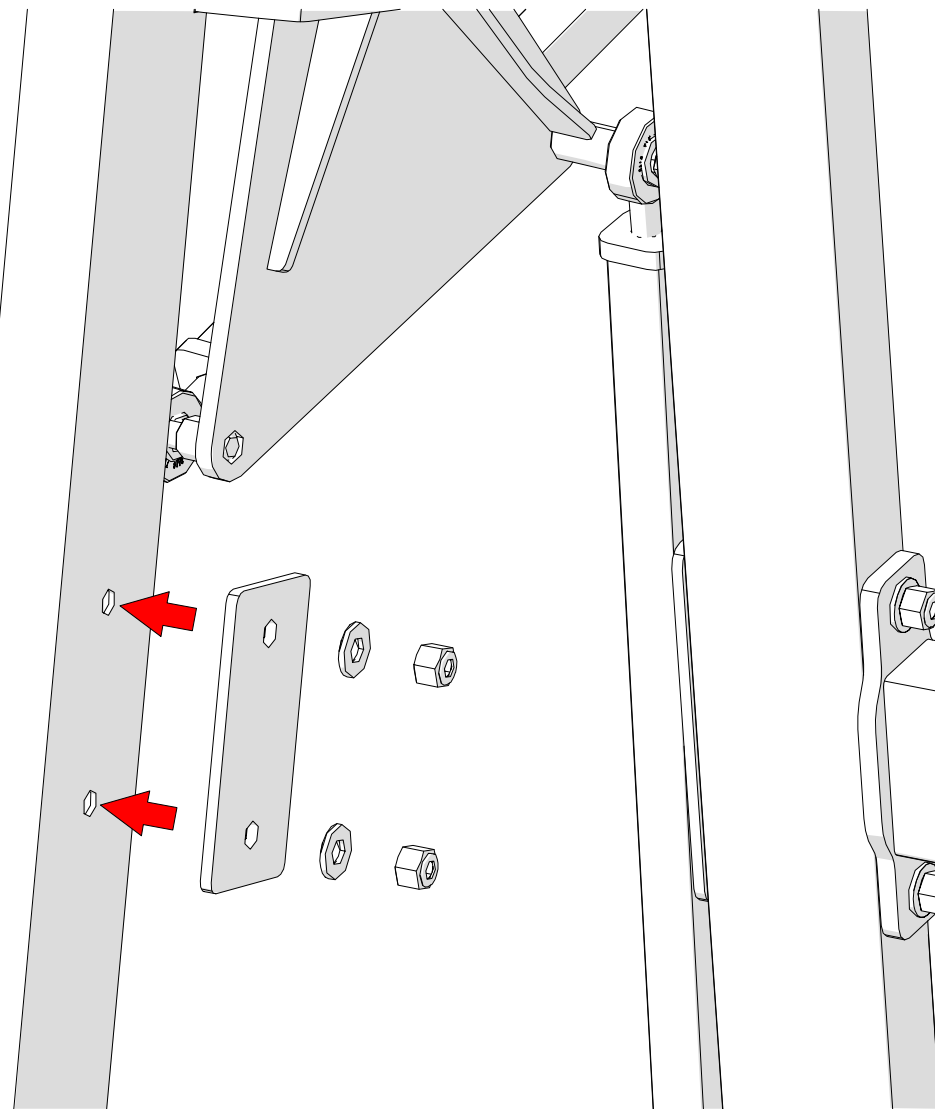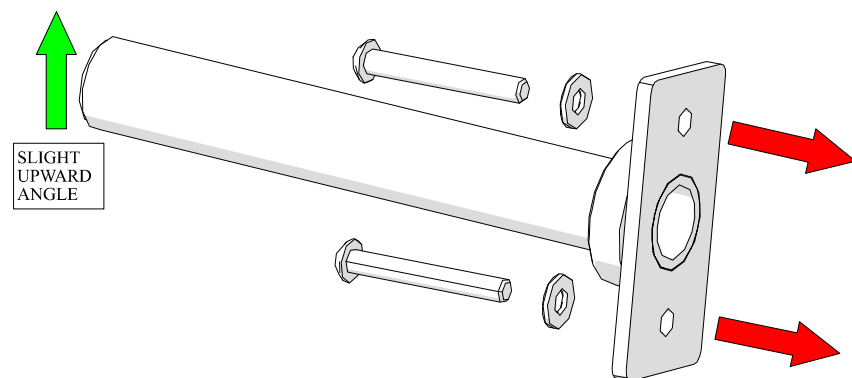

REPEAT PROCESS FOR THREE
REMAINING WEIGHT HORNS

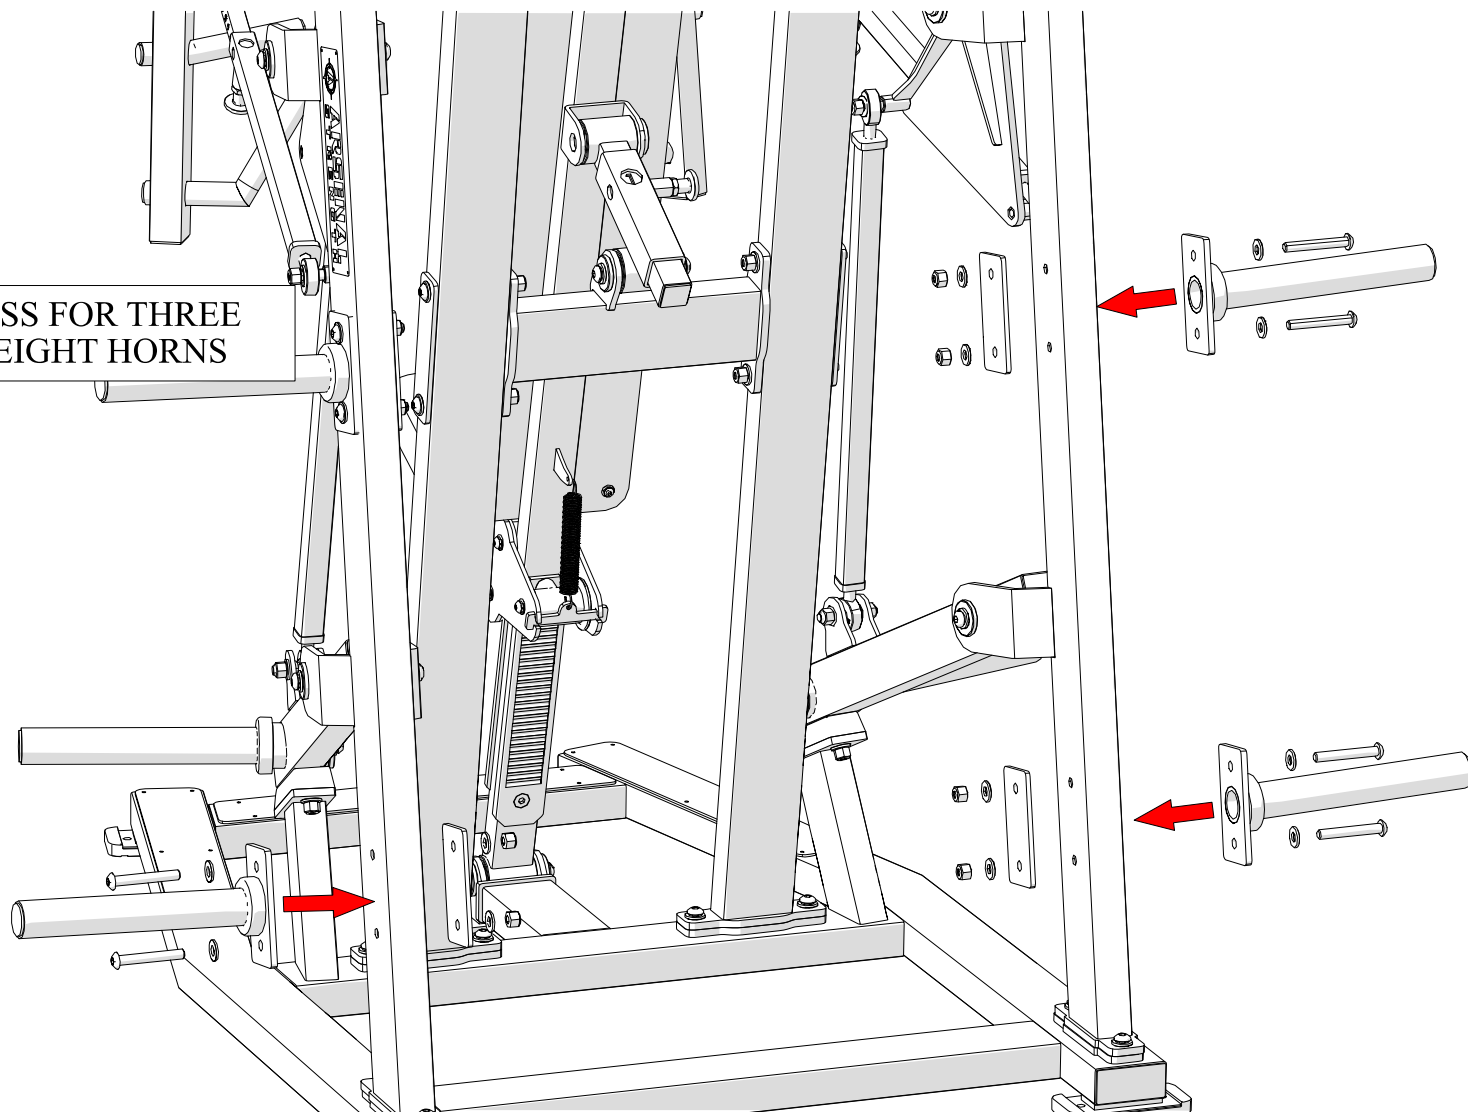

MAKE SURE ALL HARDWARE IS TIGHT
AND TEST ALL FUNCTIONS BEFORE
OPERATING EQUIPMENT

