



8014 LEG EXTENSION


FINAL ASSEMBLY GUIDE

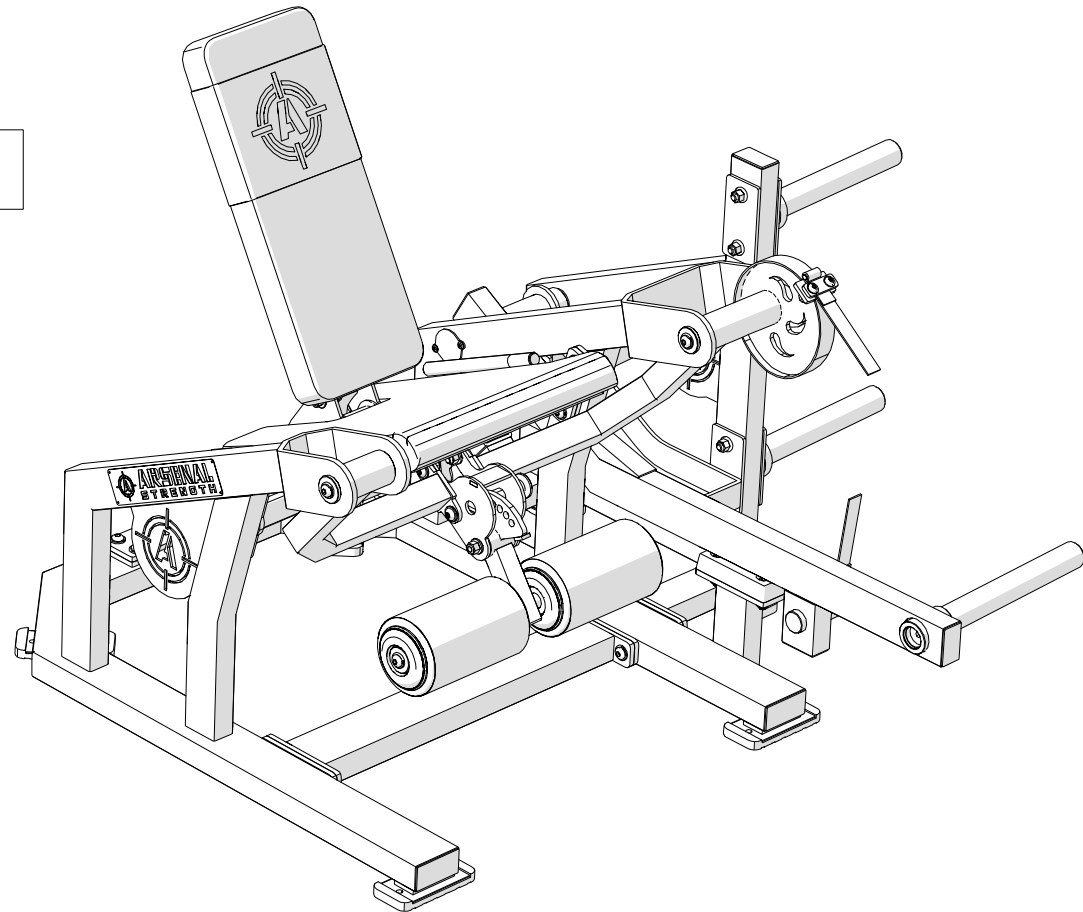

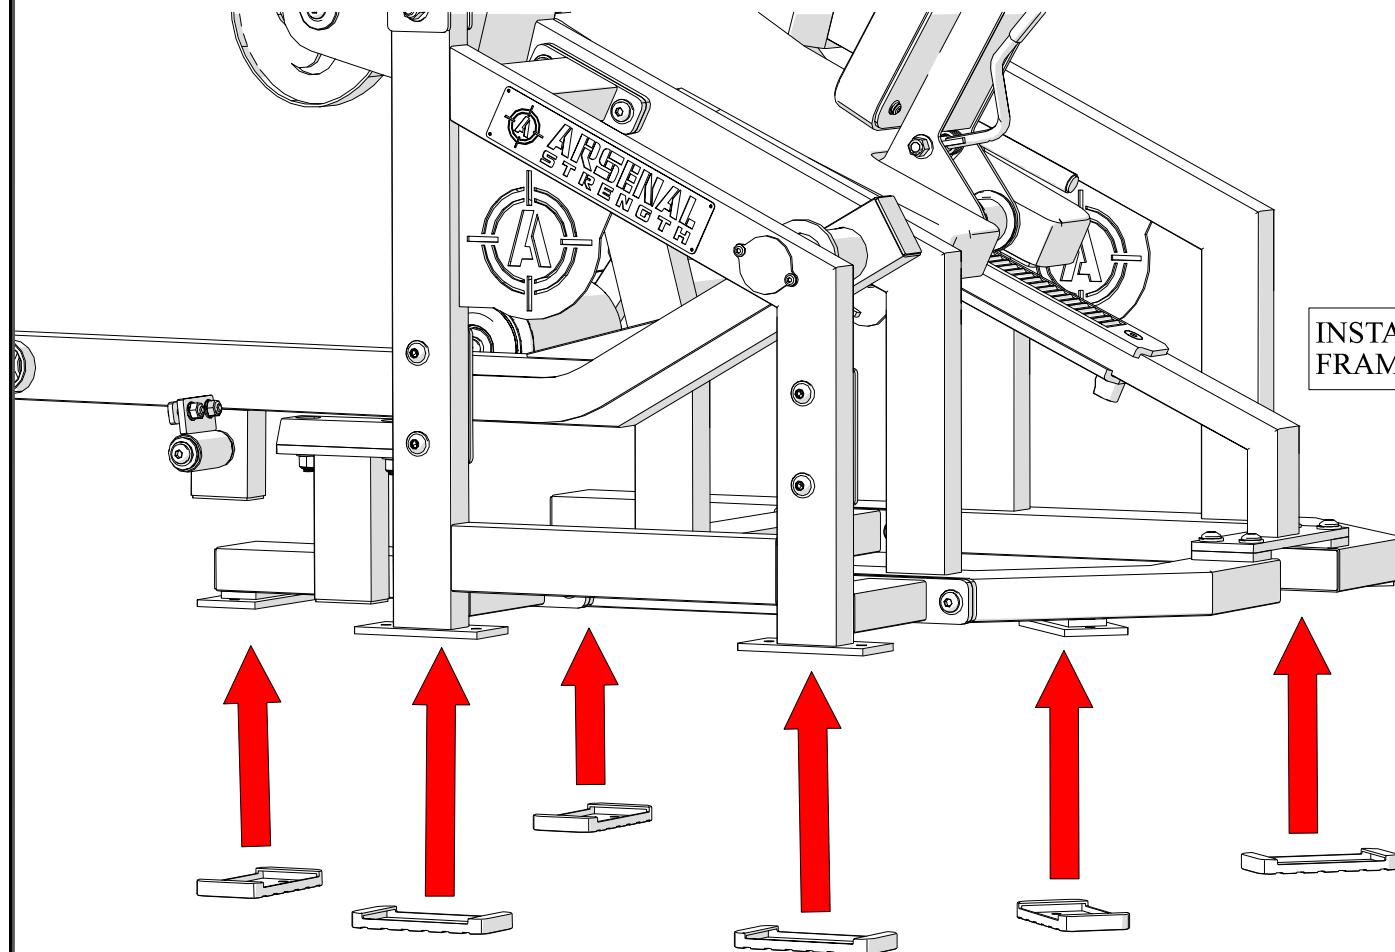


INSTALL RUBBER FEET ON METAL
FRAME PADS (OPTIONAL)


REMOVE (QTY 2) 1/2"-13 X 3.25" BUTTON
HEAD SCREWS, WASHERS, NYLOCK NUTS,
AND BACKING PLATE

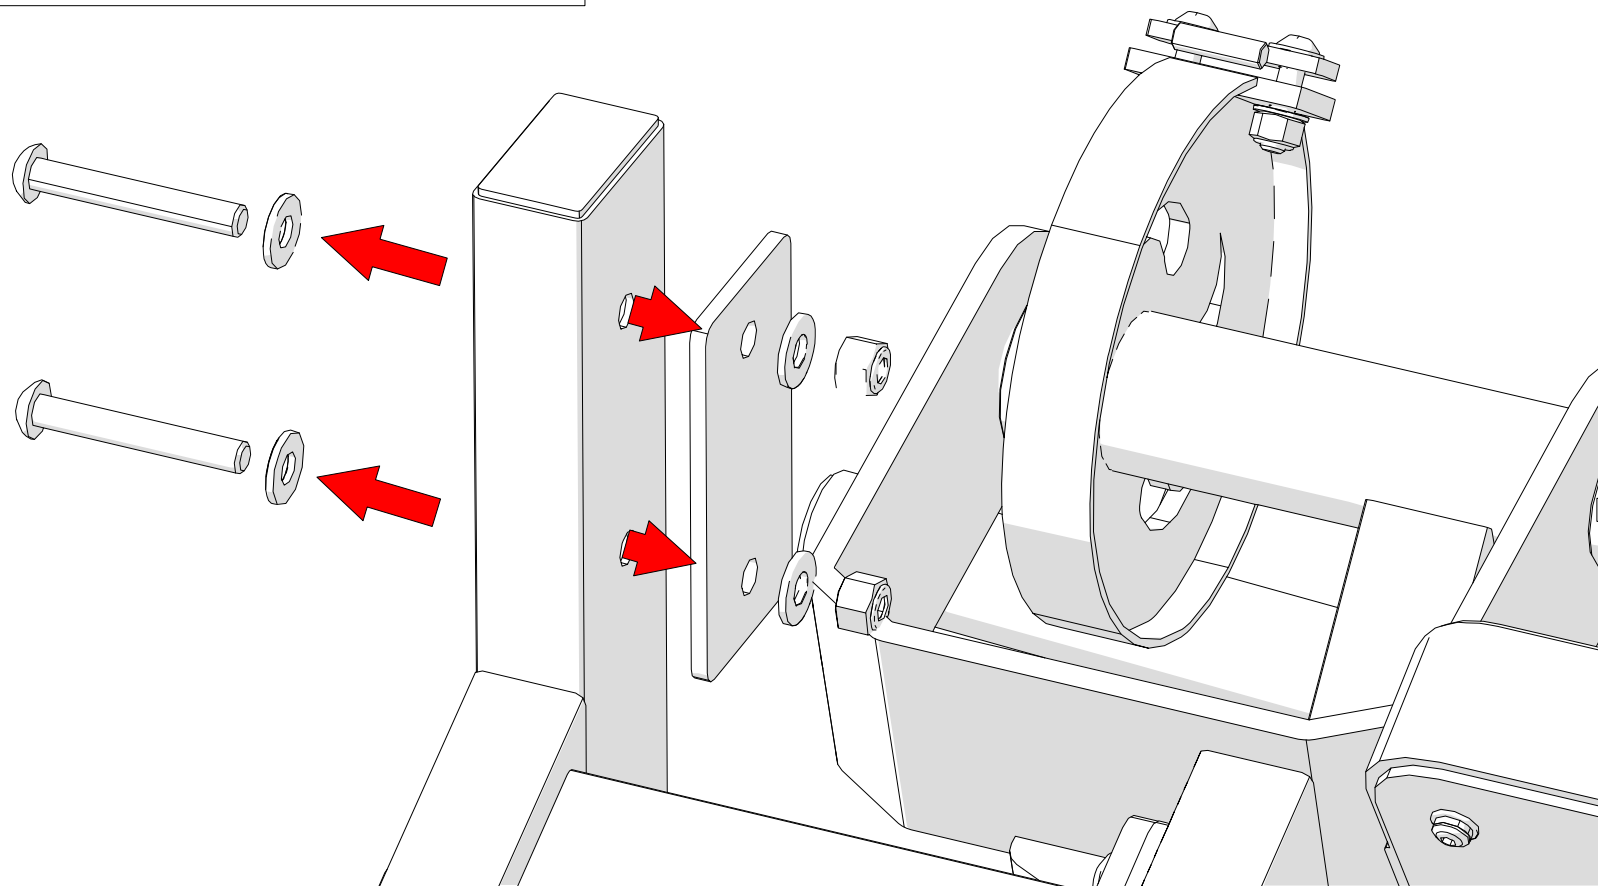


POSITION WEIGHT HORN AND BACKING
PLATE AS SHOWN AND RE-INSTALL.

NOTE: WEIGHT HORN SHOULD HAVE A
SLIGHT UPWARD ANGLE WHEN INSTALLED.
MAKE SURE NOT TO INSTALL UPSIDE-DOWN

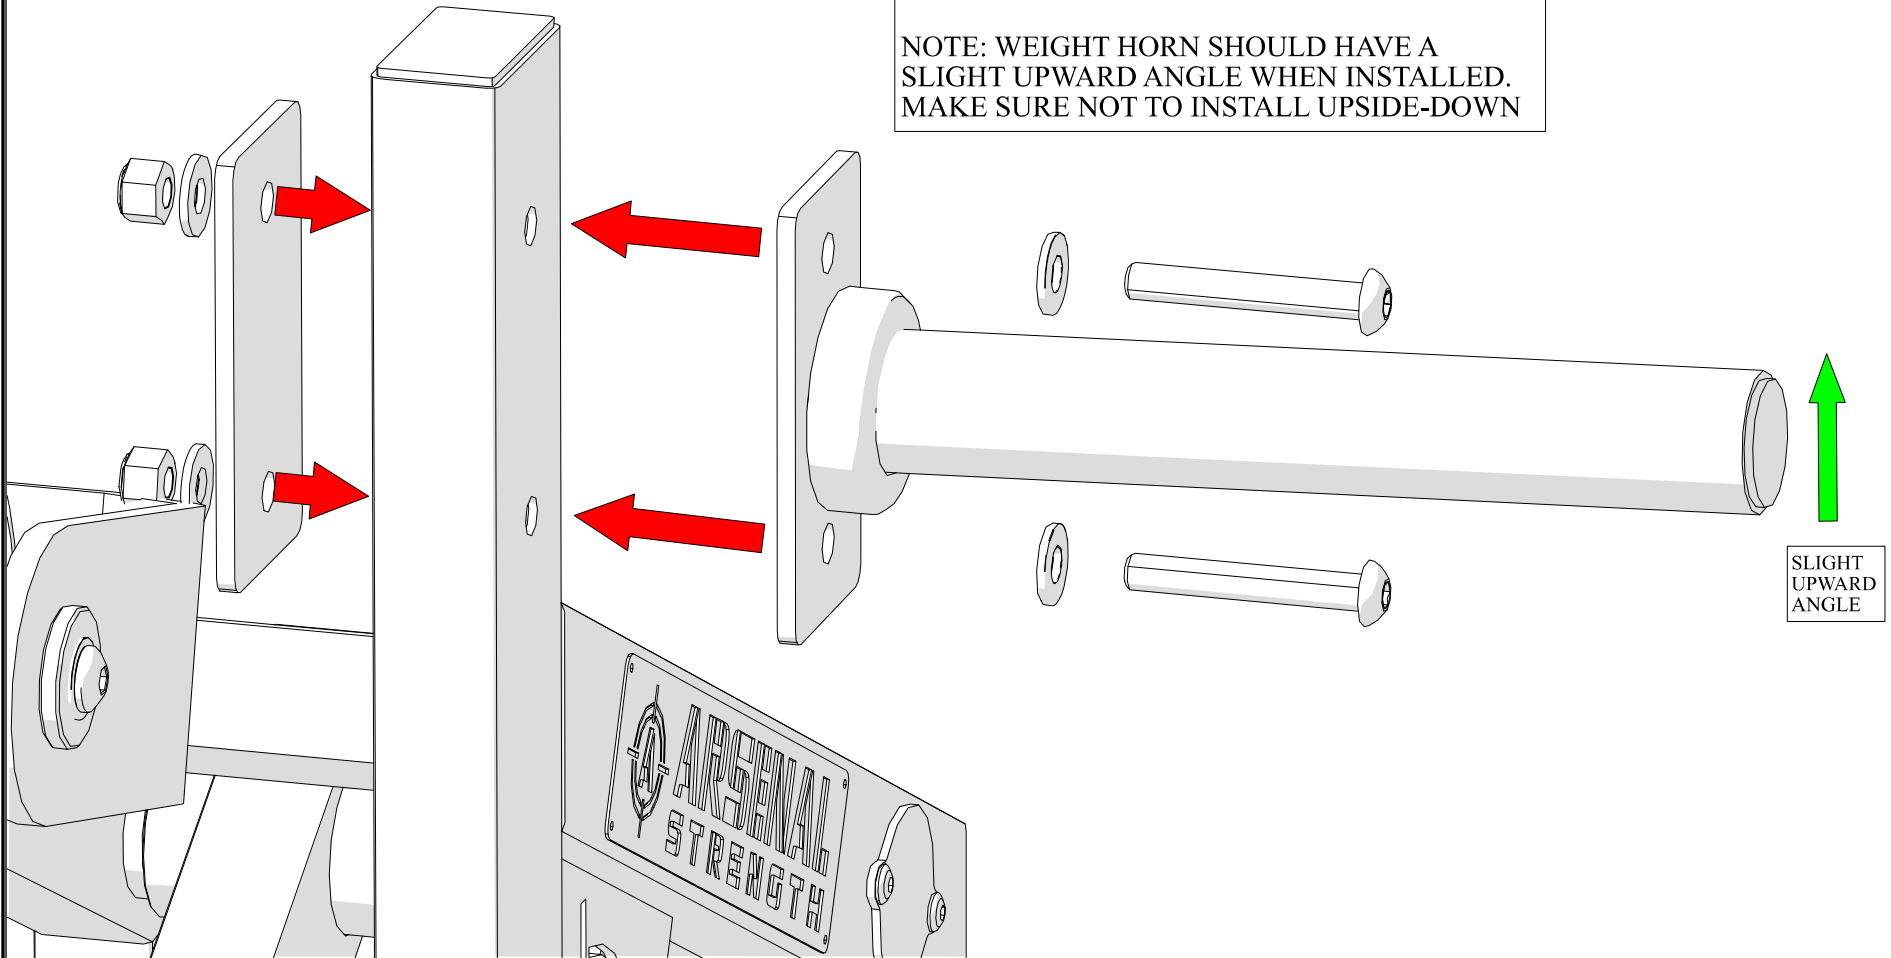

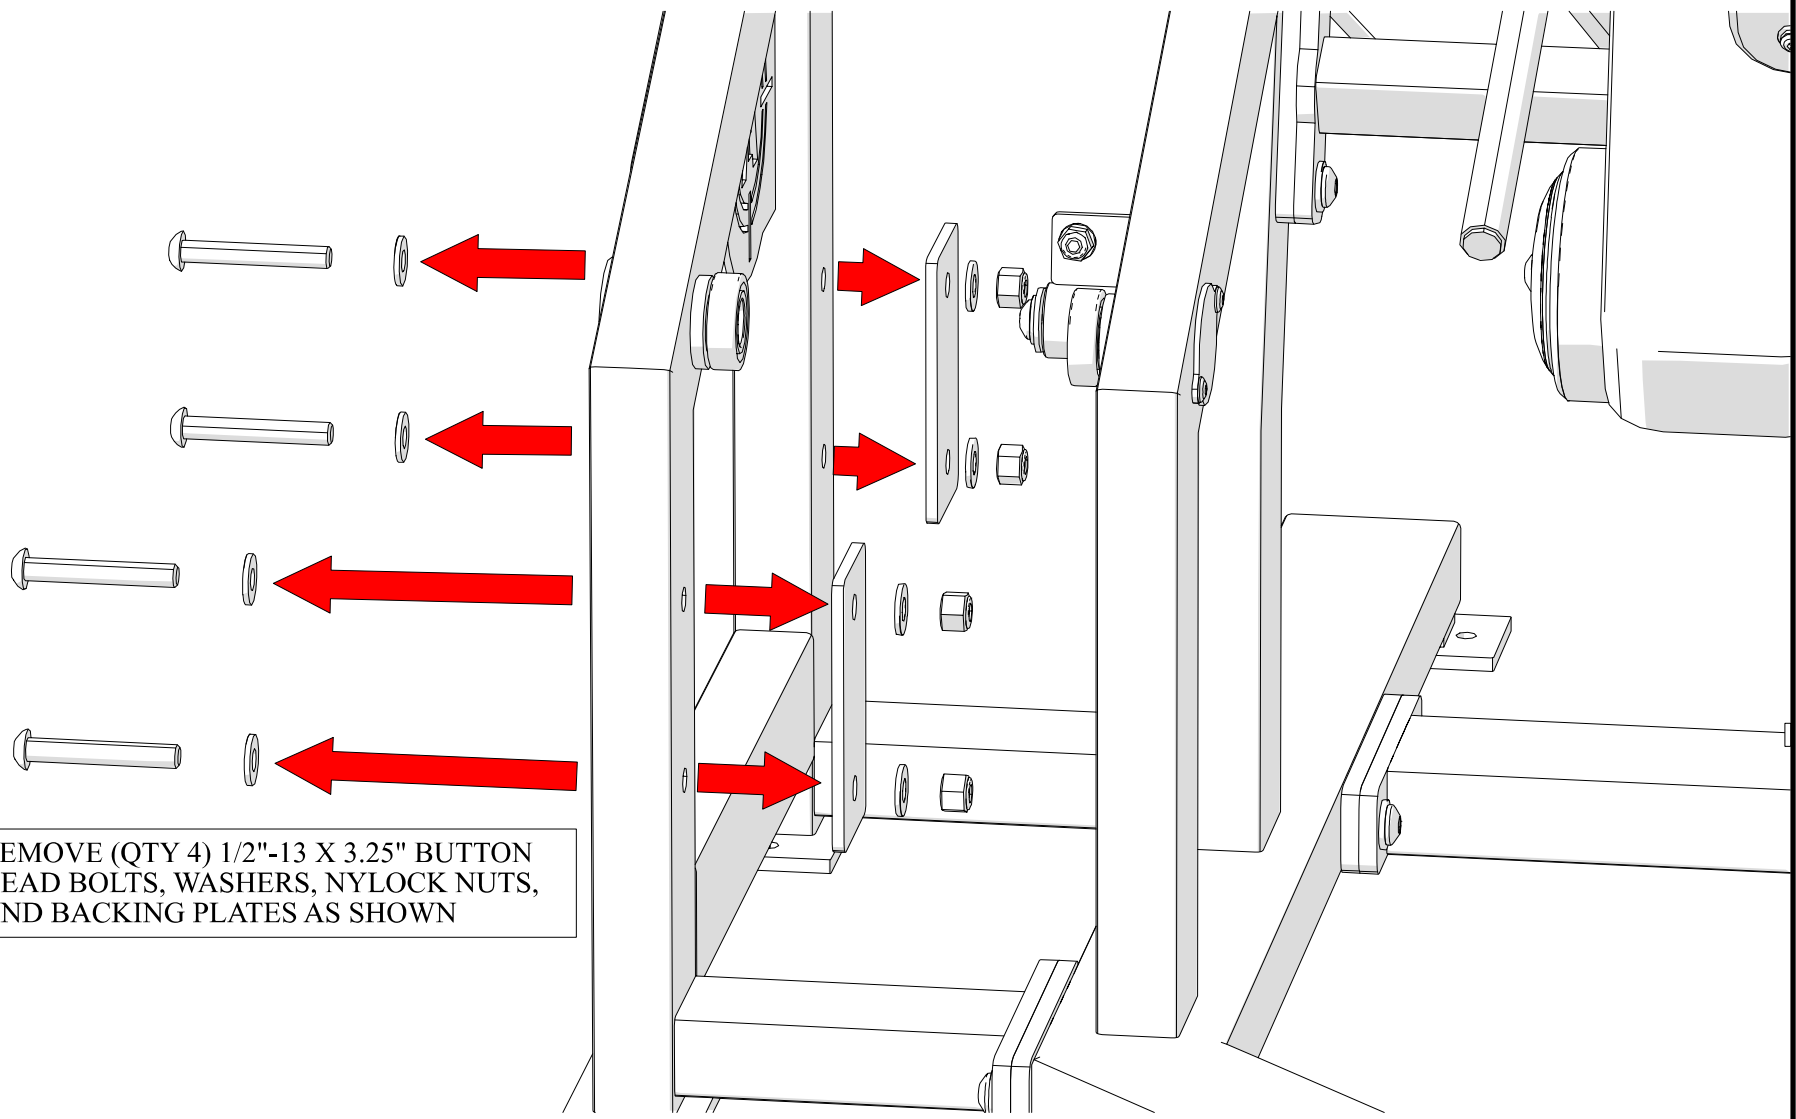


REMOVE (QTY 4) 1/2"-13 X 3.25" BUTTON
HEAD BOLTS, WASHERS, NYLOCK NUTS,
AND BACKING PLATES AS SHOWN

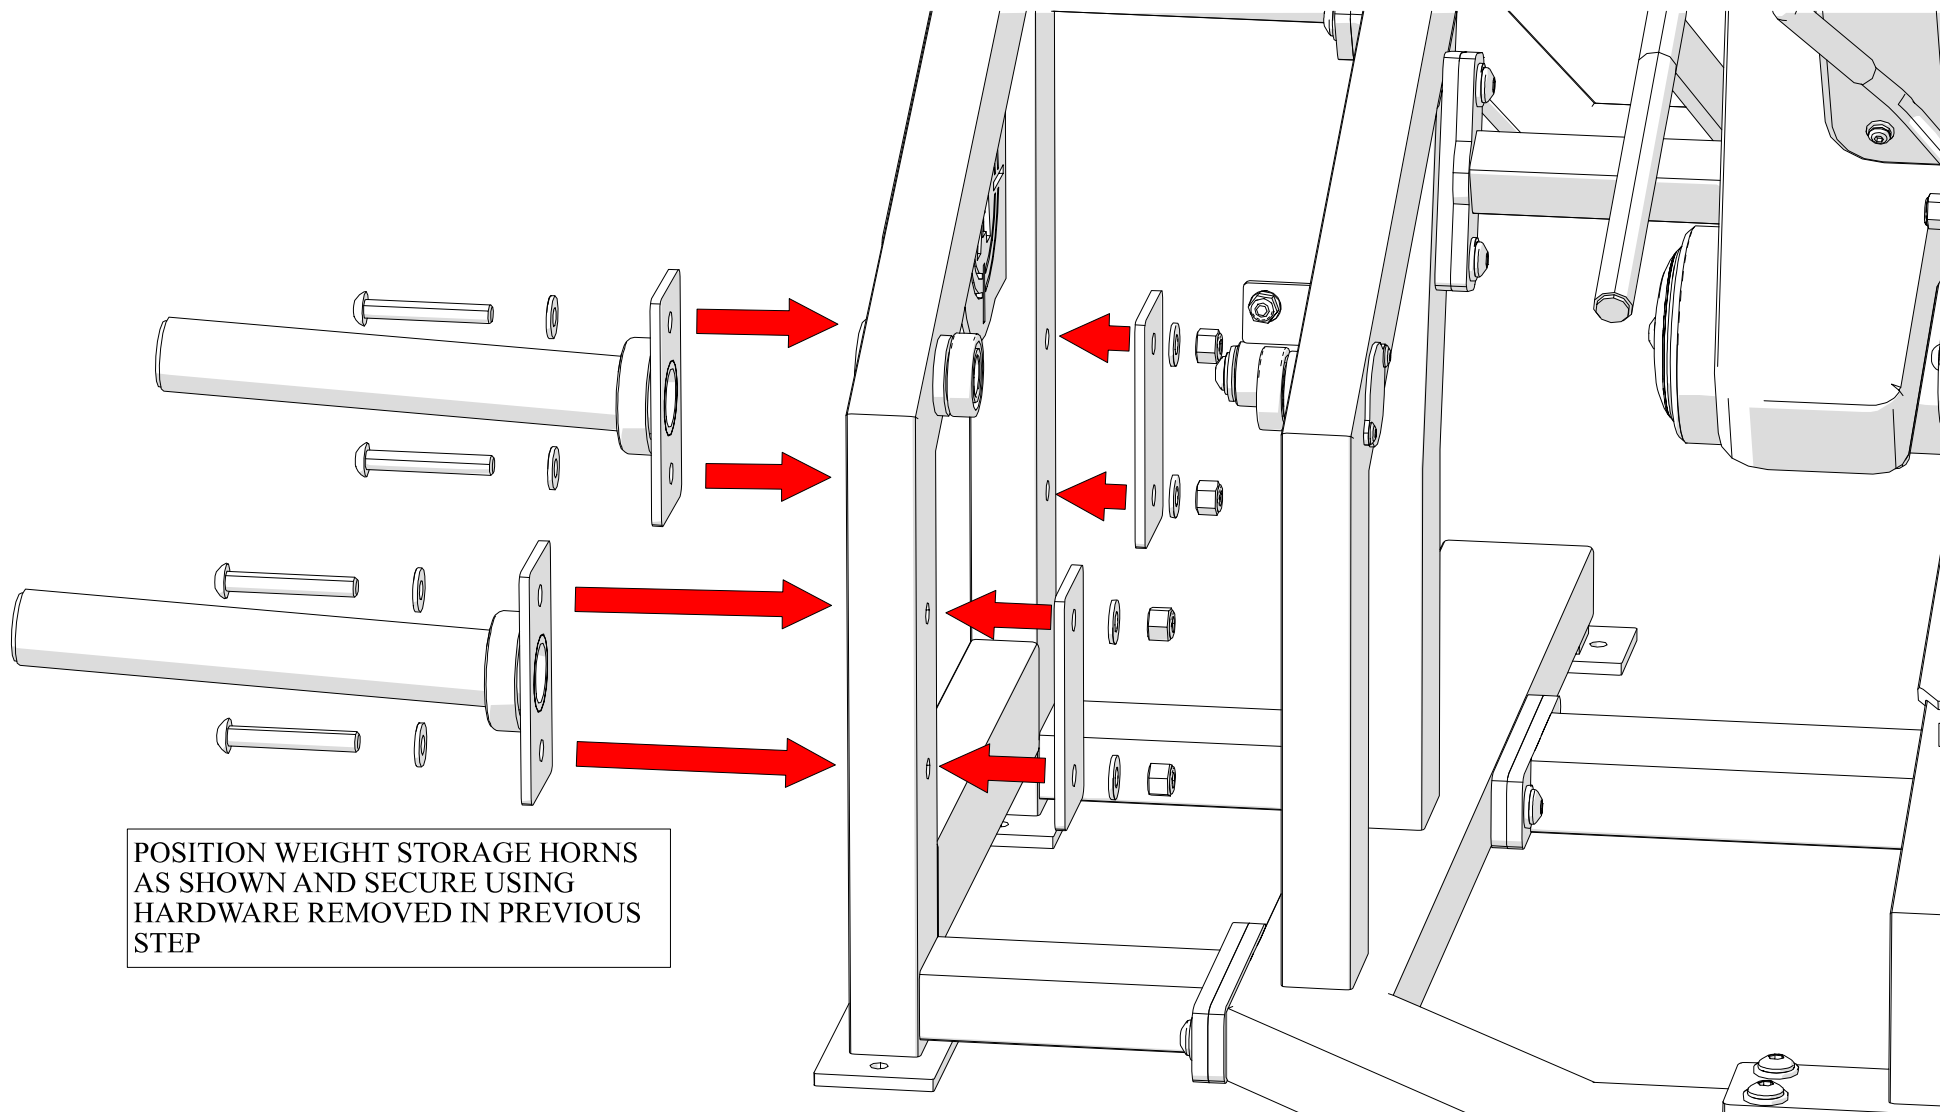

POSITION WEIGHT STORAGE HORNS
AS SHOWN AND SECURE USING
HARDWARE REMOVED IN PREVIOUS
STEP

POSITION WORK ARM WEIGHT HORN
AS SHOWN AND SECURE USING
1/2"-13 X 1.25" BUTTON HEAD SCREW,
WASHER, AND BACKING PLATE

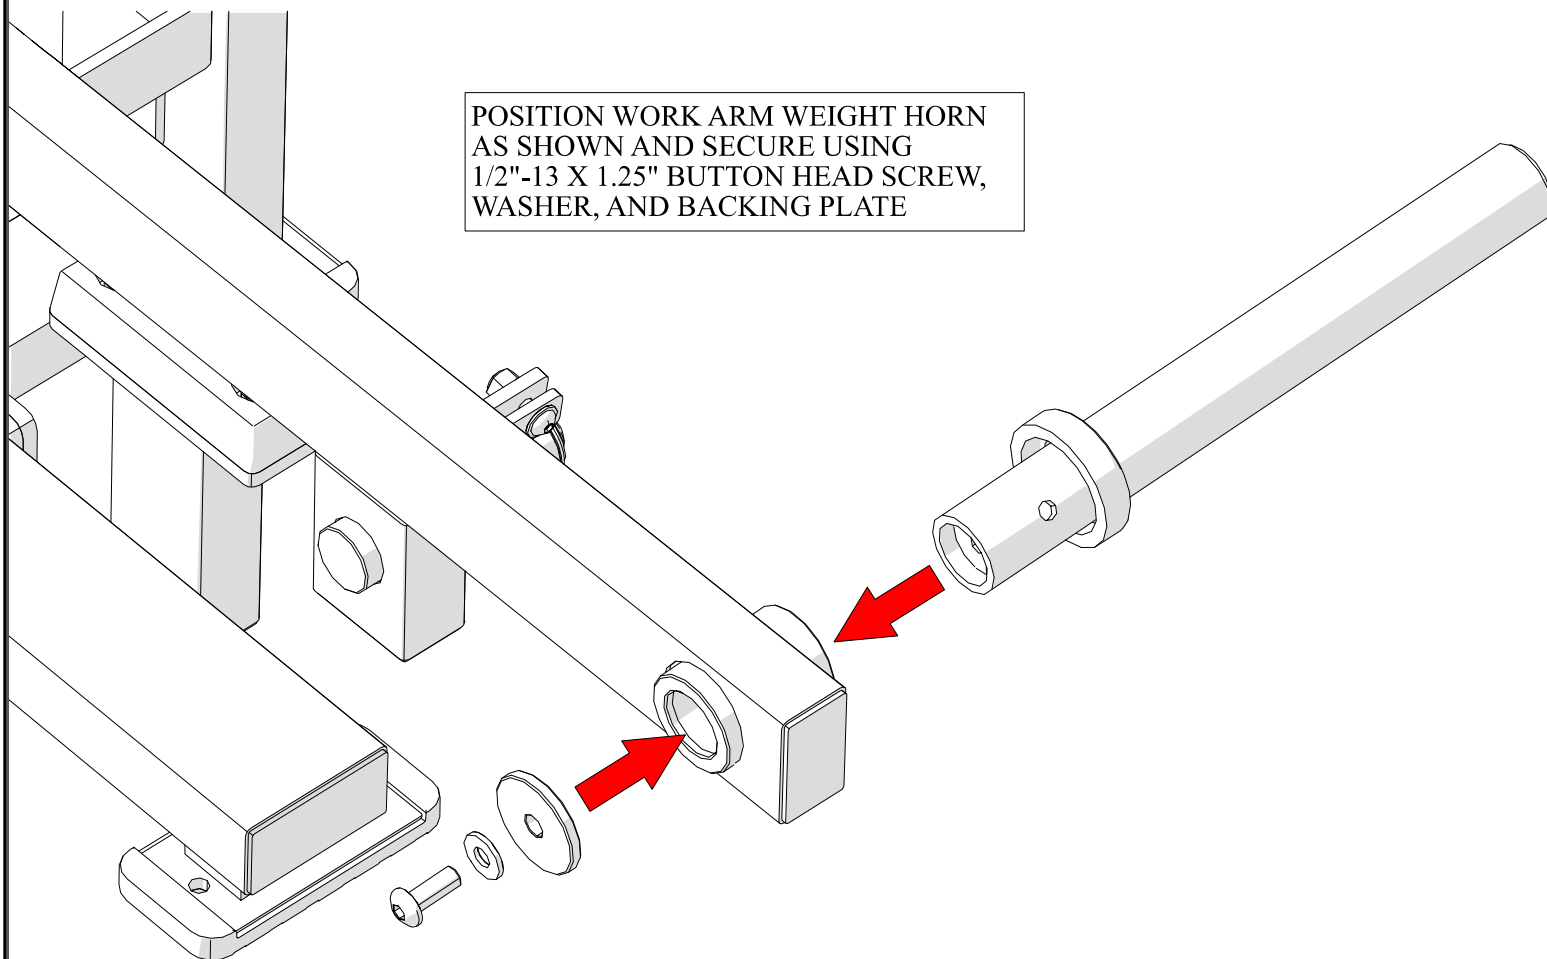

MAKE SURE ALL HARDWARE IS TIGHT
AND TEST ALL FUNCTIONS BEFORE
OPERATING EQUIPMENT

