




8011 SEATED TRICEP EXTENSION

FINAL ASSEMBLY GUIDE


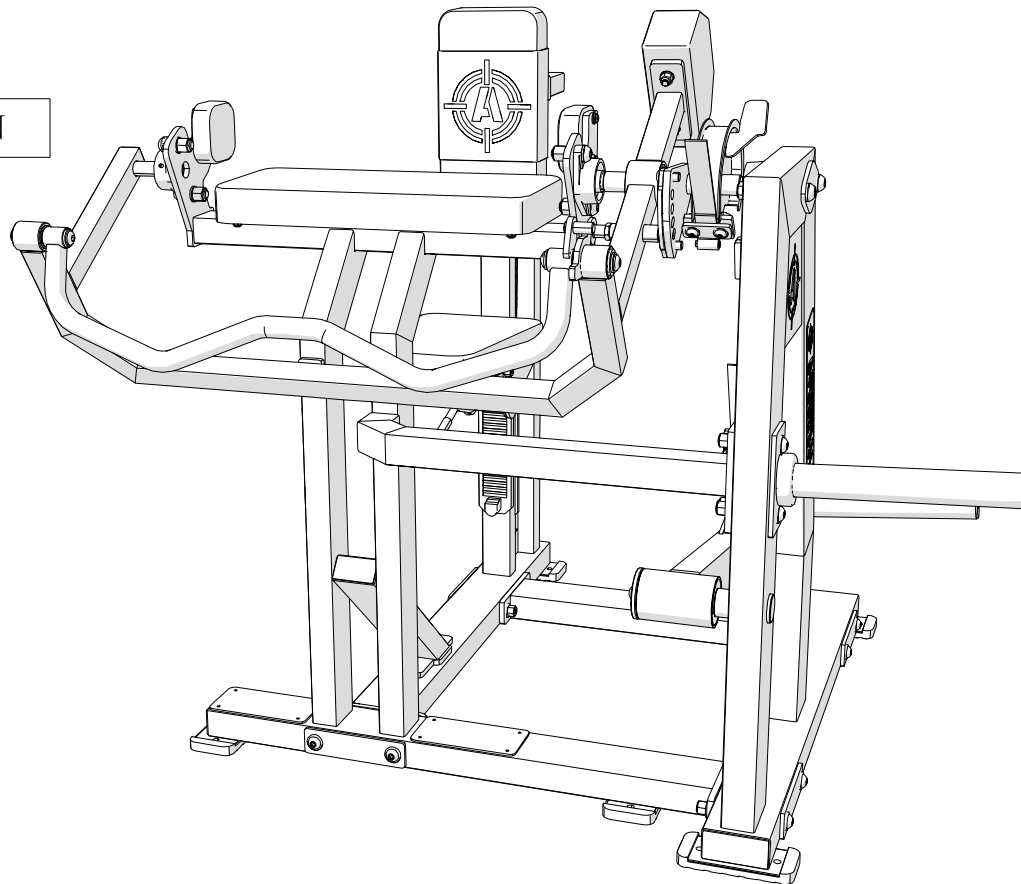



INSTALL RUBBER FEET ON METAL
FRAME PADS (OPTIONAL)

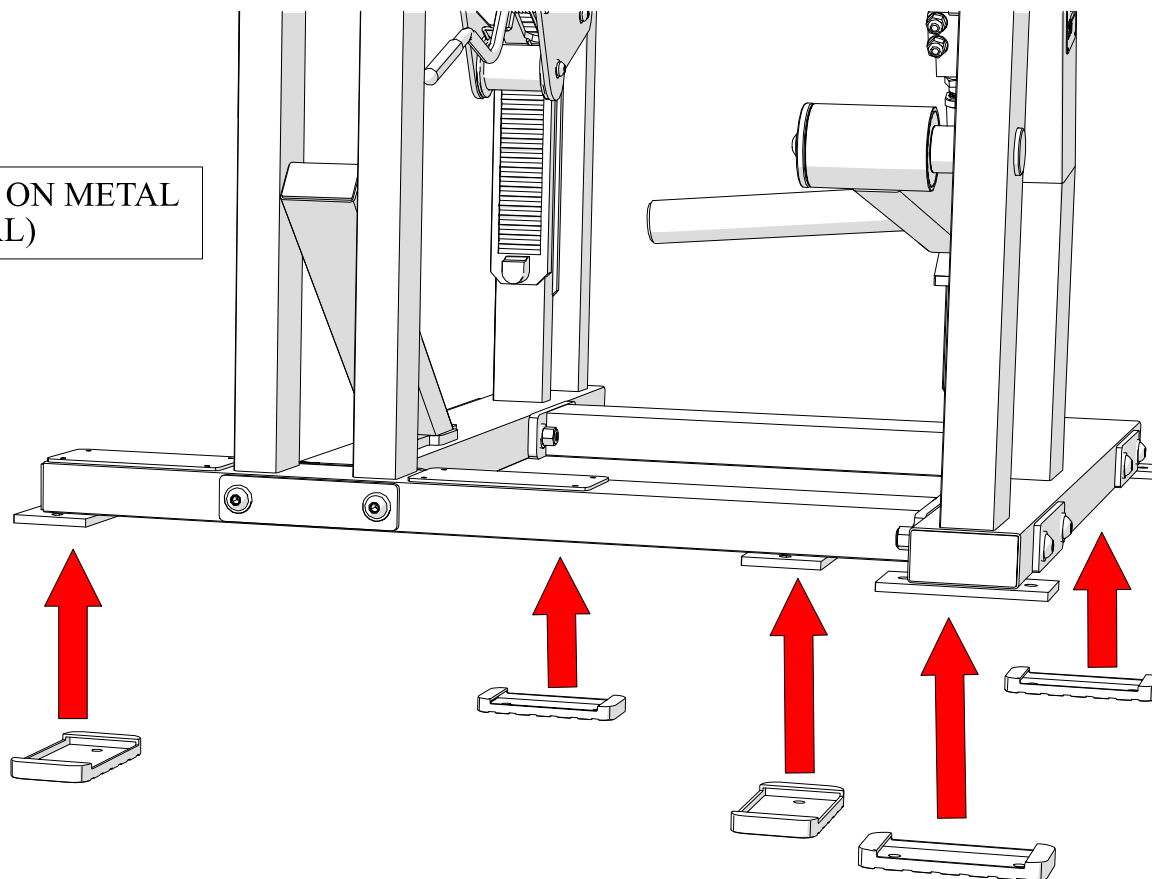

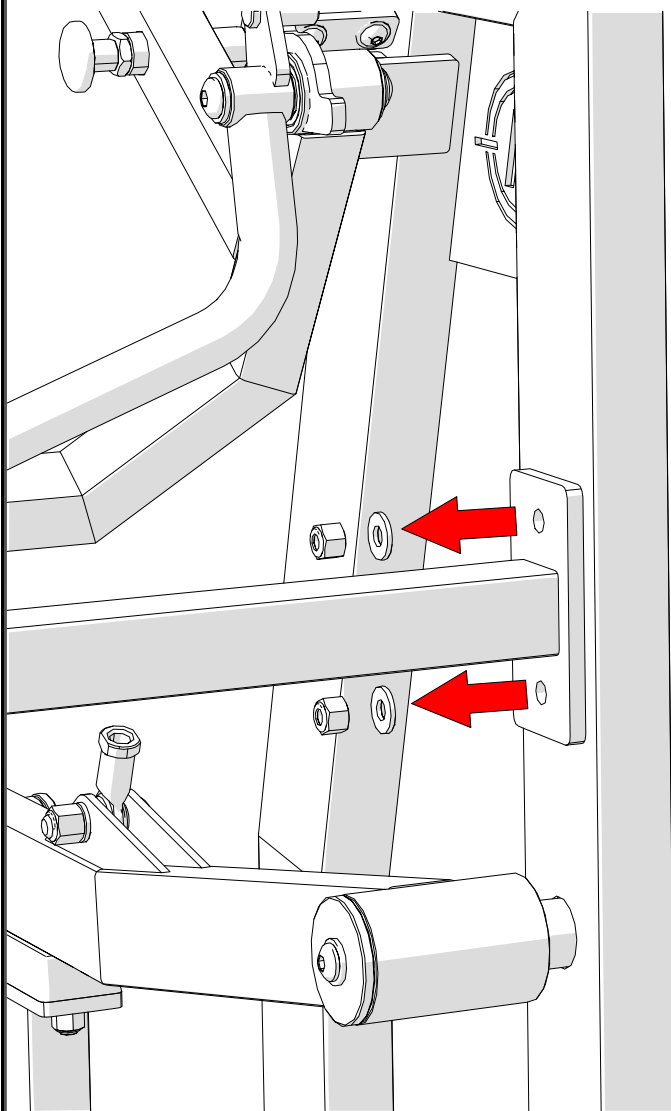


REMOVE (QTY 2) 1/2"-13 X 3.25" BUTTON
HEAD SCREWS, WASHERS, AND NYLOCK
NUTS




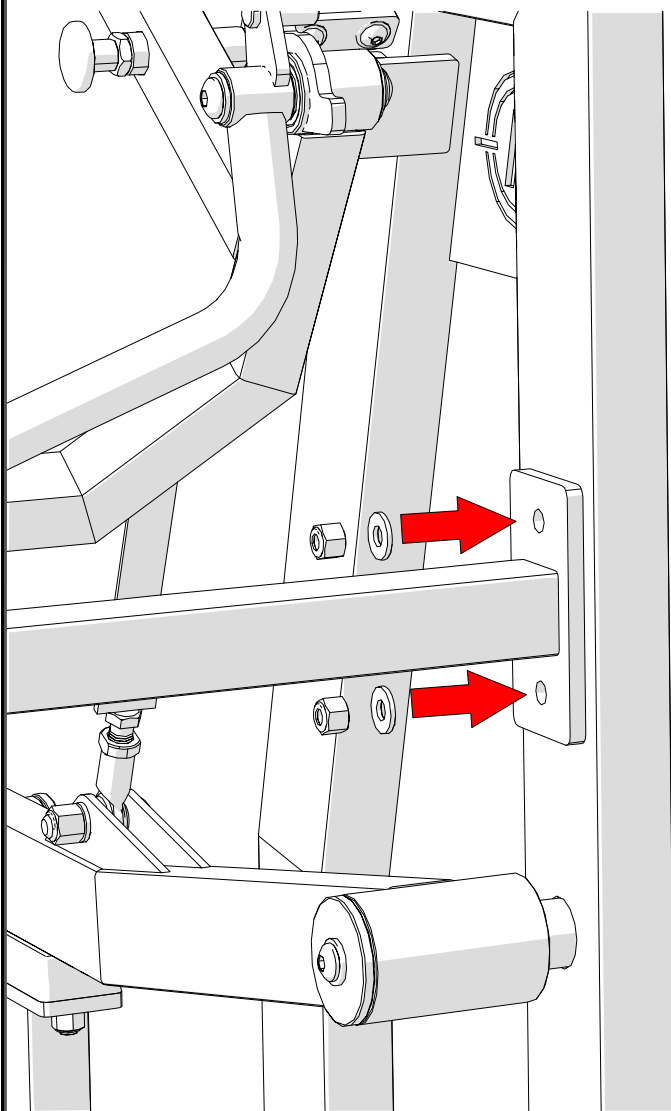


POSITION WEIGHT STORAGE PEG AS SHOWN
AND INSTALL USING HARDWARE PREVIOUSLY
REMOVED.


NOTE: WEIGHT HOURN SHOULD ANGLE UP
SLIGHTLY. BE CAREFUL NOT TO INSTALL
UPSIDE-DOWN

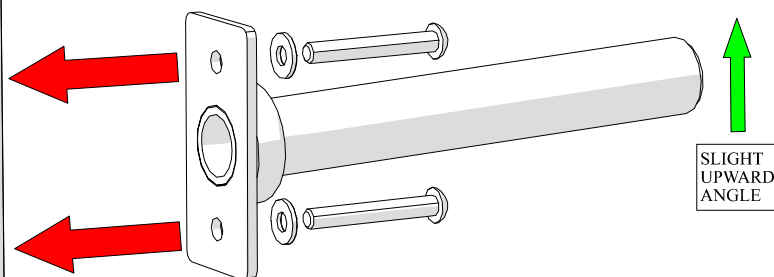

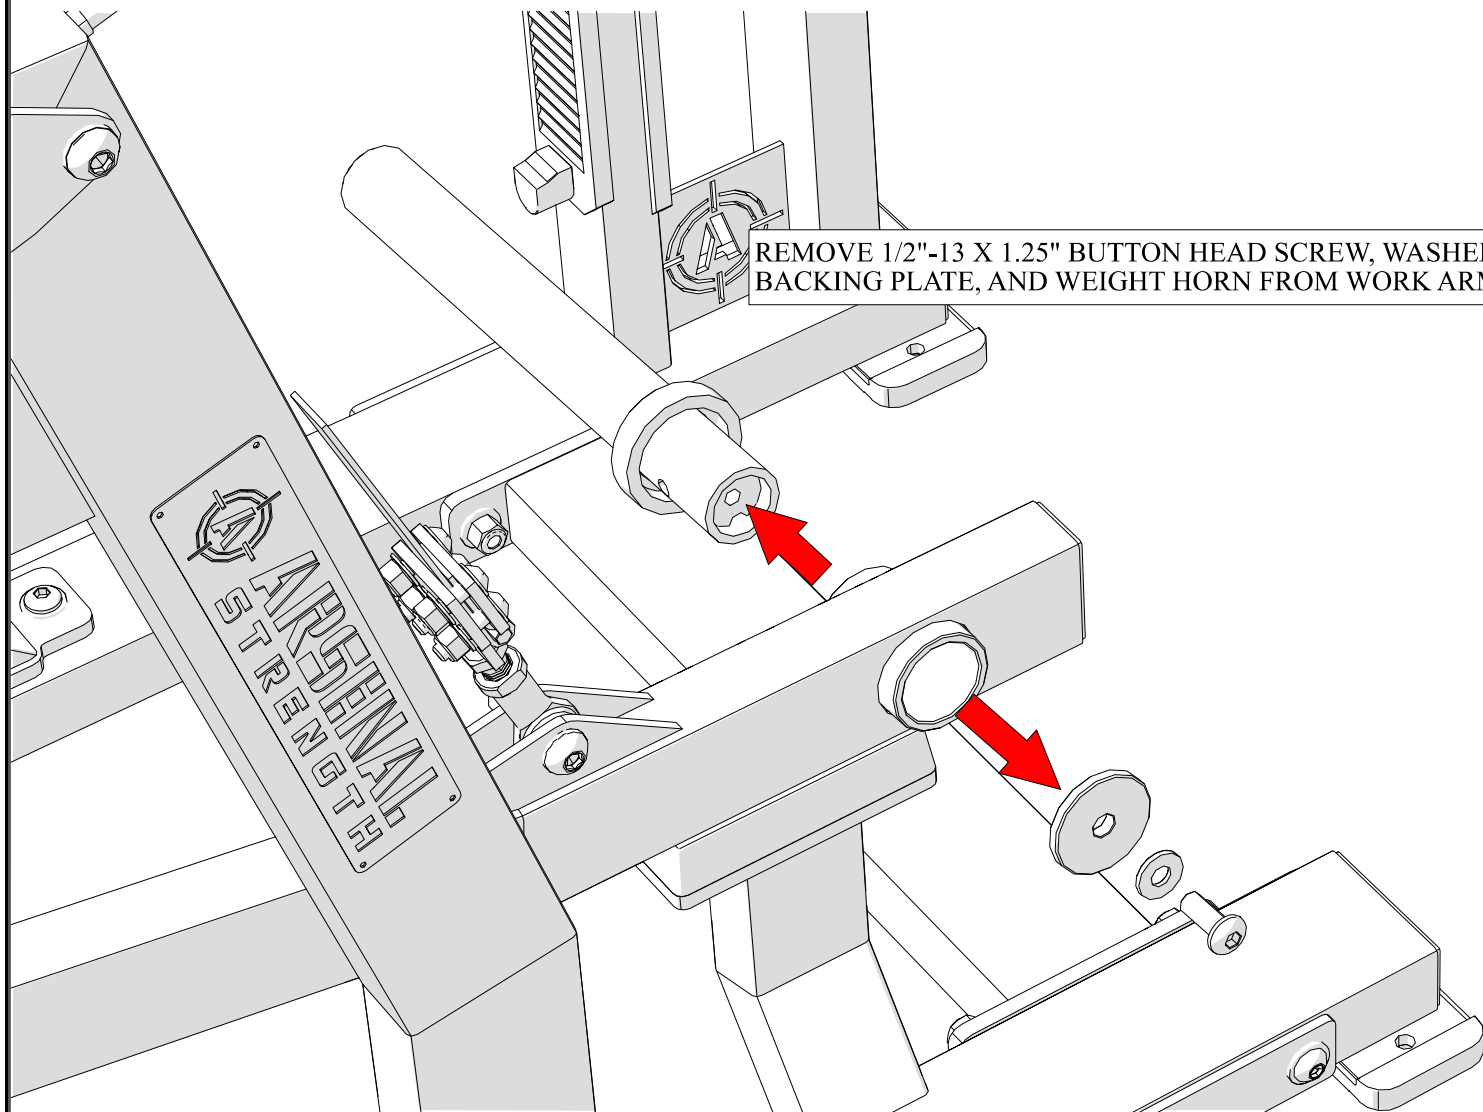

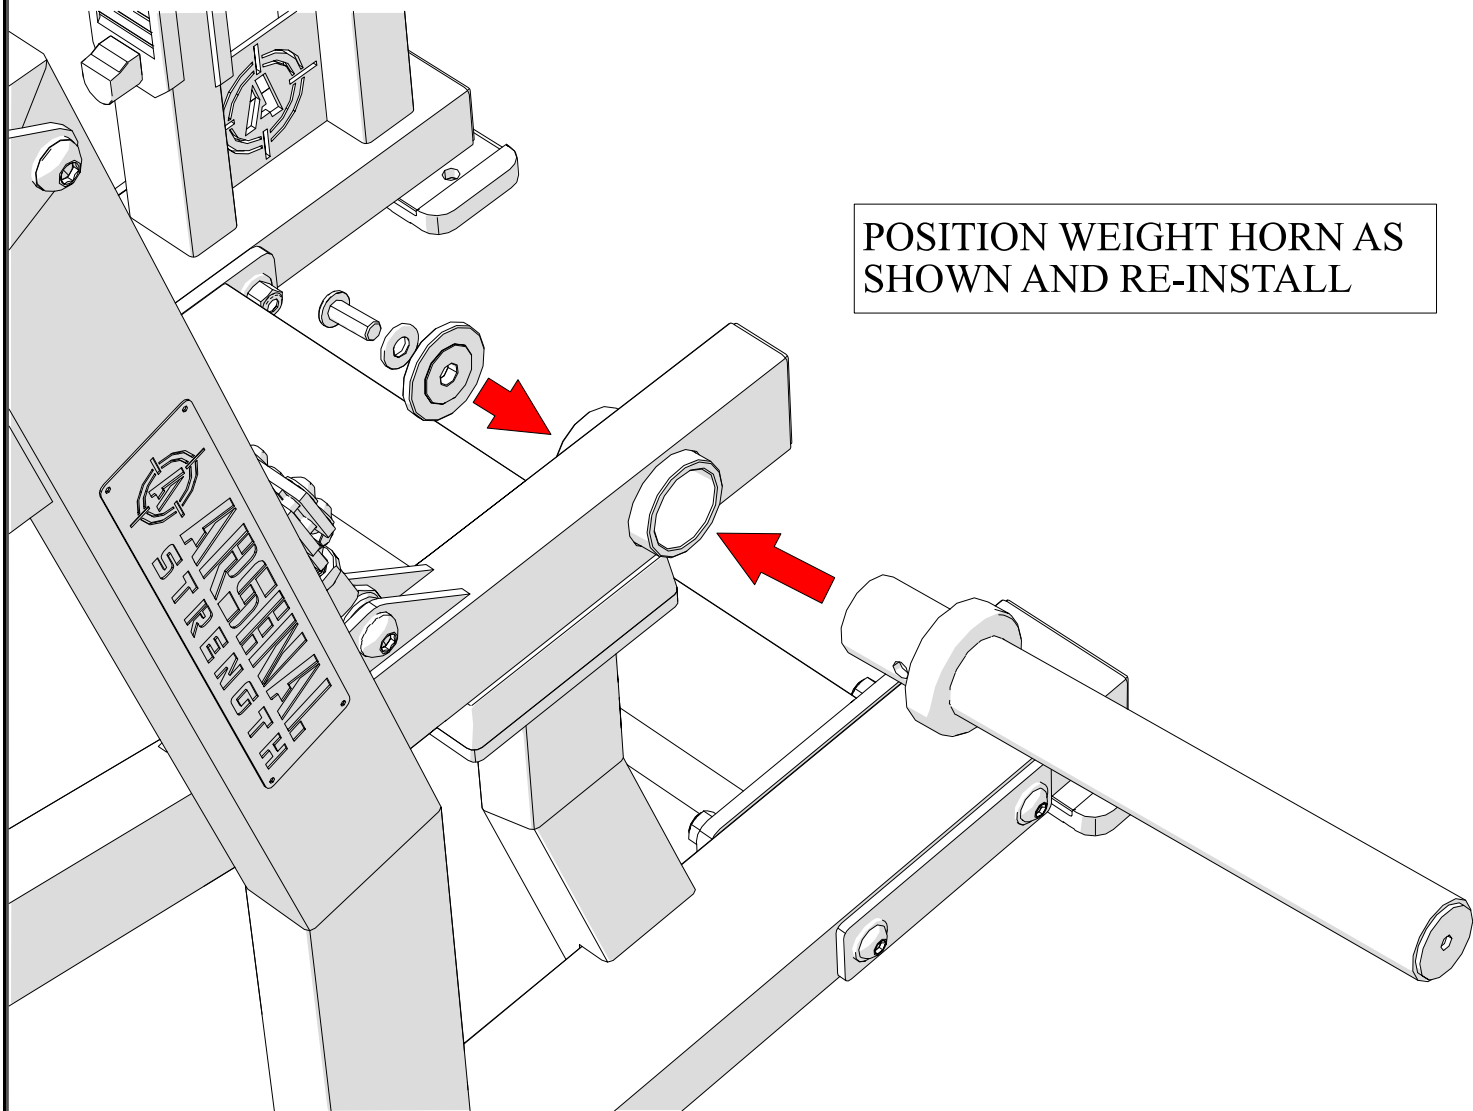

POSITION WEIGHT HORN AS
SHOWN AND RE-INSTALL

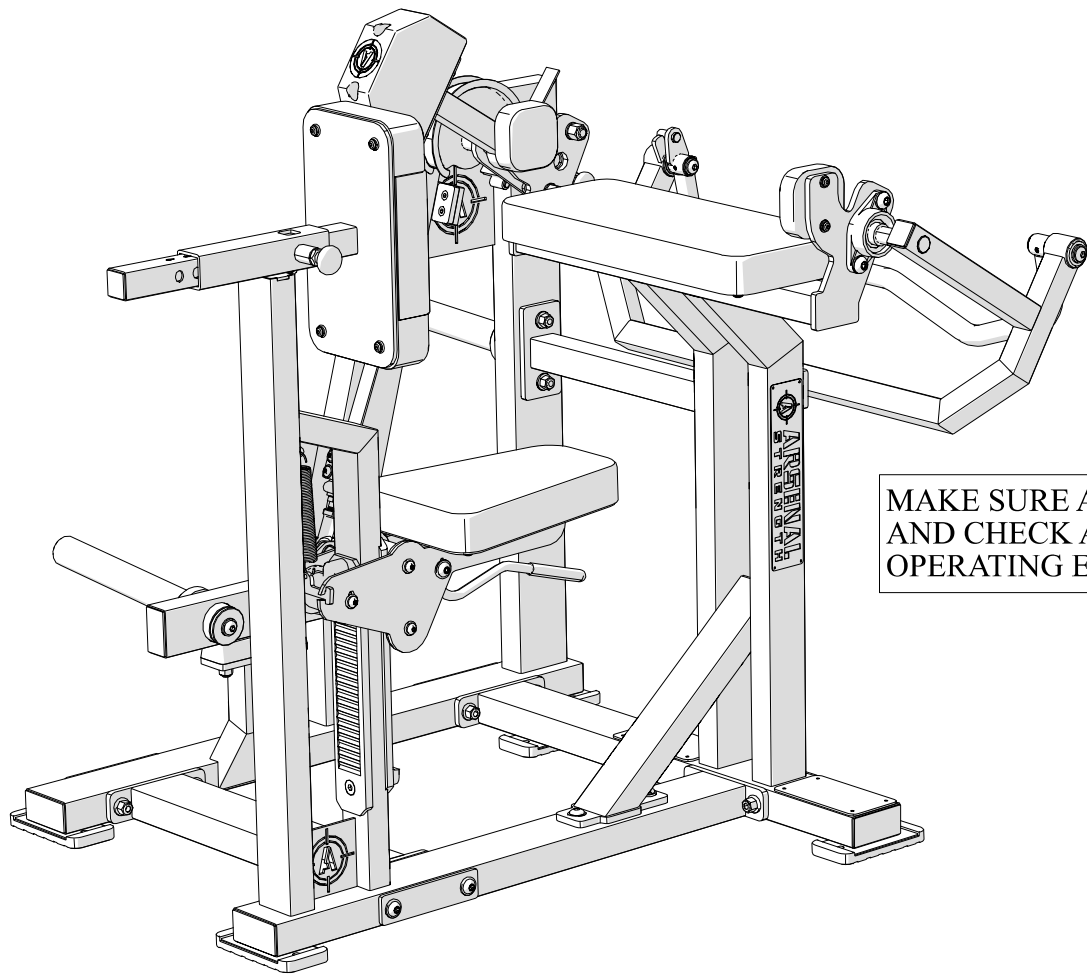

MAKE SURE ALL HARDWARE IS TIGHT
AND CHECK ALL FUNCTIONS BEFORE
OPERATING EQUIPMENT