



8008 DIVERGING ROW


FINAL ASSEMBLY GUIDE

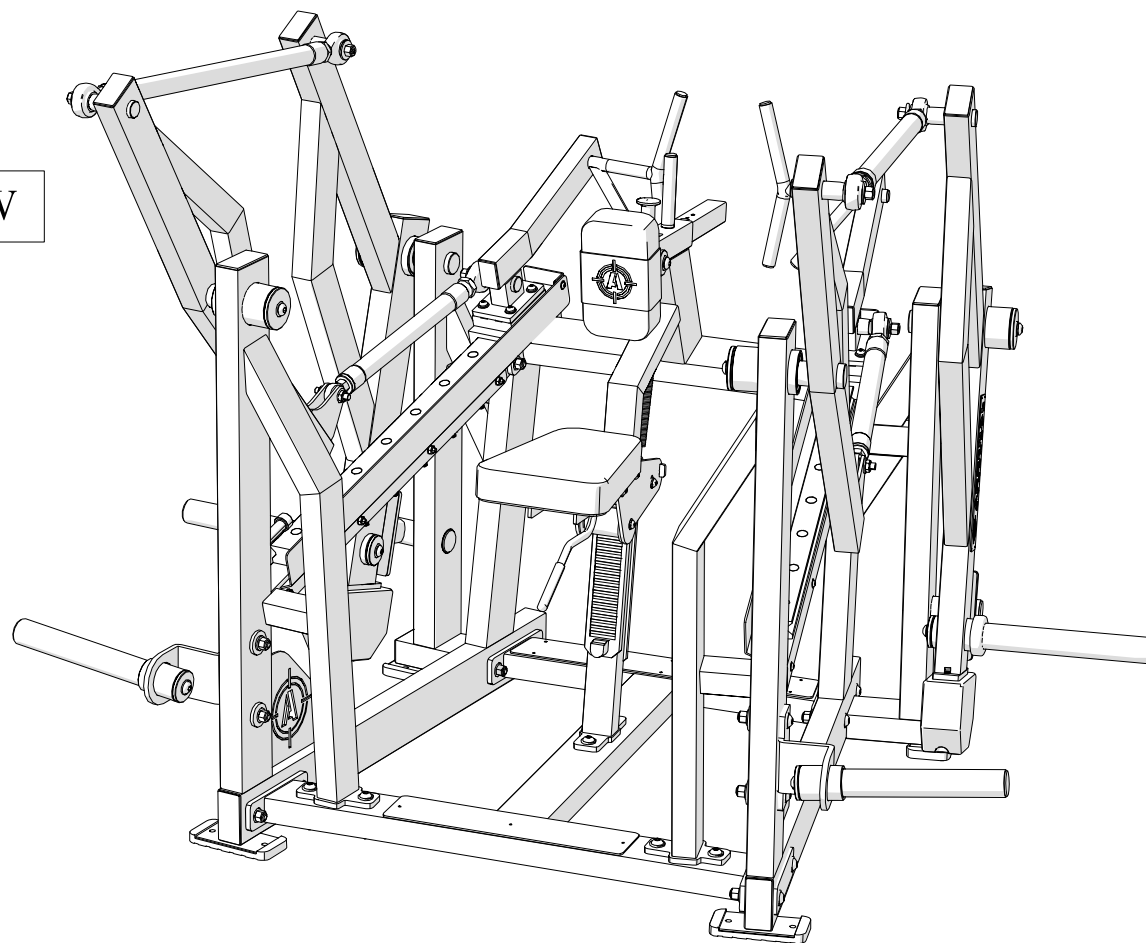


INSTALL RUBBER FEET ON
METAL FRAME PADS
(OPTIONAL)

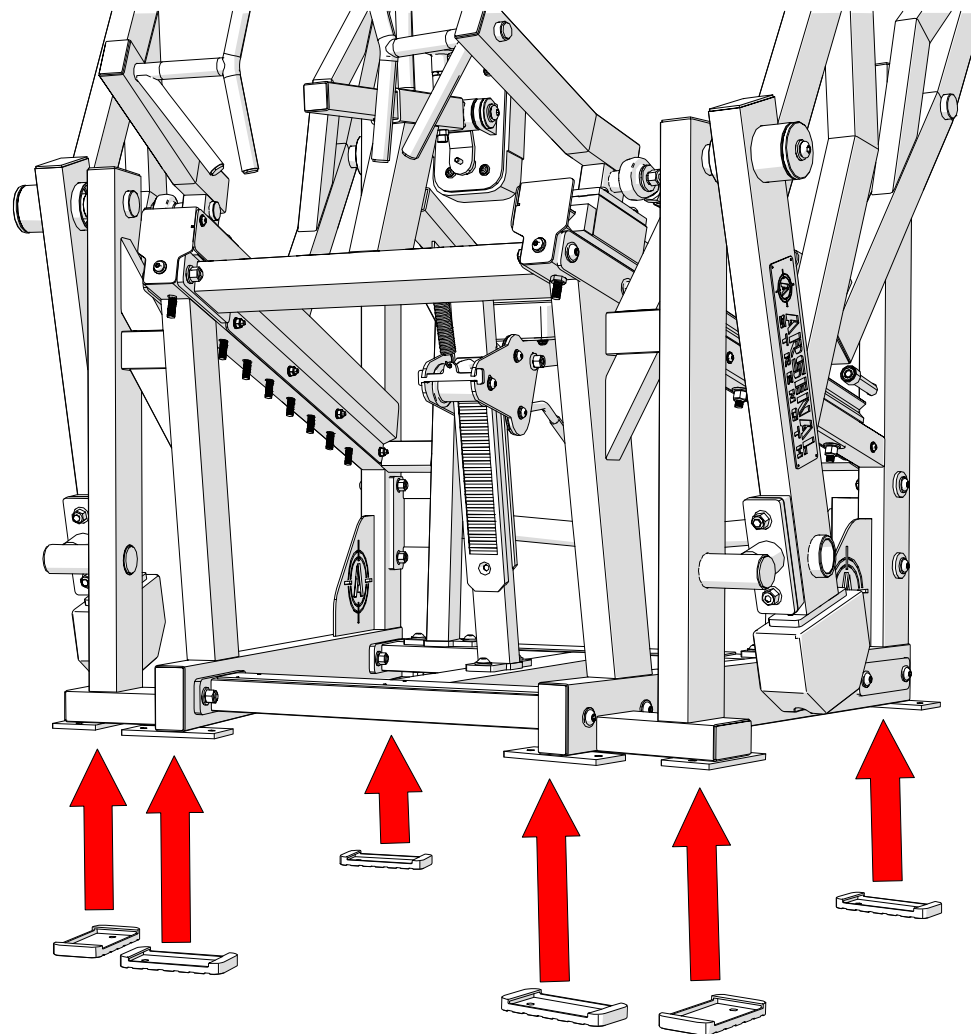


POSITION WEIGHT HORN AS SHOWN ON
WORK ARM AND SECURE WITH 1/2"-13 X 1.75"
BUTTON HEAD SCREW, LOCK WASHER,
FLAT WASHER, AND BACKING PLATE

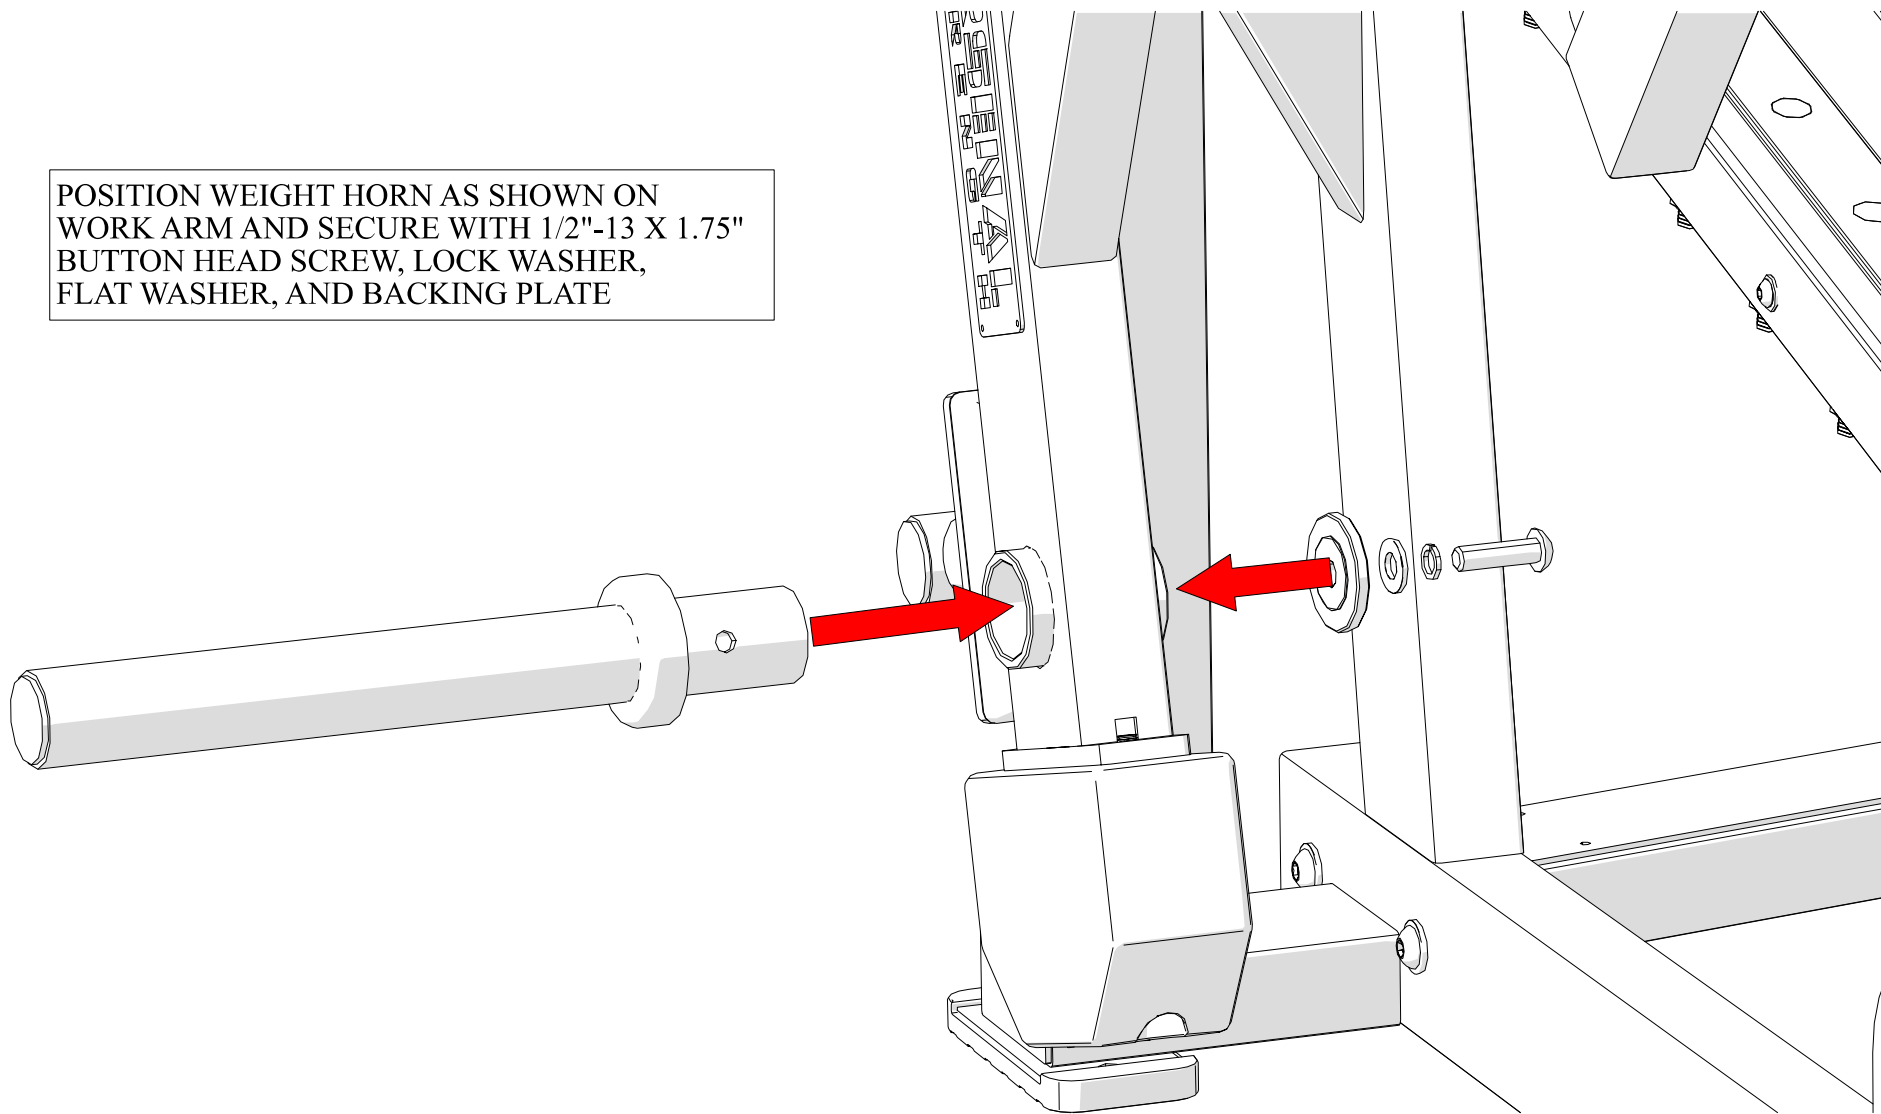


REPEAT WEIGHT HORN INSTALLATION
ON SECOND WORK ARM

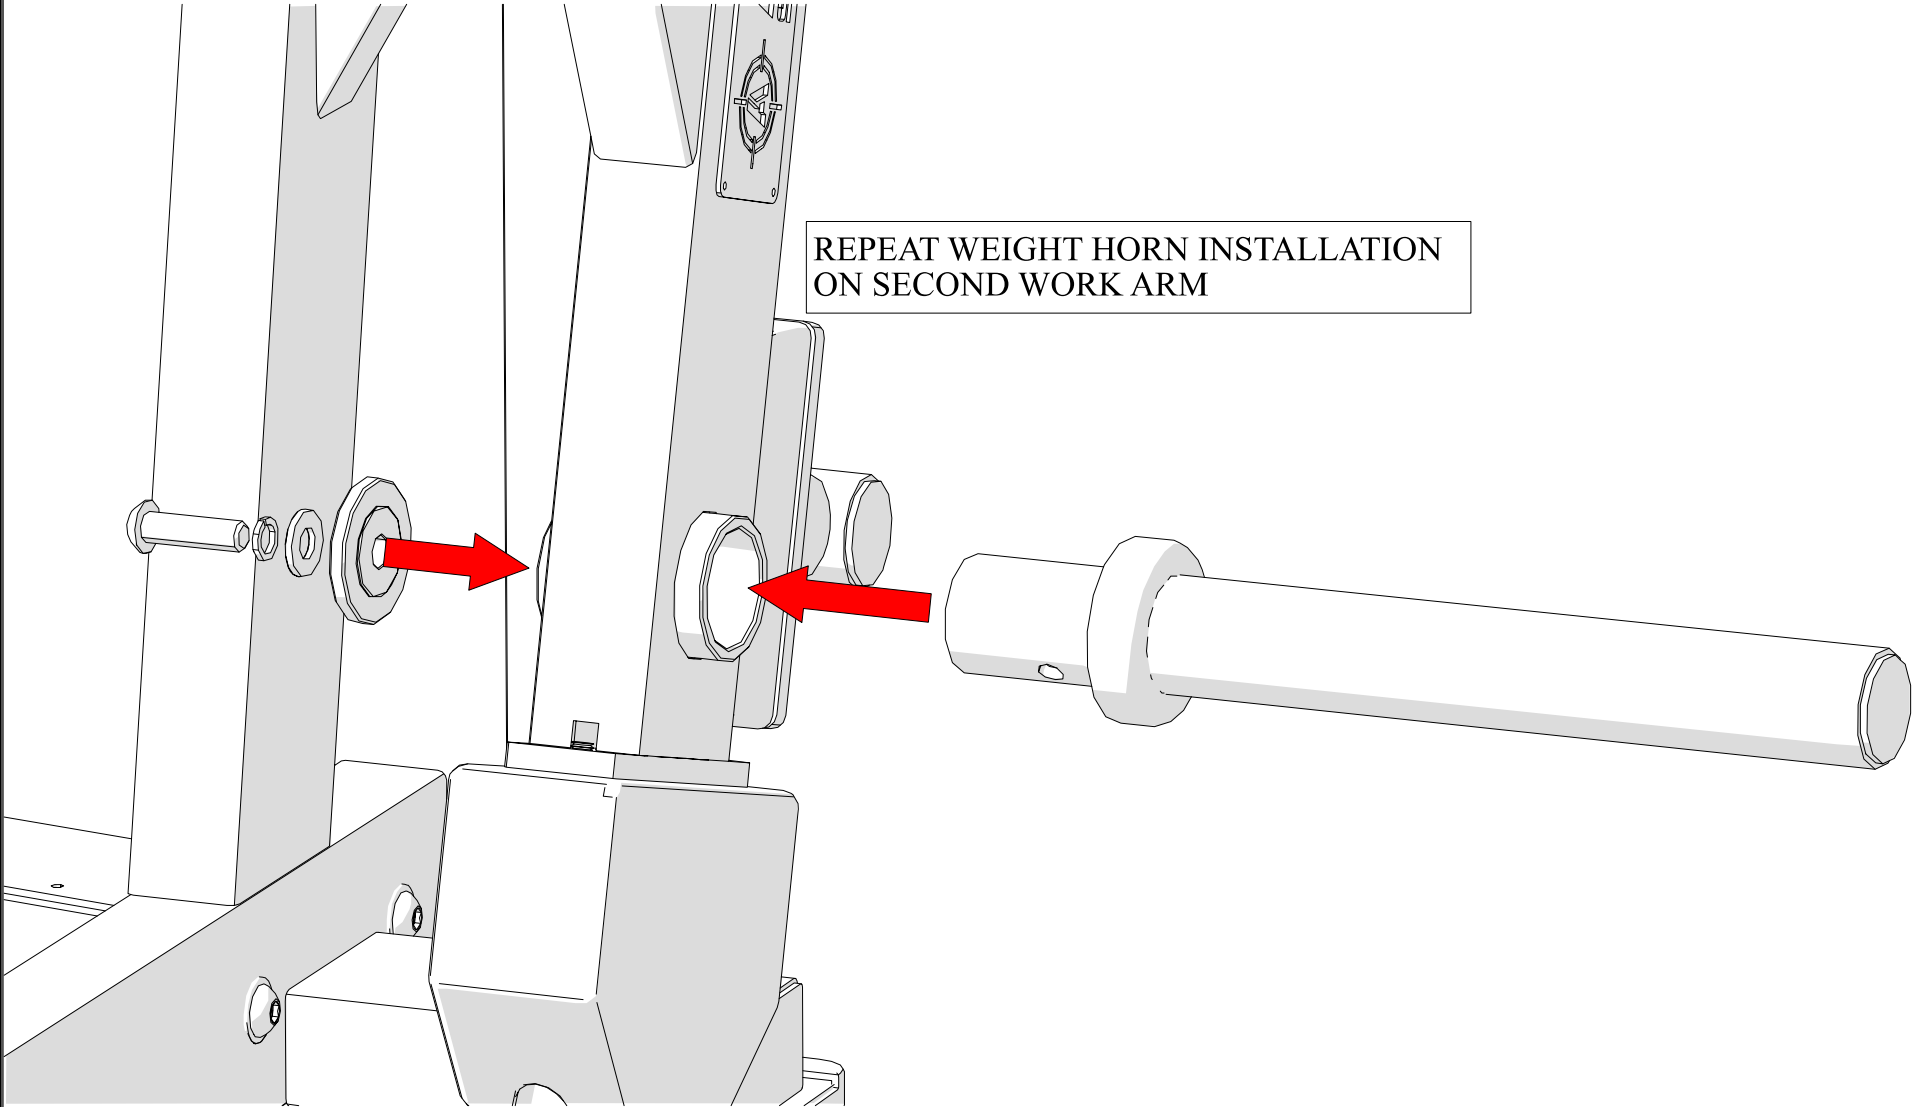


AT REAR OF MACHINE, REMOVE (QTY 2) BUTTON HEAD SCREWS,
FLAT WASHERS, BACKING PLATE WASHERS, AND WEIGHT
STORAGE PEGS.

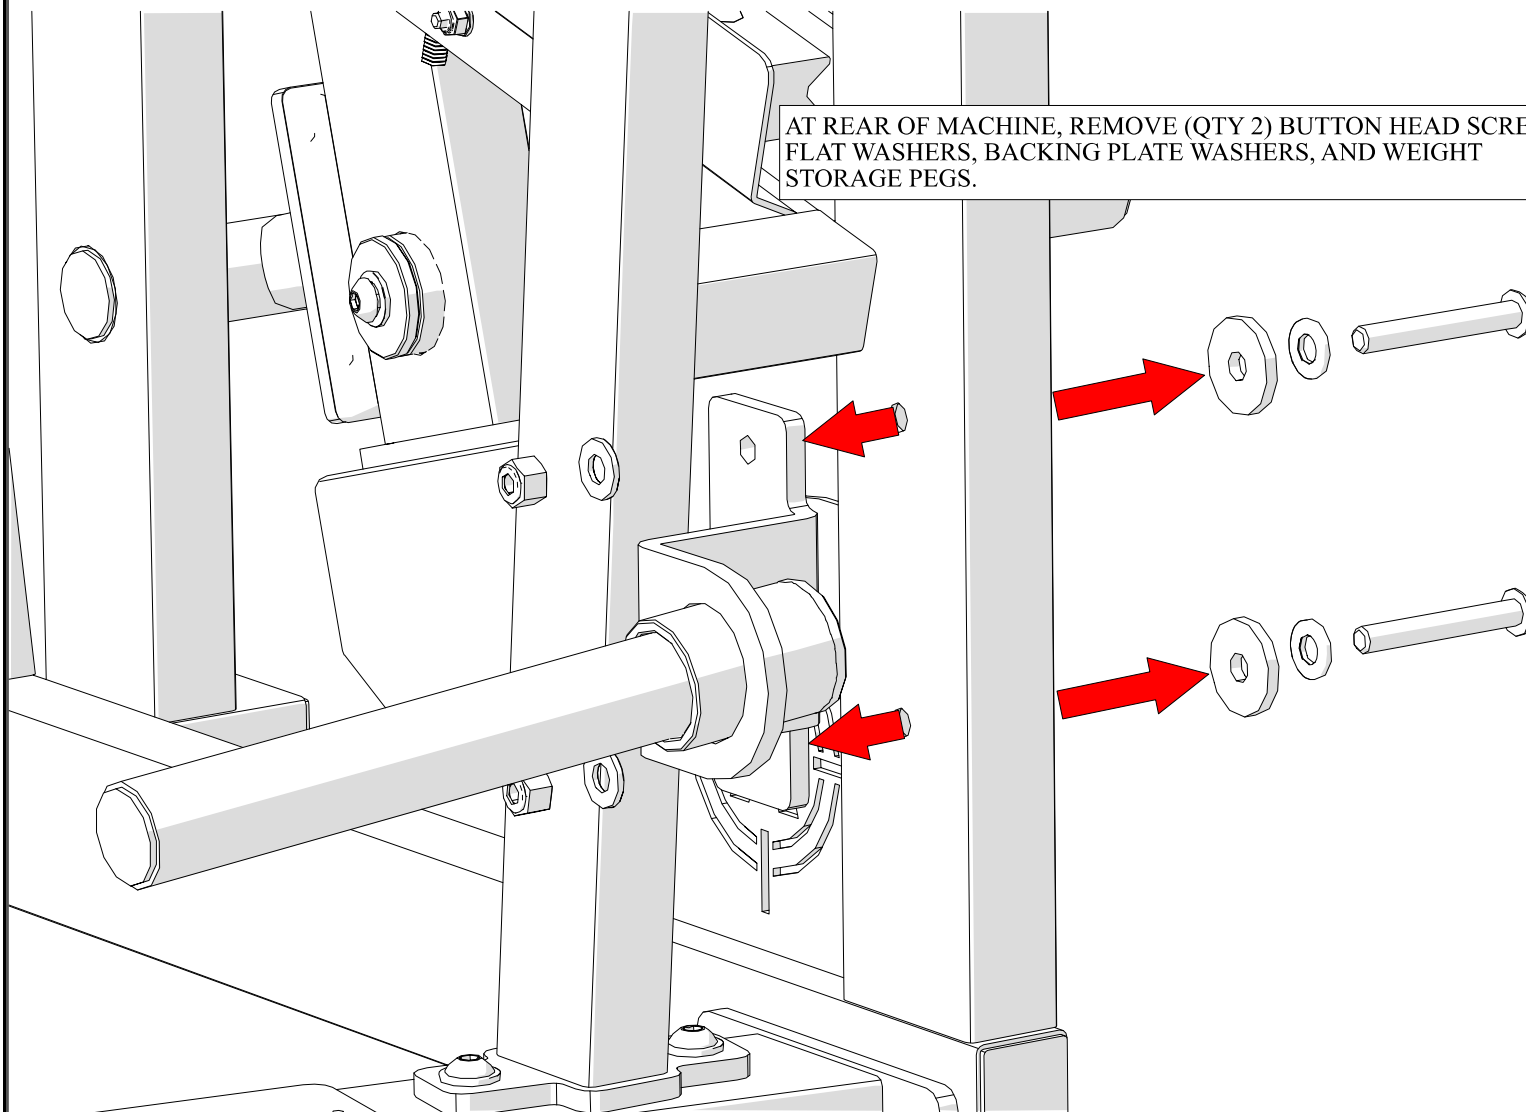

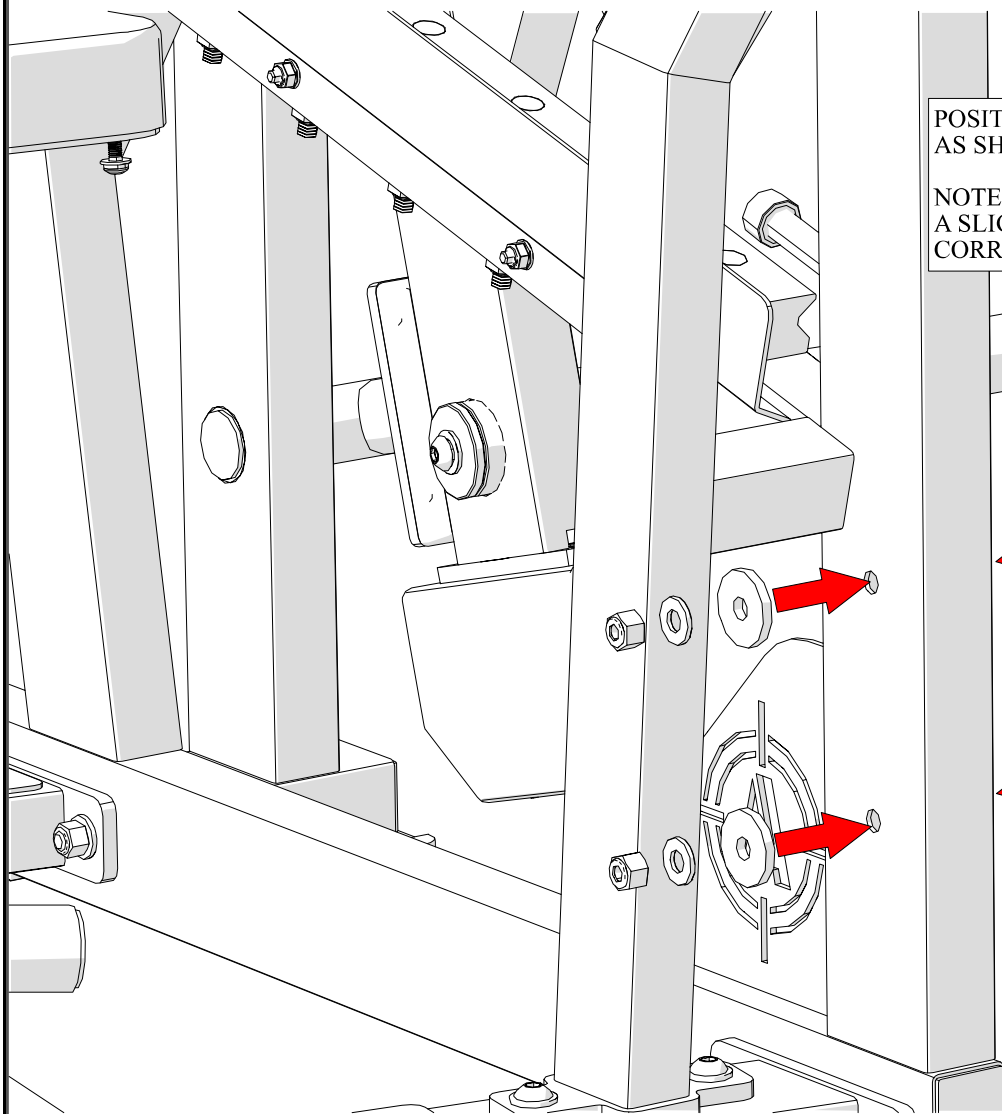


POSITION WEIGHT STORAGE PEG ASSEMBLY
AS SHOWN AND RE-INSTALL.

NOTE: WEIGHT STORAGE PEGS SHOULD HAVE
A SLIGHT UPWARD ANGLE WHEN INSTALLED
CORRECTLY.

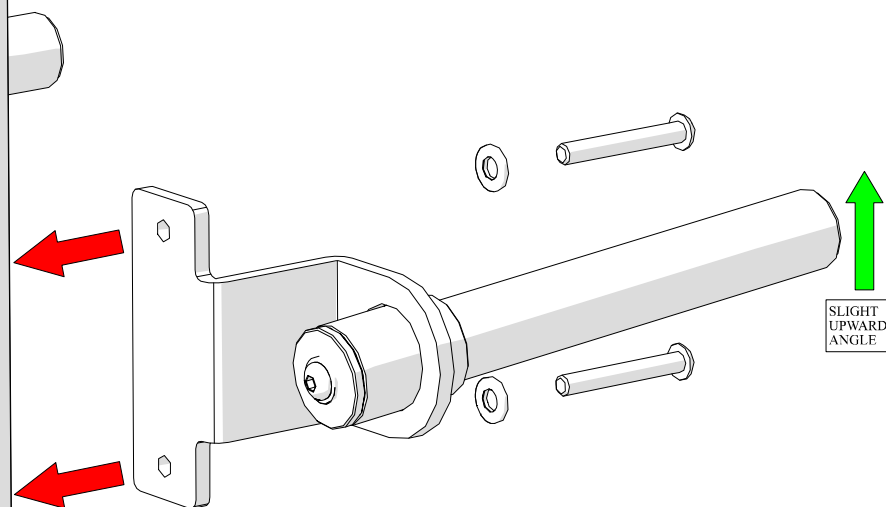

REPEAT PROCESS ON OPPOSITE
SIDE OF FRAME

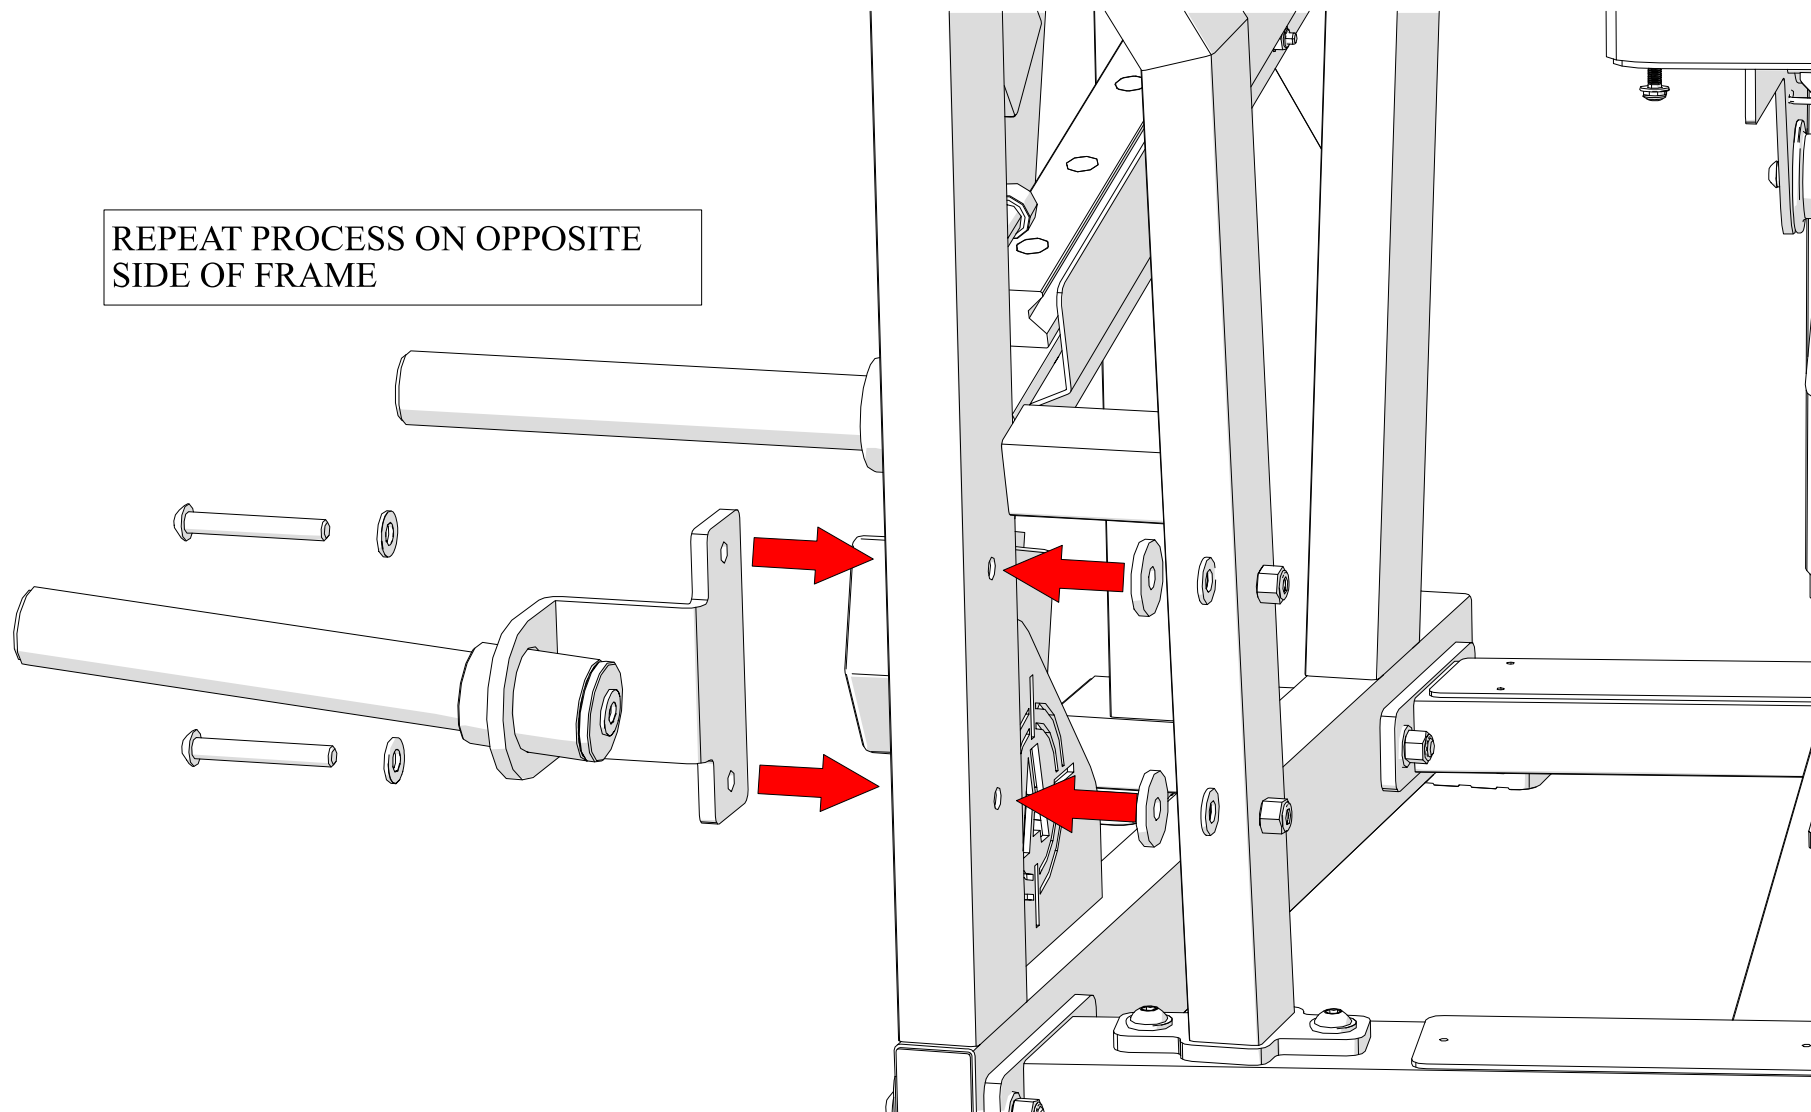

MAKE SURE ALL HARDWARE IS TIGHT
AND TEST ALL FUNCTIONS BEFORE
OPERATING EQUIPMENT

