

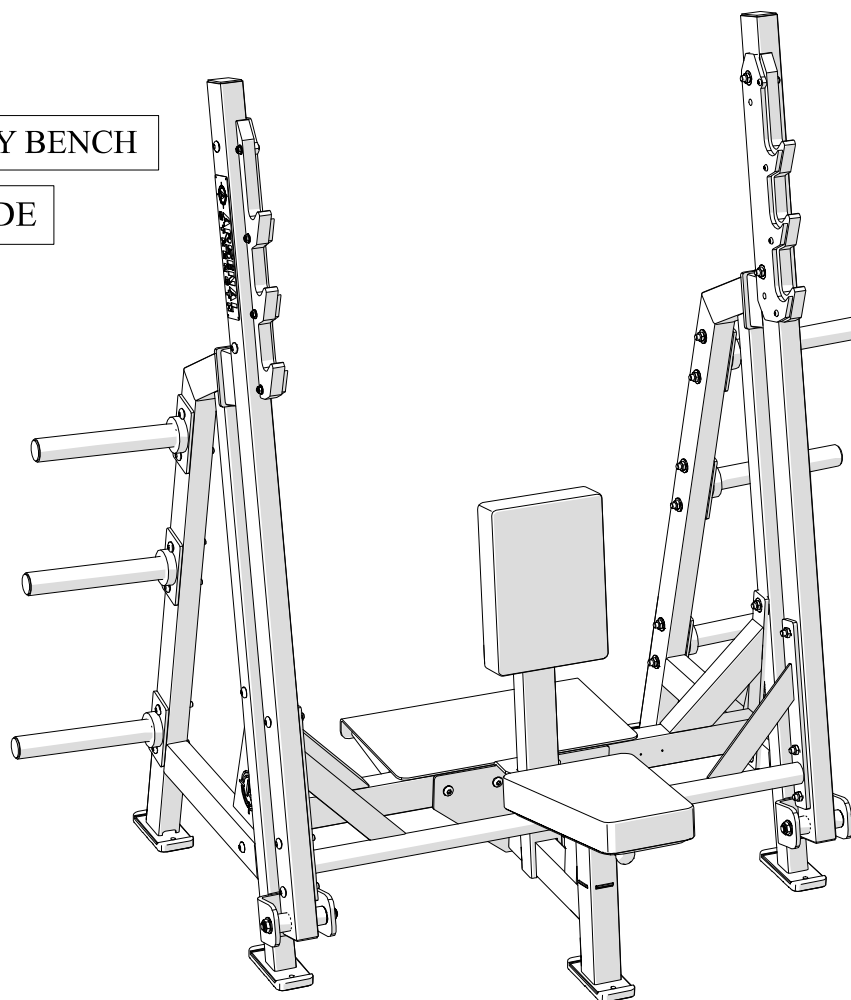


9064 ALPHA OLYMPIC MILITARY BENCH


FINAL ASSEMBLY GUIDE

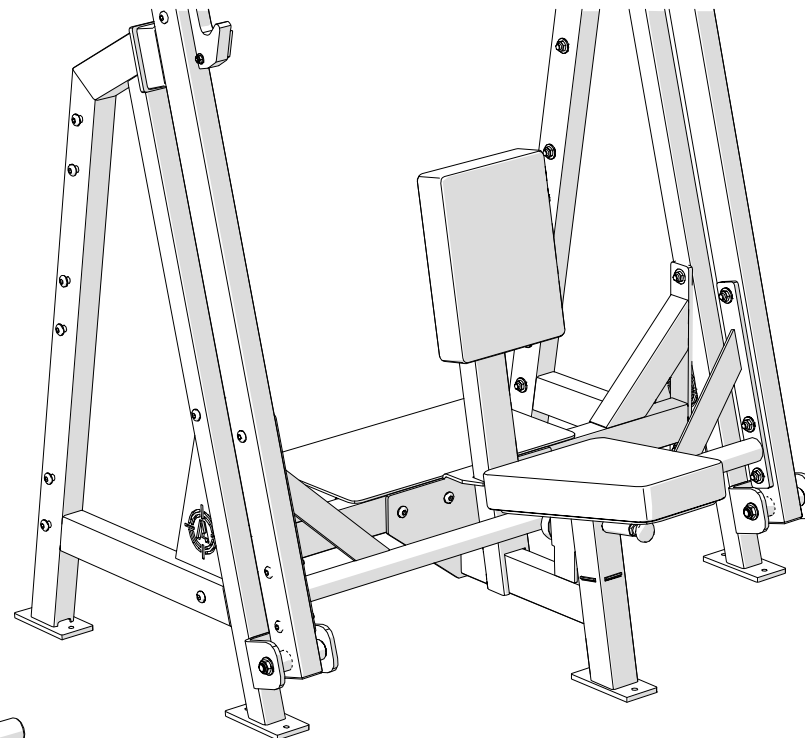


UNWRAP AND SET ASIDE ALL LOOSE PARTS

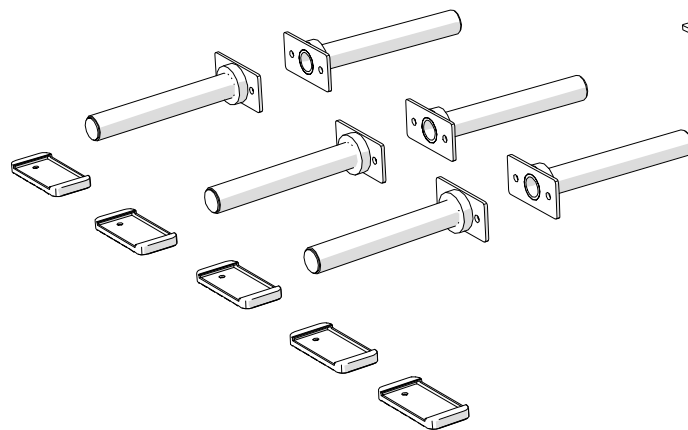


INSTALL RUBBER FEET ON FRAME
PADS (IF DESIRED)

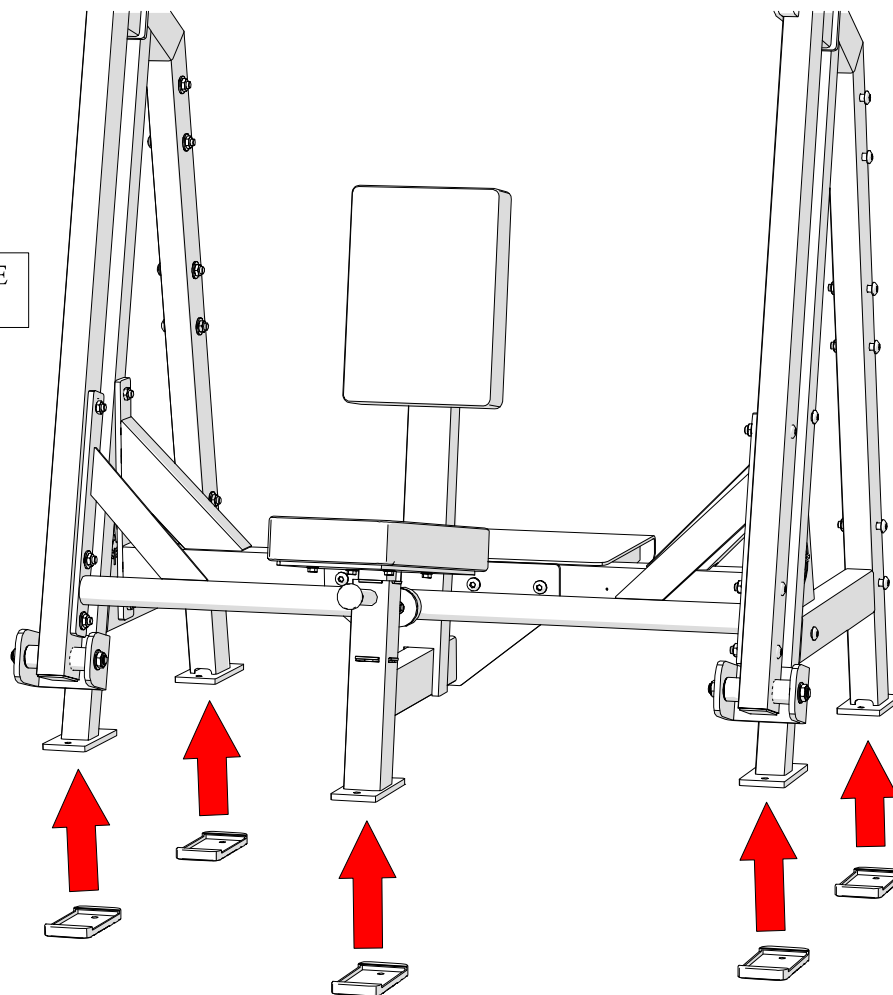

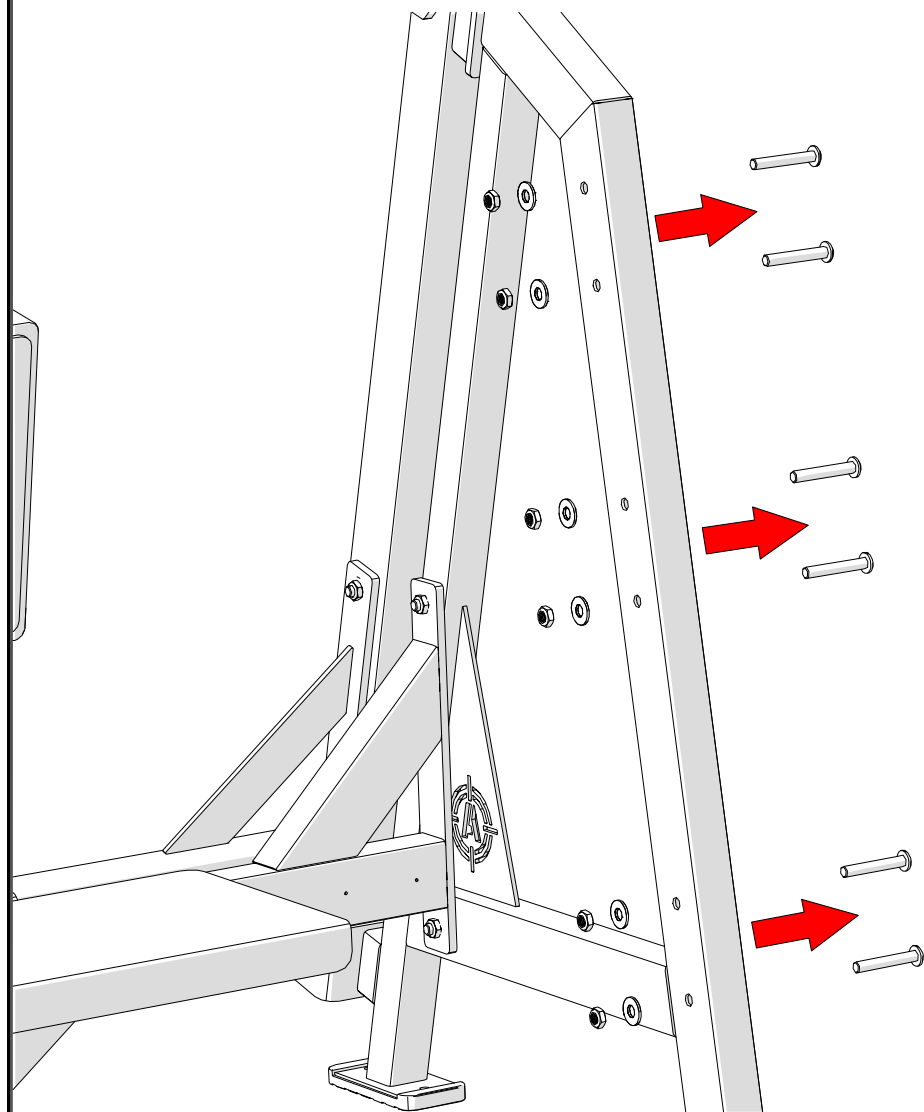

REMOVE (QTY 6) 1/2"-13 X 3"L BUTTON
HEAD SCREWS, WASHERS, AND NYLOCK
NUTS FROM REAR FRAME UPRIGHT

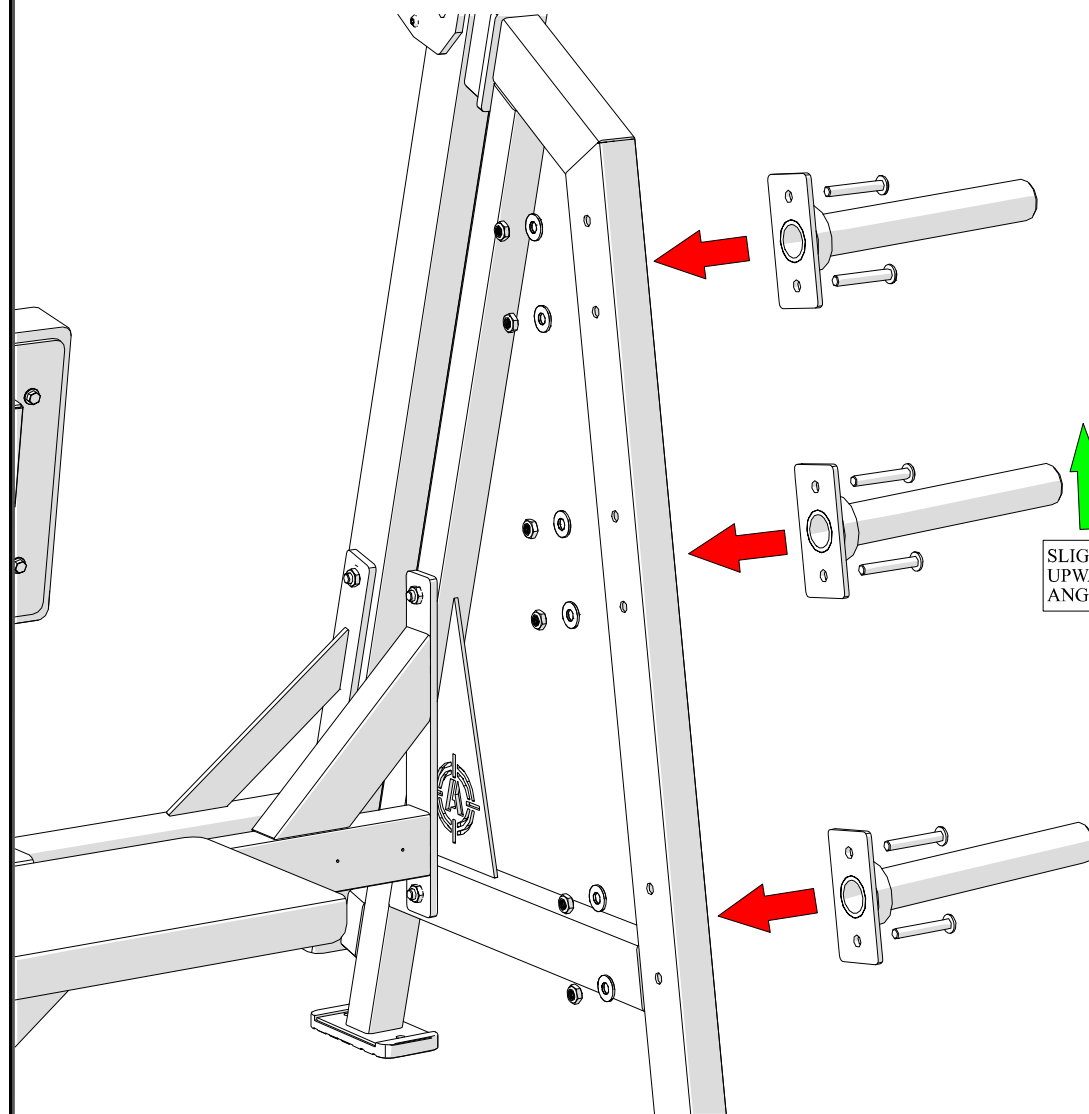


POSITION WEIGHT STORAGE HORNS
AS SHOWN AND SECURE WITH SCREWS,
WASHERS, AND NYLOCK NUTS PREVIOUSLY
REMOVED.

NOTE: WEIGHT HORNS WILL HAVE AN UPWARD
TILT WHEN INSTALLED CORRECTLY.
BE CAREFUL NOT TO INSTALL UPSIDE-DOWN

SLIGHT
UPWARD
ANGLE

REPEAT WEIGHT HORN INSTALLATION
ON OPPOSITE SIDE

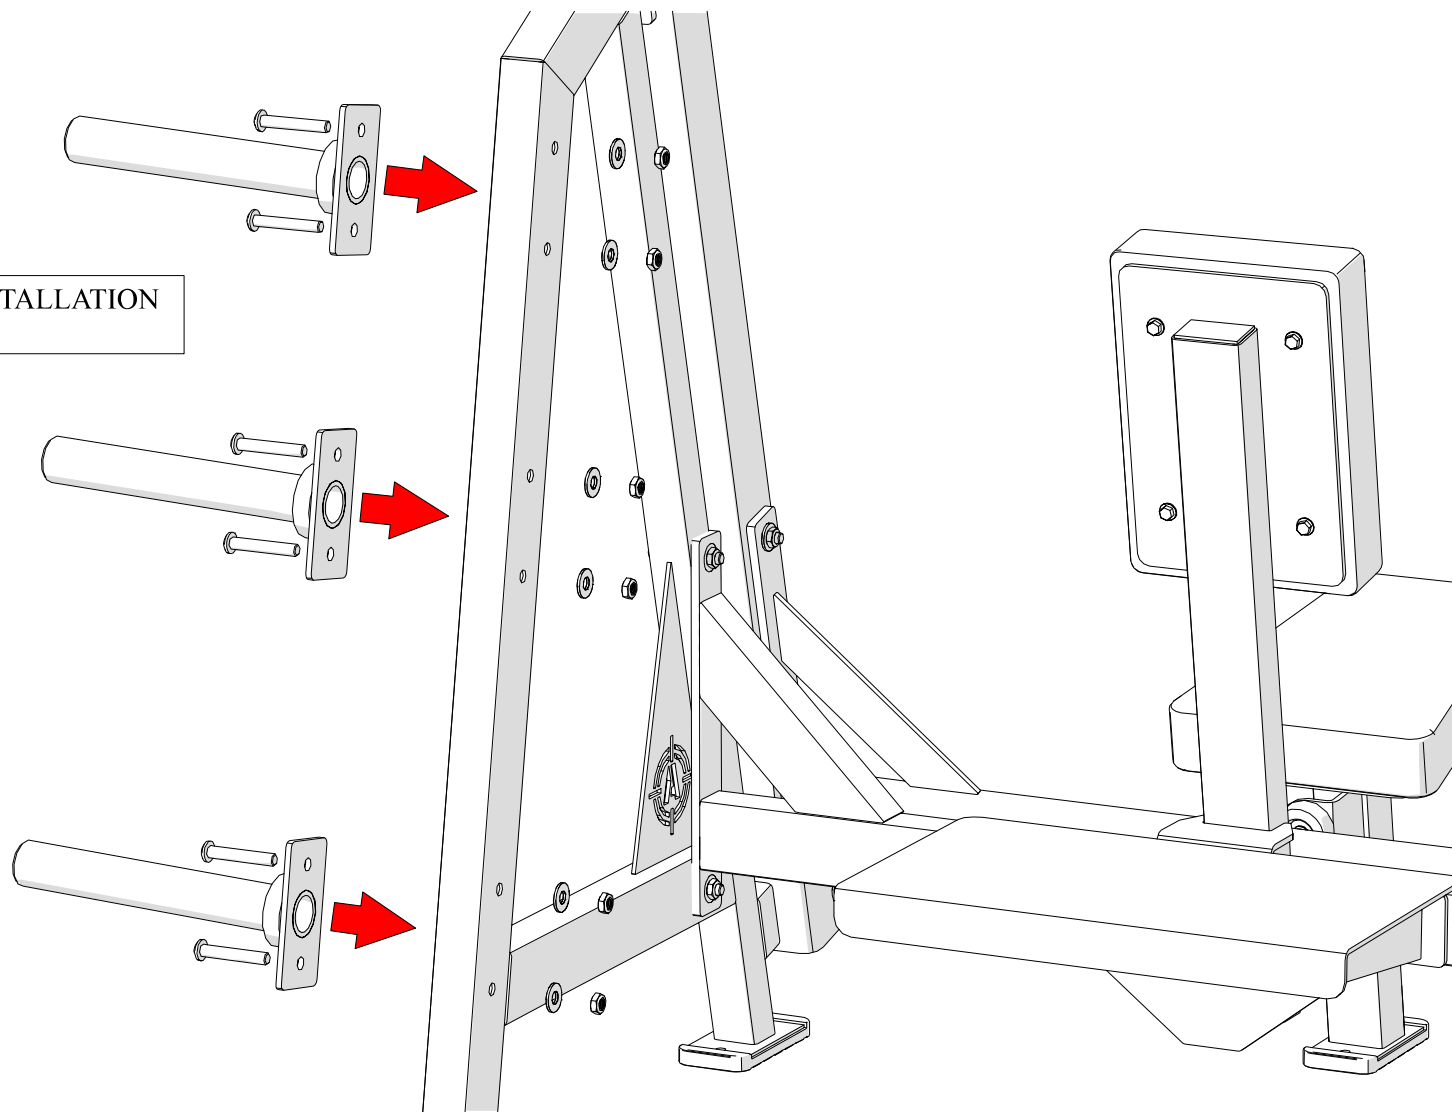

MAKE SURE ALL HARDWARE IS TIGHT AND
TEST ALL FUNCTIONS BEFORE OPERATING
EQUIPMENT

